



Requires 2 "C" batteries (not included).

NOTE: ADULT SHOULD REMOVE & DISCARD PLASTIC FASTENERS.


CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Always remove weak or dead batteries from the product.

Drop 'n Go Choo-Choo™

To install batteries:

Loosen screw in battery compartment with Phillips screwdriver and remove cover (screw stays attached to cover). Insert 2 fresh "C" batteries into compartment as indicated. Replace cover and tighten screw.

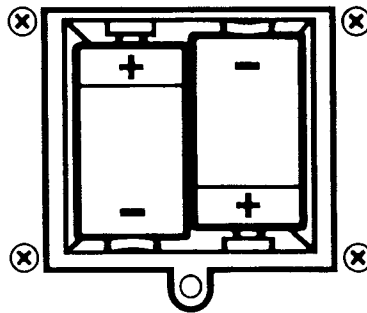

Drop Mode (Stage 1)

With switch in this position, the train's wheels are free-rolling (not motorized). Drop balls into the stack to activate the engine sound and pop-out feature.

Go Mode (Stage 2)


With switch in this position, the train will move continuously and automatically. (Balls are not required to make train move).

Ball Drop - Go Mode (Stage 3)

With switch in this position, the train will move only when a ball is dropped into the stack. The more balls that are dropped into the stack, the farther the train will move (about 3 feet per ball).


To operate train:

Use switch on underside of train for the three stages of operation. Please note that in each stage, when a ball is dropped into the stack, it will pop out the back.

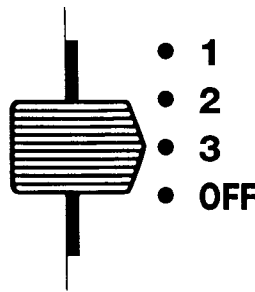

To steer:

To adjust steering, simply turn front wheel to direction you would like train to travel. When adjusted for a left or right turn, train will move in a circle if run continuously.

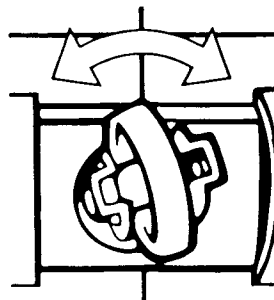

Off

Turn switch to OFF position when not in use. Balls can be stored in the stack when switch is in this position.



Product and colors may vary.

© 2001 Hasbro, Inc., Pawtucket, Rhode Island 02862 USA. All Rights Reserved.

® & TM denote U.S. Pat. & TM Office.

MADE IN CHINA

P/N 47300800