



Easy Breezy Tent™

Questions? Call: 1-800-PLAYSKL™
Ages 3-9 mos.

Thank you for purchasing the Easy Breezy Tent from Playskool. Please read and follow all instructions and caution statements concerning this product, and save this instruction sheet for further reference. For some important safety messages about placing your baby to sleep, please see the other side of this instruction sheet.




WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

This tent is made with flame resistant fabric which meets CPAI-84 specifications. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

Tent is not to be used near pool or water. Do not use tent outside in windy/stormy conditions.

Tent **SHOULD NOT** be used as the sole method of sun protection for your child. Roof of tent provides an SPF of 15. (SPF rated at time of manufacture. As with any sunscreen, the fabric roof panel will decrease in SPF effectiveness over time.) Mesh areas **DO NOT** provide sun protection. Always be sure to place tent in the shade. Never leave your child unattended. Like all partially enclosed areas, the inside of the Easy Breezy Tent will be warmer than the area outside the tent — especially if the tent is exposed to direct sunlight. Closely monitor your child and the temperature inside the tent. Change the position of the tent as necessary to avoid exposure to direct sunlight. For further information concerning sun safety for your child, please consult the enclosed guide.

OPENING THE TENT - CAUTION: TENT POPS OPEN SUDDENLY. IT SHOULD BE OPENED IN A LARGE AREA AWAY FROM CHILDREN AND BREAKABLE OBJECTS.

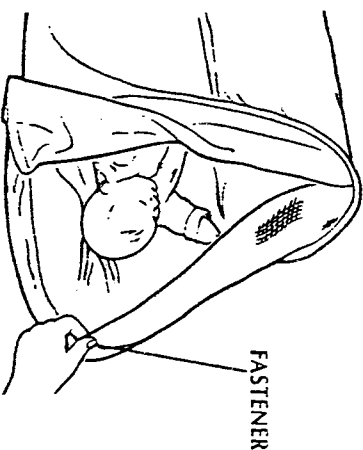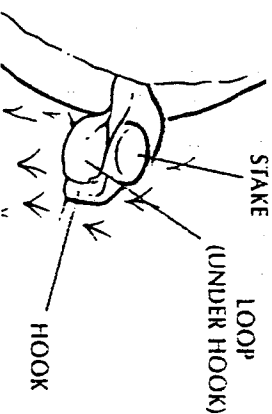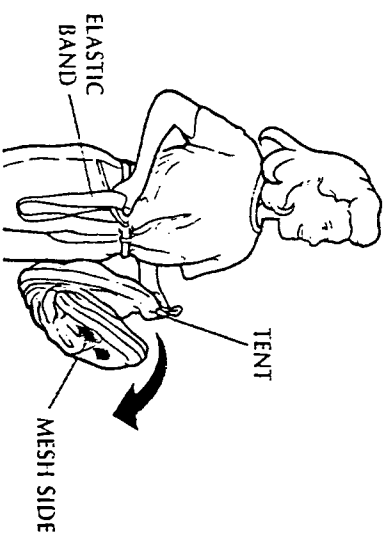

When using tent outside, be sure to place it in a shady area to protect your child from exposure to the sun. Find a level area to place tent. To secure tent to the ground, place a stake inside a tent loop (located at either end of the tent), then push stake all the way

aside for now. With the mesh side facing away from you, grasp the ring that has the loop as shown, hold the tent away from you, then remove the elastic band to make the tent pop open. (Place elastic band in storage bag, and set aside -- away from children -- for use when folding tent.)

into the ground so that hook on stake traps loop as shown. Repeat for other stake and loop.

CAUTION: Always use stakes when using tent outside. To avoid tripping hazard, be sure stakes are placed completely into the ground, with no part of the stake protruding from ground.


Open the tent's entry flaps and place baby in the center of the tent (under roof) for best protection from the sun. (See enclosed Sun Safety Guide for further information on exposure to the sun.) Seal entry flaps by pressing fasteners together at areas around edge of tent as shown.

CAUTION: Always keep child in view, and never leave baby unattended.


FOLDING THE TENT

After using the tent, unfasten flaps, remove your child and place him/her in a secure area away from tent. Pull up and remove stakes from the ground and place them in the storage bag.


The Easy Breezy Tent features compact fold-up for storage or travel. At first, you may have some difficulty folding the tent, but with a little practice, you'll be able to fold it within seconds each time. Just follow these instructions:

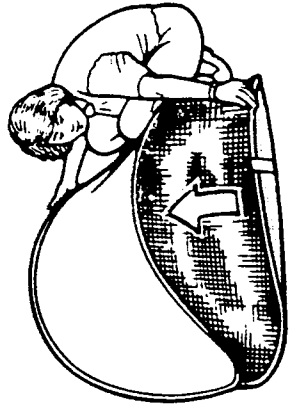


1. Place the tent lengthwise in front of you as shown, with the front opening to your right and the back netting to your left.

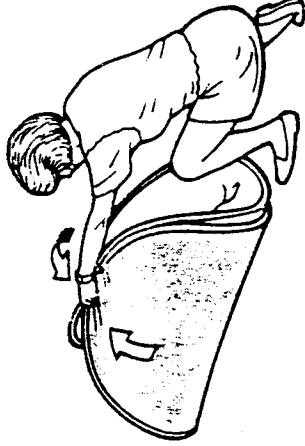


2. Grab both ends and fold the tent in half, into a "taco shell" shape as shown.

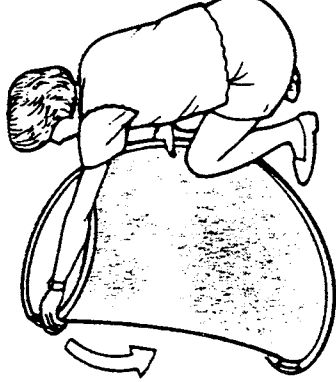


3. While holding it closed with your right hand, flip the "taco shell" and lay the end on the ground as shown. (The bottom will form a circle; that will be your base for folding.) With your left hand, grab the top end where the nylon opens to allow you to grasp the rings.

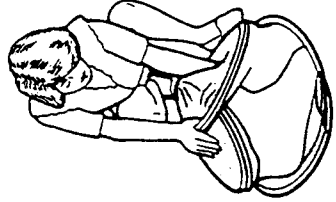


5. You will now be holding 2 rings in your right hand as shown, with a third ring on the floor. Gently let go of ring on right, fold left ring over right ring, then sandwich them together and push them towards the floor to form one flat disc shape.

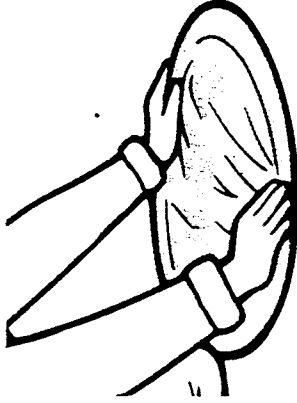

6. The tent will fold flat into a circle as shown.

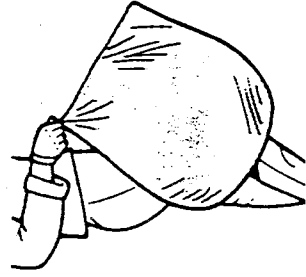

7. Immediately after folding, slide the elastic band around the tent to secure it. Now slip it into the storage case, and carry it or store it anywhere!

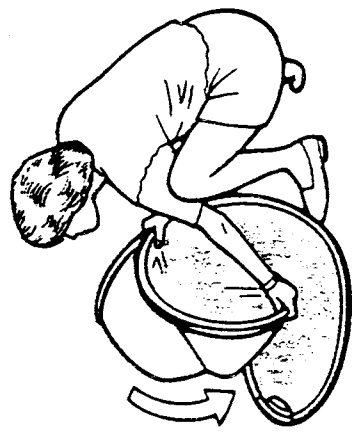

4. Fold the top end down and all the way in, as indicated by the arrow, to where the front foot is placed in the above illustration.

PLEASE SEE OTHER SIDE FOR IMPORTANT SAFETY INFORMATION.

Licensed to Hasbro, Inc. by JumpStart Inc.
 © 1995 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.
 ® denotes Reg. U.S. Pat. & TM Office.
MATERIAL MADE IN KOREA. SEWN IN CHINA. ASSEMBLED IN USA.
 U.S. Patent No. 4,858, 634
 30830 P/N 46309900