

### **WARNING:**

CHOKING HAZARD-Small parts. Not for children under 3 years.

Shine Bright™

# Wilight Sparkle

### TO PLAY

Press button on pony figure's back to activate light.



## TO REPLACE BATTERIES

Use a Philips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover and discard old batteries. Replace with 2 x 1.5V "A76" or LR44 size alkaline batteries. Replace door and tighten screw.



#### IMPORTANT: BATTERY INFORMATION

### **CAUTION:**

- 1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.
- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
- 3. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 4. Remove exhausted or dead batteries from the product.
- 5. Remove batteries if product is not to be played with for a long time.
- 6. Do not short-circuit the supply terminals.
- 7. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 8. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.



Questions? Call 1-800-327-8264

Product and colors may vary.

© 2010 Hasbro. All Rights Reserved. TM and ® denote U.S. Trademarks. 34317 PN 71537500000