# rosting

lakes enough for a one-layer ca

- . Empty frosting mix into a mixing b
- Spread frosting over cake with spatu




<u>\_\_\_\_\_\_</u>



# hocolate Drizzle Icing

reheat oven for 15 minut

# Jse warming cups

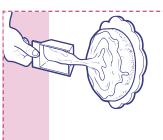



# **ELECTRICAL REQUIREMENTS:**

**120 Volts AC only – 60 Hz. 100 Watts.** 

WARNING: Shock hazard. Pull plug out of receptacle before removing light bulb door and changing light bulb. Do not use light bulbs larger than 100 watts.

CAUTION: Adult supervision recommended. Internal metal edges. Care should be taken during installation of the light bulb. Phillips screwdriver required for assembly.

DANGER: To prevent electric shock, do not immerse oven in water. Wipe clean with a damp cloth. We recommend that you periodically examine the toy for potential hazards and that any potentially hazardous parts be repaired or replaced.

(See back page for company contact information.)

# **ADULT SUPERVISION** RECOMMENDED.

# **ALWAYS:**

- Wash all pans and utensils before using first time.
- Use pan tool to move pans through baking chamber.
- Allow oven, pans and food to cool before handling.
- Unplug oven when not baking.
- Use the correct type of light bulb.

- **NEVER** leave empty pans or pan tool in oven!
- **NEVER** use plugged-in oven around water at any time.
- NEVER leave plugged-in oven unattended or unassembled.
- **NEVER** put your fingers in oven.

 
# **Safety Tips and Cautions:**

**HOT** pans and food. Handle carefully! **HOT** oven interior, oven top and back. Do not touch!

NOTE: The "new" smell the oven gives off in the first few minutes is produced by the protective oil evaporating from the metal parts in the oven. You may also see a vapor. The oil is food grade, non-toxic, and evaporates quickly. Do not immerse oven in water.









Look for all the fun and delicious EASY BAKE®\* food mixes and accessories!



If you have any questions, comments, or need additional information concerning your EASY-BAKE®\* oven, or if you need additional information concerning this product or its parts, please call our Hasbro Consumer Affairs hotline at 1-800-327-8264, Monday through Friday during business hours (Eastern time).


GO TO





TM & © 2004 MGA Entertainment, Inc. "Bratz" and all related logos, names, characters and distinctive likeness are the exclusive property of MGA Entertainment, Inc. All Rights Reserved.

Food items manufactured for Hasbro, Inc. ®\* and/or TM\* & © 2004 Hasbro. All Rights Reserved.

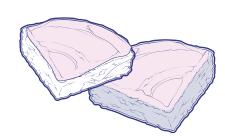


Product and colors may vary.

65554 P/N 6372040100

# This Oven includes:

holder end

2 baking pans

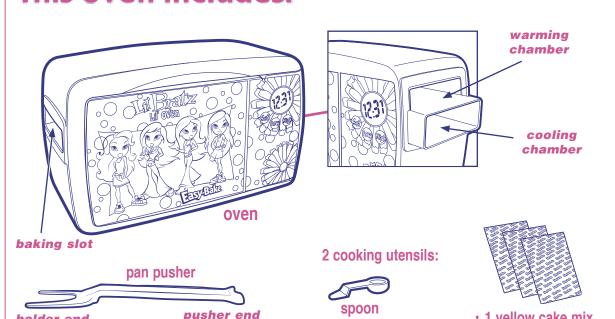

2 warming cups

• 1 yellow cake mix

spatula

- 1 chocolate flavored frosting mix
- 1 butterscotch chip cookie mix

# cooking spray

 Flour Nonstick

needed:


also

- Rolling pin
- Mixing bowl
- 100-watt light bulb, frosted or standard. \*Do not use soft white or long life bulbs.

# **Install Light Bulb**

## ADULT SUPERVISION RECOMMENDED.


- Loosen screws from battery door and remove battery door from oven.
- Install one standard 100-watt bulb (regular or frosted) into the socket in the panel.
- DO NOT use long life, soft white or high efficiency bulbs, or bulbs of higher or lower wattage, which will cause oven to work improperly.
- Replace the door and 4 screws.

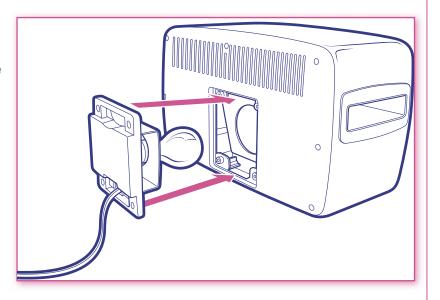


# **Before You Bake:**

- 1. Wash pans with soap and water and dry thoroughly before first use and always after baking.
- 2. The oven should rest flat on a level surface at all times.
- 3. Make sure both metal doors inside the oven are closed.
- 4. Plug in oven and preheat for 15 minutes.

# **Oven Basics**

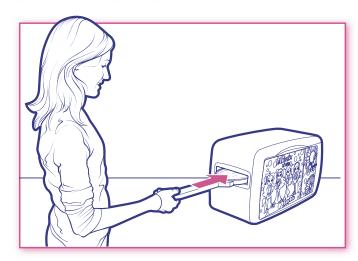

- 1) Preheat oven for 15 minutes.
- 2) Place baking pan in baking slot, then use pusher end of your pan tool to push pan into oven.
- 3) Make sure both metal doors are closed.
- 4) When baking time is done, use pusher end of pan tool to push through to cooling chamber. PAN IS HOT! Cool for ten minutes.

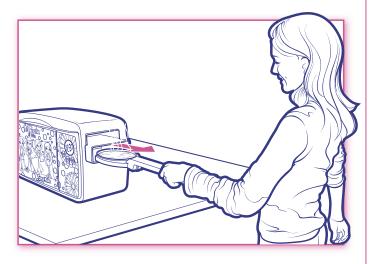

- 5) Using holder end of pan tool, remove pan.
- 6) Unplug oven when finished baking. Wait for oven to cool, then wipe it down.