

65558/65505 Asst.

Want to be famous?

Visit www.easybake.com to enter the EASY-BAKE "Chef of the Year" contest!

Tea Party Bake Set

Thank you for choosing this special EASY-BAKE item!

Follow all instructions carefully to ensure that you have fun and get the best results!

Parents Please Note:

Wash all parts by hand thoroughly before use. Do not wash in dishwasher.

Mixes can also be used in your kitchen oven (bake at 375°)

This set includes:

- 1 sugar cookie mix
- 1 chocolate chip cookie mix
- 2 FLAVOR AID mixes
- · EASY-BAKE accessories

You will also need:

- mixing bowls
- EASY-BAKE baking pan
- Teaspoon
- Nonstick cooking spray




Ouestions? Call: 1-800-327-8264


© THE JEL SERT COMPANY Food items manufactured for Hasbro, Inc. © 2004 Hasbro, Inc. All Rights Reserved. P/N 6372050000

Product and colors may vary.

Oven Basics

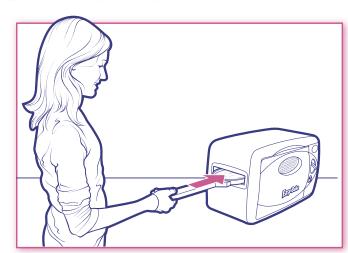

- 1) Preheat oven for 15 minutes.
- 2) Place baking pan in baking slot, then use pusher end of your pan tool to push pan into oven.
- 3) Make sure both metal doors are closed.
- 4) When baking time is done, use pusher end of pan tool to push through to cooling chamber. PAN IS HOT! Cool for ten minutes.

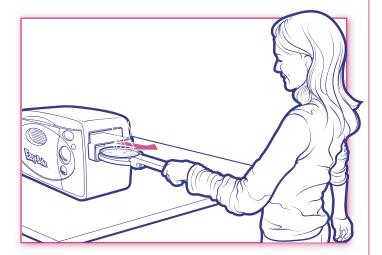

- 5) Using holder end of pan tool, remove pan.
- 6) Unplug oven when finished baking. Wait for oven to cool, then wipe it down.



