

INSTRUCTIONS




Slide Clip Release Switch and pull WATER CLIP out of soaker.



Remove cap. Fill completely with clean, clear tap water. Reattach cap.




Insert WATER CLIP into soaker with arrow pointing forward.

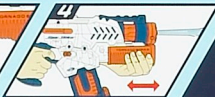

Pump to fire.



Press button to adjust stock length.

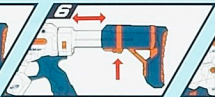

To remove stock, slide release switch down.

