

CAUTION: Do not fly near eyes or face. TO AVOID INJURY: Always be aware of flight pattern. Fly in areas free of obstructions.

> **AGES 8+** 92783/92149 Asst.

Read the instructions completely before playing with this toy. Adult supervision recommended. Indoor use only.

> **REPUBLIC GUNSHIP REMOTE CONTROL**

INSTRUCTION GUIDE



RIES REQUIRED

Alkaline batteries required. Phillips/cross head screwdriver (not included) needed to insert batteries.



ERY INCLUDED Includes one 3.7v 200mAh non-replaceable, rechargeable LiPo battery


SAFETY PRECAUTIONS:


- Adult supervision is recommended for flight and recharging of the vehicle.
- Do not use the vehicle near a heat source (i.e. fire or heater).
- Keep vehicle in your sight at all times while flying.
- Know your surroundings and clear the area of obstructions before each use.
- Use away from people, animals, or breakable objects.
- Use only the provided charger to recharge the vehicle.

Do not disassemble or modify the vehicle.

- Do not allow vehicle to get wet.
- Battery chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this transformer until the damage has been repaired.

REPUBLIC GUNSHIP

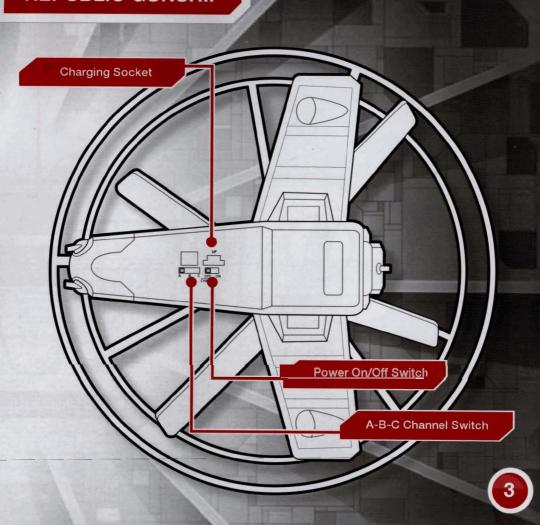

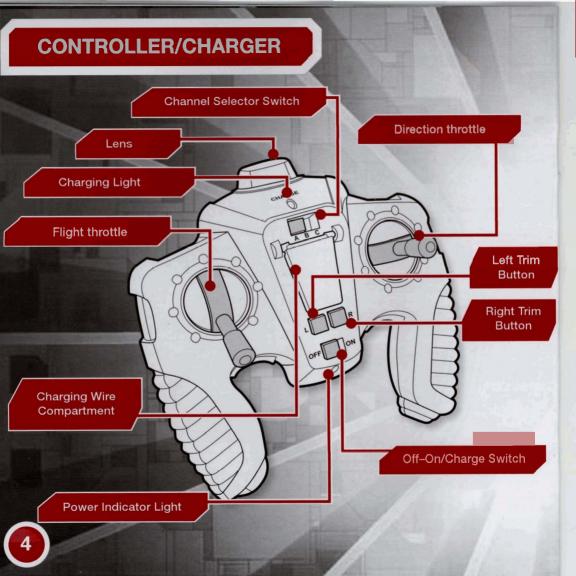

TO INSERT BATTERIES INTO CONTROLLER/CHARGER

+ DI

 \otimes

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Insert 4 x 1.5V "AA" or LR6 size alkaline batteries into the compartment. Replace cover and tighten screw.

IMPORTANT: CONTROLLER BATTERY INFORMATION

\land CAUTION:


- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and polarity markings.
- 2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.
- 4. Remove batteries if product is not to be played with for a long time.
- 5. Do not short-circuit the supply terminals.
- 6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7.RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

IMPORTANT: VEHICLE BATTERY INFORMATION

A WARNING:

Risk of fire, explosion, and burns. Do not disassemble, crush, heat above 60°C (140°F), or incinerate. The Lithium polymer battery in this product is not replaceable. Dispose of the whole product according to local recycling or waste regulations – never disassemble. Do not use the item near a heat source such as a fire or heater.

HOW TO CHARGE THE VEHICLE

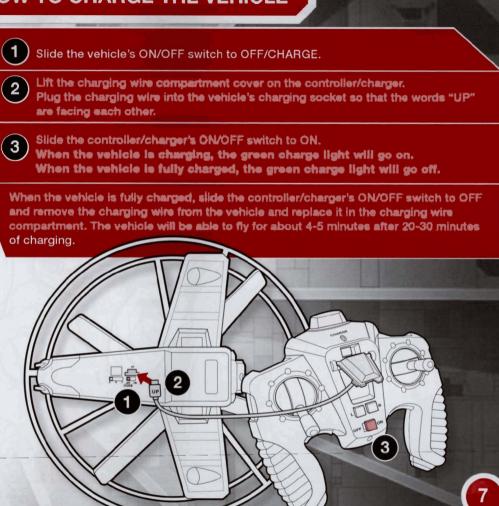

HOW TO OPERATE THE VEHICLE

CHOOSE AN APPROPRIATE FLIGHT AREA:

- The vehicle is designed for indoor use only.
- Know your surroundings and clear the area of obstructions before use.
- Do not fly it in areas that have fans, reading lamps or other obstacles.
- · Keep the vehicle away from people and animals during flight.

2 POWER UP & SELECT A CHANNEL:

8

Make sure the controller/charger is ON. Slide the channel selector switch to A, B or C. Multiple channels allow you to operate your vehicle in the same area as another Star Wars RC vehicle. Two vehicles can't operate on the same channel at the same time, so you and the other person will need to select different channels.

Slide the vehicle's ON/OFF switch to ON.

Slide the vehicle's channel selector switch to the same channel as the controller/charger (A, B or C).

HOW TO OPERATE THE VEHICLE

MAKE THE VEHICLE HOVER:

Place the vehicle on a flat surface. Slowly push the flight throttle forward. Adjust the height by pushing the throttle forward or pulling it back to make the vehicle go higher or lower.

NOTE:

- Move the throttle slowly and a little at a time.
- As soon as the vehicle starts to hover, slightly pull back on the throttle.

TRIM THE VEHICLE (ADJUST ITS DIRECTION): If the vehicle rotates to the left, tap the RIGHT TRIM button repeatedly until the vehicle faces straight ahead. If the vehicle rotates to the right, tap the LEFT TRIM button repeatedly until the vehicle faces straight ahead. Trim will need to be adjusted each time you fly.

9

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired dperation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Consult the dealer or an experienced radio/TV technician for heip.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste binger



Products and colors may vary. © 2009 Luçasfilm Ltd. & © or TM where indicated. All rights reserved. ©* and/or TM* & © 2009 Hasbro. All Rights Reserved. TM & © denote U.S. trademarks. PN# 6976410000