

Ages 4 & Up

Fantastic CRYSTAL Creations™

DESIGN
MAKING SET

FOUR 2.0 FL. OZ. (59mm e)
BOTTLES OF GEL; TOTAL WEIGHT
8.0 FL. OZ. (236 mm e).



WARNING:


CHOKING HAZARD- Small part
Not for children under 3 years.

Thank you for purchasing this fun, easy-to-use toy from Kenner. With your imagination you can create lots of unique, sparkling gel designs!

For maximum enjoyment of this toy, please read these instructions carefully to ensure correct assembly and operation. For more Fantastic Crystal Creations fun, look for a refill set, which features additional new design shapes and bottles of gel.

PLEASE NOTE: The gel in this product may stain certain fabrics and should be kept away from carpets and other fabric items.



PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

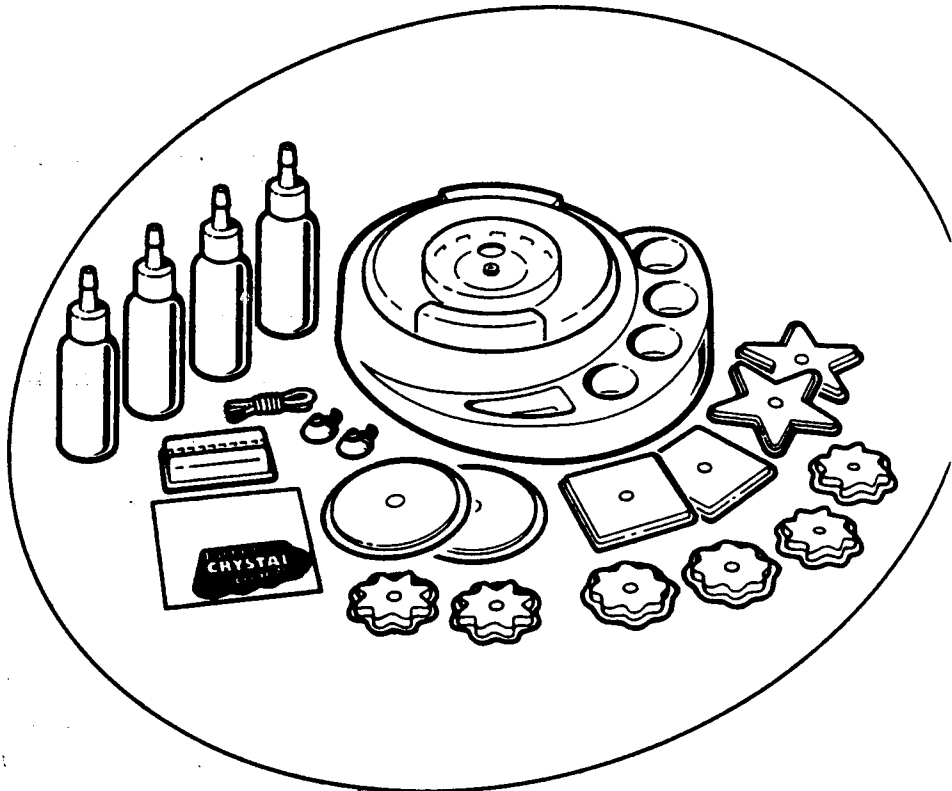

Includes gel spinner with removable lid, 4 bottles of gel, 12 design shapes, 2 window hanger suction cups, 1 stand, 1 cord, rubber pads and label sheet.

Requires 1 "D" battery (not included-alkaline recommended).


TO INSTALL BATTERY..

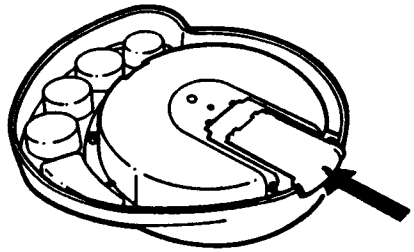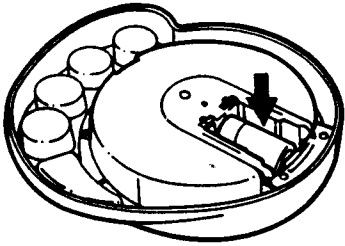

1. Insert 1 "D" battery (alkaline recommended) into battery compartment as indicated.

2. Fit battery compartment cover onto battery compartment as shown, then slide it forward until it snaps into place.

TO INSTALL RUBBER PADS...

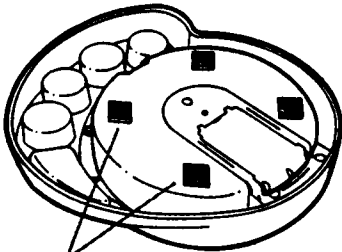


RUBBER PADS

1. Peel backing off rubber pads and apply one pad to each of the four recessed areas on underside of machine as shown.


PEEL AND APPLY LABEL TO FRONT OF TOY AS SHOWN...

IMPORTANT: Do not discard sticker/label sheet. Sheet contains stickers that will be used to seal gel designs.

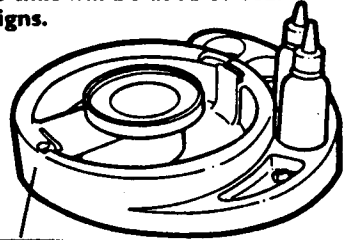

Fantastic
CRYSTAL
Creations


TO MAKE FANTASTIC CRYSTAL CREATIONS...

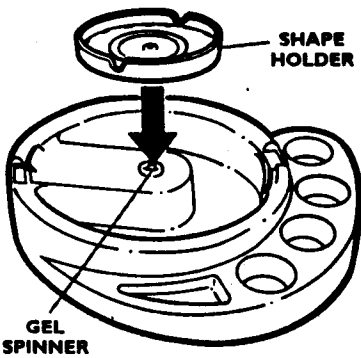


GEL SPINNER

SHAPE HOLDER

1. Press shape holder onto gel spinner as shown.

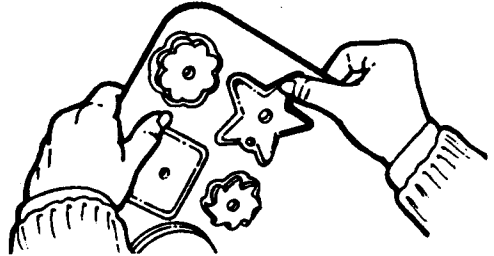


2. Select a design shape. To remove shape from frame, push in on an edge, then pull out. If having difficulty, or trimming is required when removing shapes from frame, use safety scissors. Please note that in unpacking the design shapes, you may find that the top of a shape is pressed against the bottom, causing the hole for filling gel to be blocked. If it is necessary to unblock the hole, simply remove a cap from a gel bottle, insert the tip of the bottle into the hole and force out the bottom of the shape.

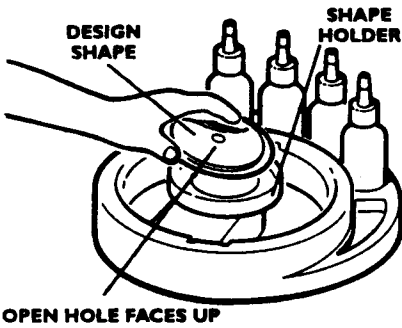


OPEN HOLE FACES UP

3. With open hole in center of design shape facing up, place in shape holder as shown. Be sure to fit recessed opening in design shape over post on shape holder.

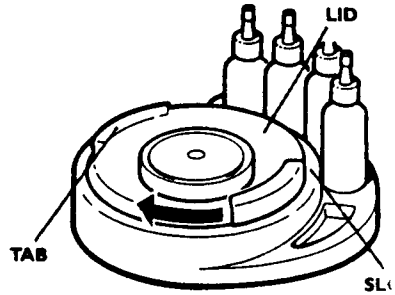


4. Fit tabs on lid into slots on gel spinner. Twist lid to lock it in place (twist in direction of arrows).

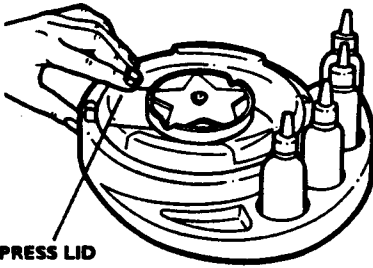


PRESS LID

5. Select bottles of gel you plan to use. Unscrew and remove cover from each bottle. Peel away the clear seal covering the opening. Screw on bottle cover and discard seal. Remove cap from tip of bottle cover. Make the design shape spin by pressing down on the lid at the point on the gel spinner marked "PRESS LID HERE."

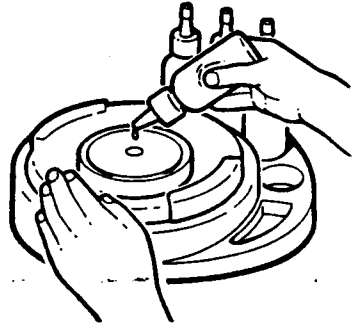

6. Position tip of bottle over opening in center of lid and pour in gel as design shape spins. To add variety to your design, pour different gel colors and vary rotating speed by letting up and pressing down on lid.


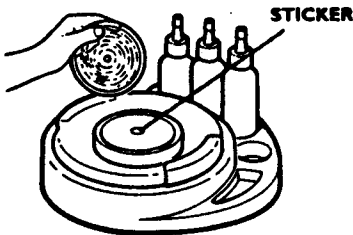


7. When design shape is filled with gel, release pressure on lid to stop shape from spinning. After design shape has stopped spinning completely, remove the lid. If the design shape is not filled to the top, simply add gel directly into the shape to complete the design.

8. Remove design shape from shape holder and wipe off any excess gel from shape. Allow a few minutes for surface shape to fully dry, then seal center hole shape with a round sticker from sticker label sheet.

NOTE: AFTER APPLYING LABEL TO CENTER HOLE, DO NOT SQUEEZE SHAPE OR PRESS ON IT WITH EXCESSIVE FORCE; DOING SO COULD CAUSE GEL TO SQUIRT OUT OF CENTER HOLE.


Display your colorful new creation on a stand as shown. You can also apply double-stick tape (not included) to your gel designs and adhere them to refrigerators and other places you would like them to be displayed.

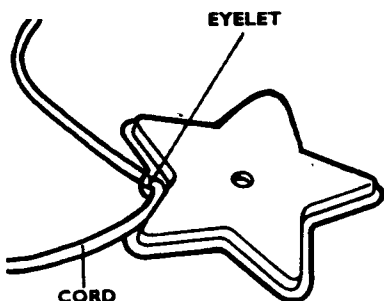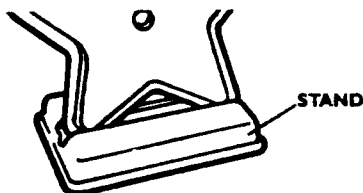

If your gel design shape has an eyelet, you can lace the cord through it and wear the shape as part of a necklace or display it by hanging it up. To clear the eyelet for use, simply punch out the center with the tip of a pen. **DO NOT** punch out the center hole on the bottom of the shape.

To hang your creations on a window, press suction cup onto window, then fit the eyelet on design shape onto the suction cup hook. (Suction cups will also adhere to smooth metal surfaces.)

For extra convenience, there is a built-in storage area on the side of the gel spinner. Place the gel bottles in the wells and use the storage tray to hold caps when using the bottles. After using gel, be sure to replace caps on bottles so that gel will not spill.

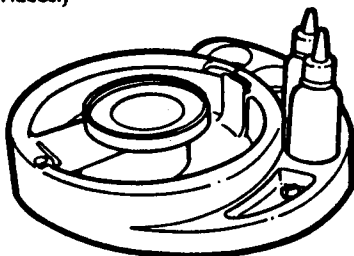

PLEASE NOTE:


Reusing design shapes after they've been filled is not recommended.

When using a gel bottle for the second time, tap the tip of the bottle on a flat surface to bring gel forward inside the bottle. (Be sure cap is on tip of bottle when doing this!)

TO CHANGE BATTERY:

Remove battery compartment cover by inserting tip of flat screwdriver or edge of coin into slot as shown. Then, twist screwdriver or coin to lift cover and remove. For battery installation, see first step.

CAUTION: Always remove exhausted or dead battery from the product. Remove battery if storing toy for a long period of time.

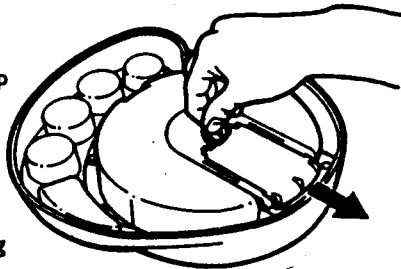

NONTOXIC CONFORMS TO ASTM D-4236

U.S. Patent Pending

© 1995 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.

KENNER® is a registered trademark of Tonka Corporation, a subsidiary of Hasbro, Inc.

® denotes Reg. U.S. Pat & TM Office.

ASSEMBLED IN MEXICO FROM U.S., MEXICAN AND CHINESE COMPONENTS.

GEL MADE IN THE UNITED KINGDOM

8566 P/N 461

Kenner®