

# Fantastic Fingernails™

Nail Decorating Set



## WARNING:

CHOKING HAZARD - Small parts.  
Not for children under 3 years.

CAUTION: Adult supervision required.

NET CONTENTS 2 CONTAINERS .5 FLUID OZ. (14.79 ML) EACH. TOTAL NET CONTENTS 1 OZ. (29.57 ML.).


Includes Decorating machine, 100 fingernails (50 per container), 2 sticker sheets, 2 bottles of nontoxic nail polish, 2 emery boards, manicure stick, 4 nail adhesive sheets and rubber pads.

**PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

### MESSAGE TO PARENTS:


Thank you for purchasing this high quality, hands-on activity toy from Kenner. Please note that though the nail polish in this product has been thoroughly tested, certain individuals may have infrequent instances of sensitivity. If irritation occurs, wash hands and discontinue use.

Fantastic Fingernails nail polish is designed for children and will wash off your child's fingernails easily. As with all cosmetics, nail polish may stain certain fabrics and should be kept away from carpets and other fabric items.

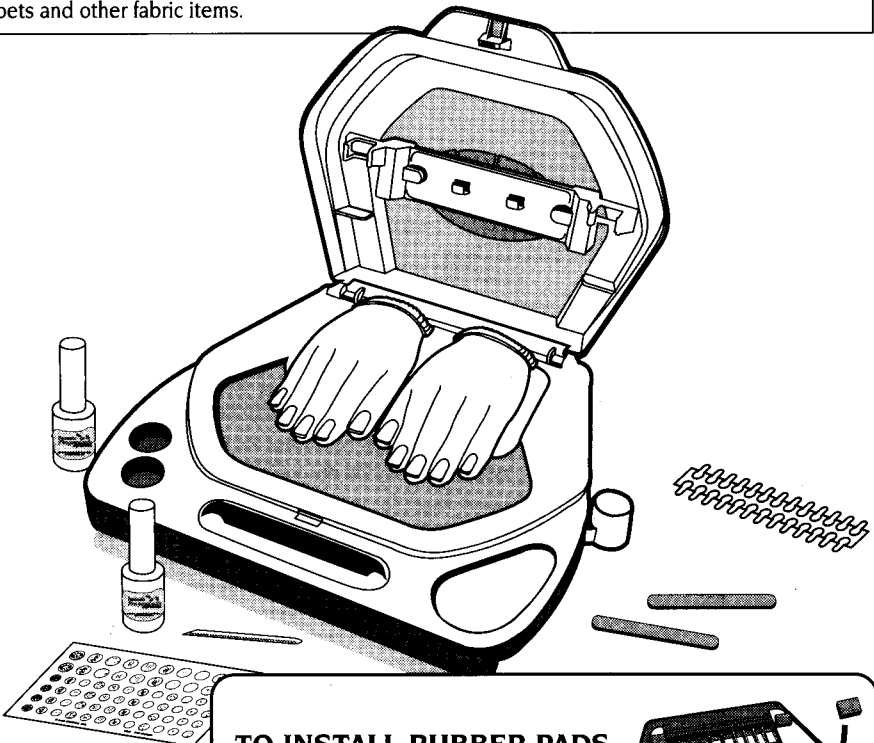

### TO INSTALL RUBBER PADS



Peel backing off rubber pads and apply one pad to each of the four raised corner areas on underside of machine as shown.

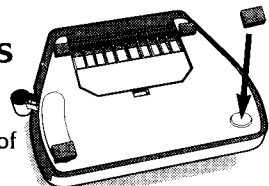

# TO CREATE FANTASTIC FINGERNAILS... DECORATE THEM!

## Load the Nails

Turn decorating machine upside down. With machine positioned as shown, move handle **all the way** toward you (until it can move no further), then slide center latch over to unlock nail compartment cover. Swing cover up and back.

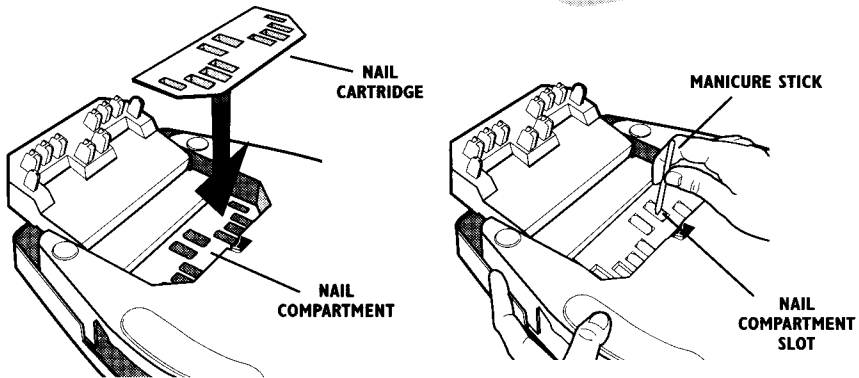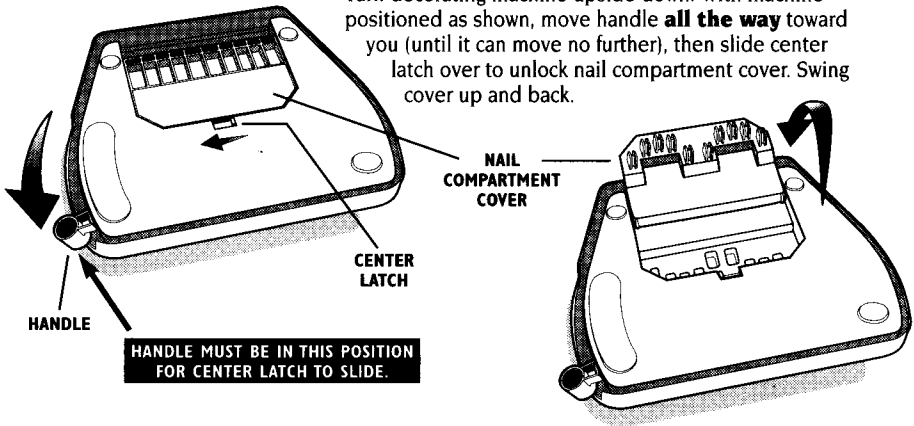


Insert nail cartridge into the nail compartment as shown. Insert the manicure stick through one of the nail cartridge holes, and use it to push a stack of nails into the matching nail compartment slot. Repeat for other nine nail stacks, so that each slot is filled with the correctly sized nails.


**After loading nails, check to be sure nails are inserted in even stacks, with sides of nails curving up. Each stack includes 5 nails; do not load more than 5 nails into a slot at a time.**

**If any of the nails do not load properly, use the flat edge of the manicure stick to correct the position of the nails.**

**Note:** If, during play, you decide to load nails individually, please note that there are 4 different sizes of nails that fit into slots of matching sizes. If nails are placed in incorrect slots, the decorating machine might jam, causing the nails to become damaged.

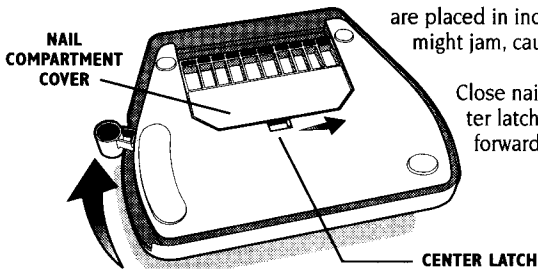


Close nail compartment cover, then slide center latch over and push handle **all the way** forward to lock the cover.

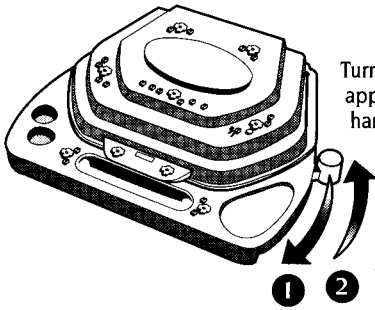

Turn decorating machine right side up. To make nails appear on the fingers in decorating machine, pull handle toward you (1), then push it back (2) as shown.

Handle must be moved **all the way over** in one direction before it can be moved again.

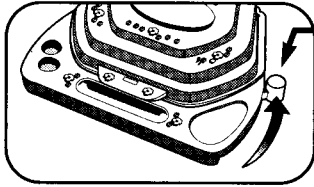

**HANDLE MUST BE IN THIS POSITION FOR LID TO OPEN.**

Open decorating machine lid and look at all the nails! Now you're ready to decorate...

**Note:** If, after opening the lid, you find that all the nails do not appear on the fingers in the decorating machine, check to be sure nails have been loaded into the nail compartment properly. Then, repeat the process to make a new set of nails appear. (If you have loose nails, it is possible to manually fit a nail into a finger in the decorating machine.)


At this point, you may wish to have your accessories - nail polish, design stickers, adhesive circles, manicure stick - ready to use and in the places provided at the front of the decorating machine.



## Create Fantastic Fingernails

Unscrew cap from nail polish bottle. Using long, even strokes, brush nail polish onto nails. **Do not use "real" (adult) nail polish or nail polish remover with Fantastic Fingernails because it could melt or distort the plastic fingernails and toy housing.**

Allow enough time for nail polish to dry (at least 5-10 minutes). When nail polish is **completely** dry, peel the design stickers from sheet and apply to the polished fingernails. There are 20 sticker styles to choose from for lots of great looks!

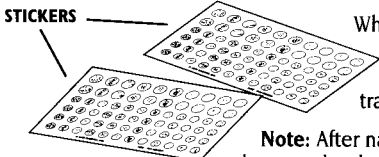

When nails are decorated and ready to be worn, close lid and slide handle back and forth one time. Open the lid. The nails will now be loose in the tray and ready to wear!


**Note:** After nails have been painted and decorated, **do not** leave them on the decorating machine fingers for more than an hour. This could cause nails to stick and the machine to jam. If nails do stick to machine fingers, use damp cloth to soften nail polish. Then, loosen nails with manicure stick.

## SHOW THEM OFF!

### Apply adhesives and Fantastic Fingernails

**Wash and dry hands thoroughly before applying adhesives.**

With the edge of your thumbnail, peel and remove the round end of a tabbed adhesive from the sheet as shown. **Be sure that the clear circle underneath also comes off with the adhesive. DO NOT pull tab to remove adhesive from sheet.** Apply tabbed adhesive to your own fingernail, with round part of adhesive on fingernail. (Do not yet remove top layer of adhesive.) Repeat process until tabbed adhesives are applied to all your fingernails.

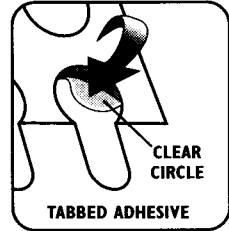

Using tab, peel and remove tabbed adhesive so that only the clear circle remains on your fingernail.

Apply your Fantastic Fingernail creations to your own fingernails, choosing from the different sizes available for your fingers. Now you can show everyone your beautiful new nails!

**CAUTION:** To maintain hygienic conditions, Fantastic Fingernails should not be worn for more than 12 hours at a time, and nails should be kept dry during wear. Always remove any remaining adhesive after use. Allow 12 hours of non-use between applications of new fingernail adhesive.

For additional fingernail play, this set contains two emery boards for smoothing and filing nails and a manicure stick to complete the manicuring fun.

### TO REMOVE NAILS

Remove Fantastic Fingernails from your nails by gently pulling them off. If, after removing nails, adhesive circles remain, peel them off and discard.


Fantastic Fingernails can be reapplied to your fingernails, using a fresh adhesive circle.

**DO NOT load a nail that's already been polished into the decorating machine.**

Use only Fantastic Fingernails adhesives and nail polish refills.

### CARE & STORAGE

All accessories store on the inside of the decorating machine lid as shown.

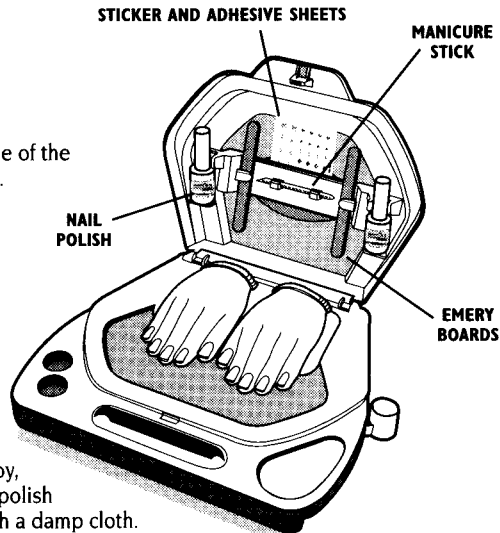

To maintain proper function of toy, periodically remove excess nail polish from the decorating machine with a damp cloth. **DO NOT** submerge machine in water.