

# Fantastic SAND

## Surprises

### DESIGN MAKING SET

**Ages 4 & Up**


Four 3.17 OZ. (90g e) BOTTLES OF SAND;  
TOTAL WEIGHT 12.68 OZ. (360 g e).



**WARNING:**

CHOKING HAZARD- Small parts.  
Not for children under 3 years.



Thank you for purchasing this fun, easy-to-use toy from Hasbro. With a dash of imagination and a touch of creativity, your child can make beautiful, brightly colored sand designs... a different one every time! For maximum enjoyment of this toy, please read these instructions carefully to ensure correct assembly and operation. For more Fantastic Sand Surprises fun, look for our refill set, which features additional new design shapes and bottles of colored sand.

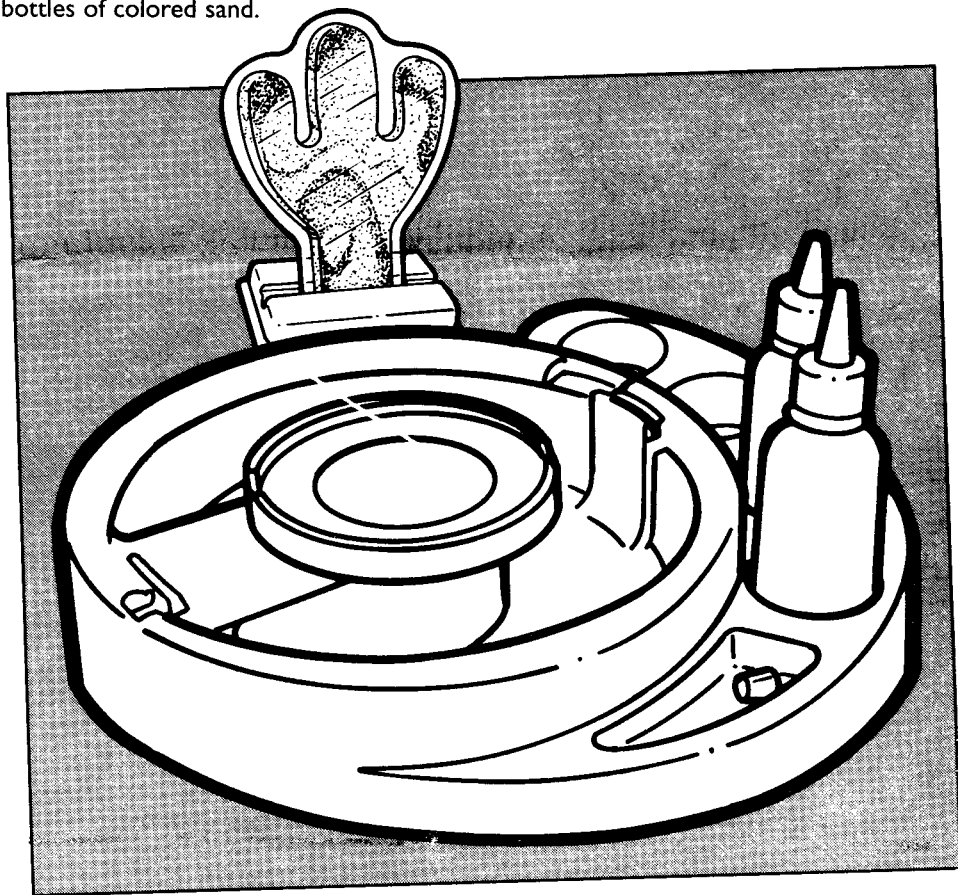

Includes sand spinner, lid, shape holder, 4 bottles of sand, 12 design shapes,  
1 cactus design, 2 stands, rubber pads and sticker/label sheet.

Requires 1 "D" battery (not included-alkaline recommended).


## TO INSTALL BATTERY..

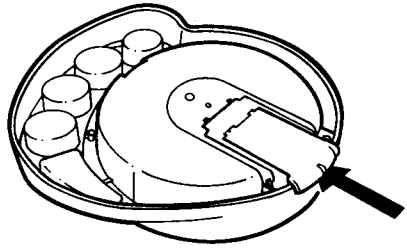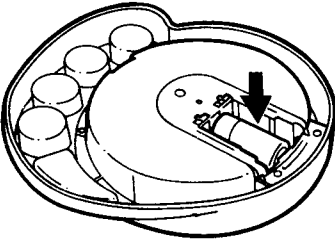

1. Insert 1 "D" battery (alkaline recommended) into battery compartment as indicated.

2. Fit battery compartment cover onto battery compartment as shown, then slide it forward until it snaps into place.

## TO INSTALL RUBBER PADS...

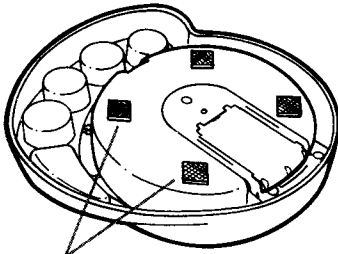


RUBBER PADS


1. Peel backing off rubber pads and apply one pad to each of the four recessed areas on underside of machine as shown.

## PEEL AND APPLY LABEL TO FRONT OF TOY AS SHOWN...

**IMPORTANT:** Do not discard sticker/label sheet. Sheet contains stickers that will be used to seal sand designs.

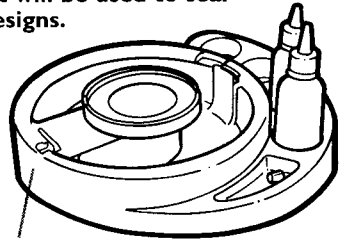


## TO MAKE FANTASTIC SAND CREATIONS...

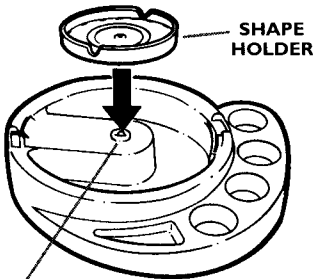


SAND SPINNER

1. Press shape holder onto sand spinner as shown.

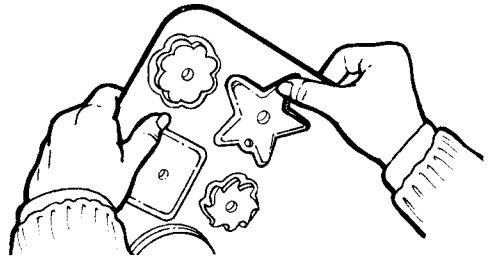


2. Select a design shape. To remove shape from frame, push in on an edge, then pull out. If you have difficulty, or trimming is required when removing shapes from frame, use safety scissors.

Please note that in unpacking the design shapes, you may find that the top of a shape is pressed against the bottom, causing the hole for filling sand to be blocked. If it is necessary to unblock the hole, simply remove a cap from a sand bottle, insert the tip of the bottle into the hole and force out the bottom of the shape.

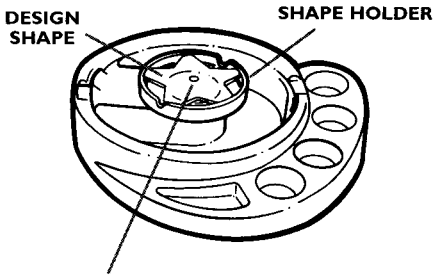


OPEN HOLE FACES UP

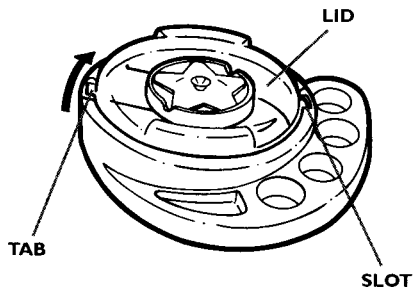


3. With open hole in center of design shape **facing up**, place in shape holder as shown. Be sure to fit recessed opening in design shape over post on shape holder.


4. Fit tabs on lid into slots on sand spinner. Twist lid to lock in place (twist in direction of arrows).

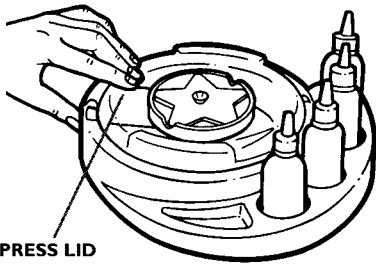


5. Select bottles of sand you plan to use. Unscrew and remove cover from each bottle. Peel away the clear seal covering the opening. Screw on bottle cover and discard seal. Remove cap from tip of bottle cover. Make the design shape spin by pressing down on the lid at the point on the sand spinner marked "PRESS LID HERE."

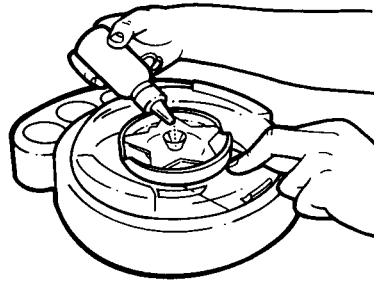


6. Position sand bottle tip over opening in center of lid and pour in sand as design shape spins. To add variety to your design, pour in different sand colors and vary rotating speed by letting up and pressing down on lid.

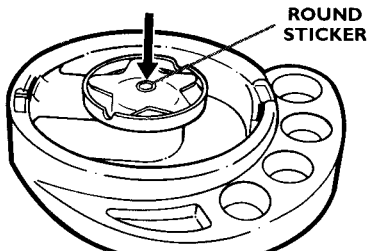


7. When design shape is filled with sand, release pressure on lid. After design shape **has stopped spinning completely**, remove the lid. If the design shape is not filled to the top, simply add sand directly into the shape to complete the design. With the design shape still in the shape holder, seal center hole of shape with a round sticker from sticker/label sheet.

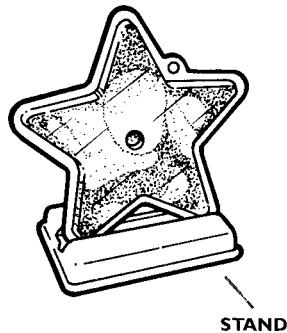

Remove the design shape from sand spinner and display your new creation on a stand as shown. You can also apply double-stick tape (not included) to your sand designs and adhere them to refrigerators and other places you would like them to be displayed.

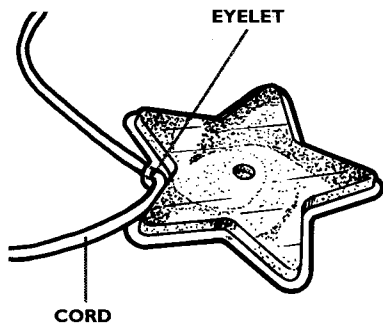


If your sand design has an eyelet, you can lace the cord through it and wear the design as part of a necklace or display it by hanging it up. To clear the eyelet for use, simply punch out the center with the tip of a pen. **DO NOT** punch out the center hole on the bottom of the shape.

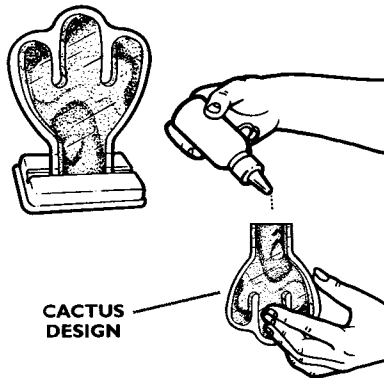

For added sand play, fill the cactus design (from the opening at the bottom) with your favorite colors of sand. Seal opening with an oval sticker from sticker/label sheet. Please note that the **cactus design cannot be used with the sand spinner.**

For extra convenience, there is a built-in storage area on the side of the sand spinner. Place the sand bottles in the wells and use the storage tray to hold caps when using the bottles.

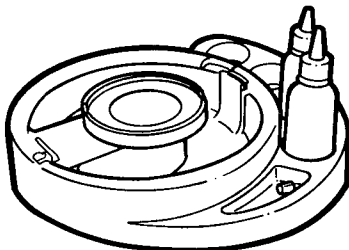

**PLEASE NOTE:**

**Design shapes are reusable. However, it may be somewhat difficult to remove all the sand from a design shape once it has been filled. After using sand, be sure to replace caps on bottles so that the sand will not spill.**

**TO CHANGE BATTERY:**

Remove battery compartment cover by inserting tip of flat screwdriver or edge of coin into slot as shown. Then, lift cover and remove. For battery installation, see first step.

**CAUTION:** Always remove exhausted or dead battery from the product. Remove battery if storing toy for a long period of time.

