


FASHION


Instructions

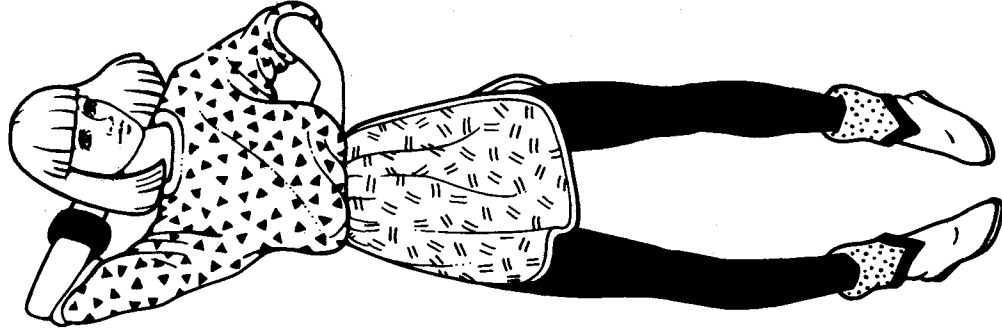



9508



Ages: 4 & Up


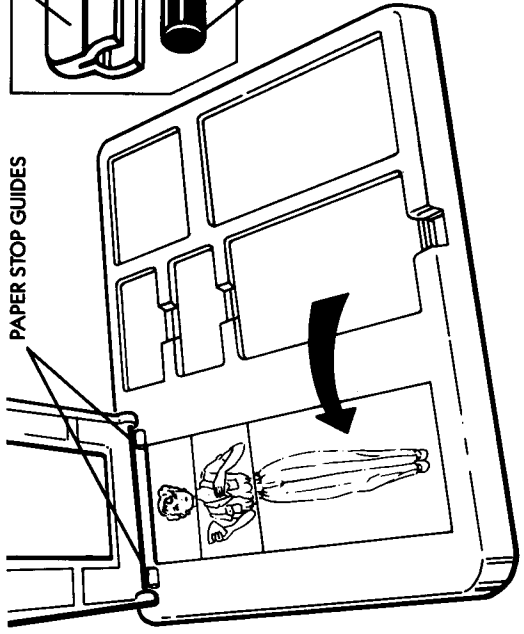


1 Choose your favorite style from among the 15 panels. Snap crayon securely into crayon holder (inset).

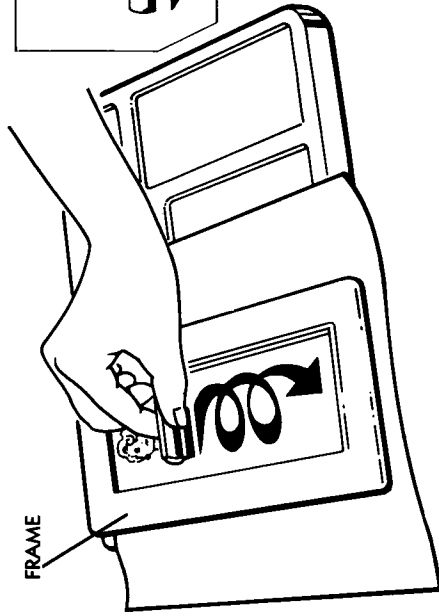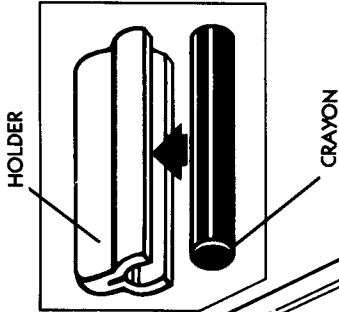


2 Place a sheet of paper under the frame firmly against paper stop guides and rub the crayon printer softly across the paper in a circular motion.



FOR THE BEST PICTURES, HOLD FRAME DOWN AND KEEP CRAYON LEVEL. Clean the frame every so often and straighten the crayon printer by rubbing it over a flat piece of paper.

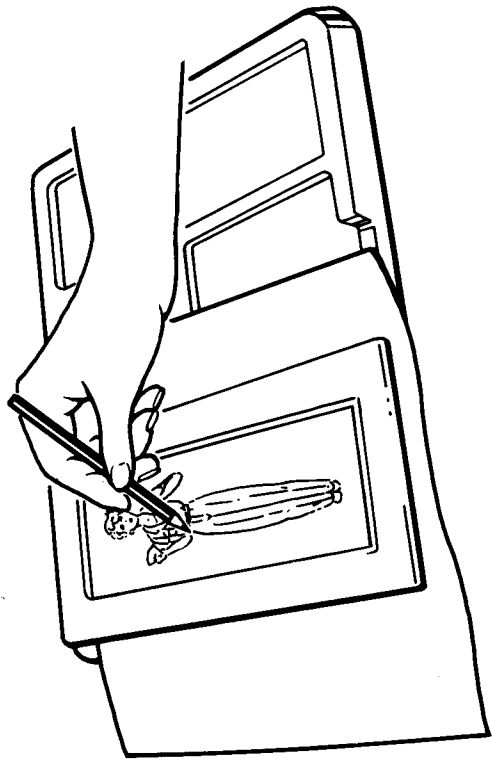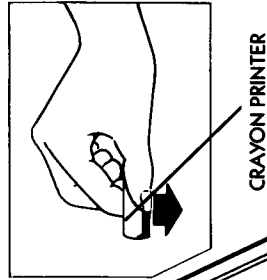



3 Turn the plates over and place your choice of patterns where you want it to print. Color the area by rubbing with a colored pencil.

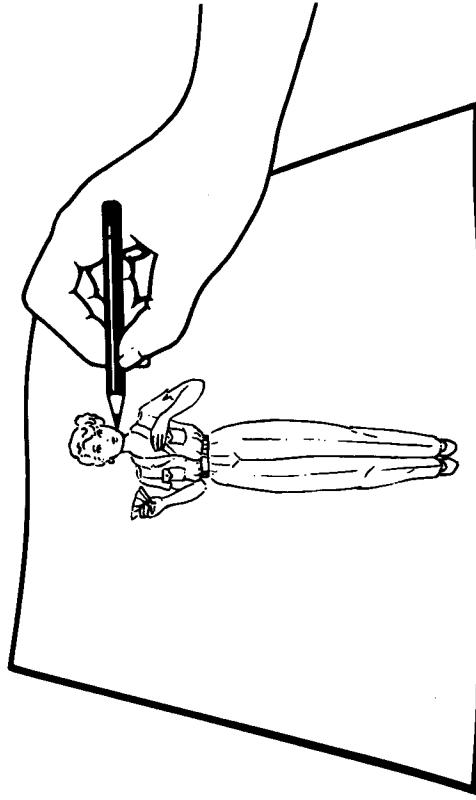

4 You may want to put the paper on a flat surface to color hair or other areas. Use your fashion sense!

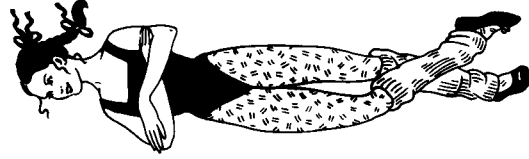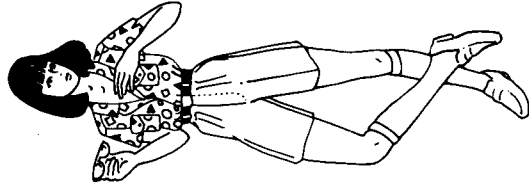

You can use several different prints together or leave some places a plain color . . . even draw your own designs!

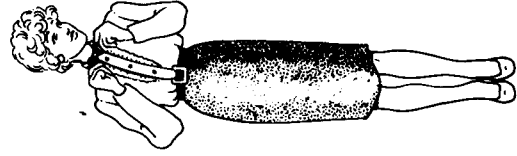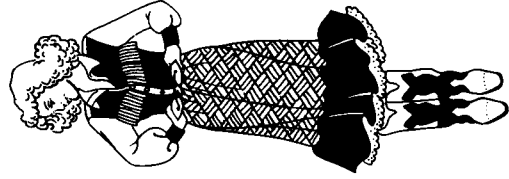

You can make bold fashions with dark colors and bold prints, or try delicately shading from light to dark and one color into another. Have fun!