 




50021/50022




Flash 'n Go In-Line Skates™

NOTE TO PARENT:

Please remove "Try Me" tab and all other packaging materials and dispose of them before giving skates to your child.

Please read entire instruction sheet before allowing child to skate.

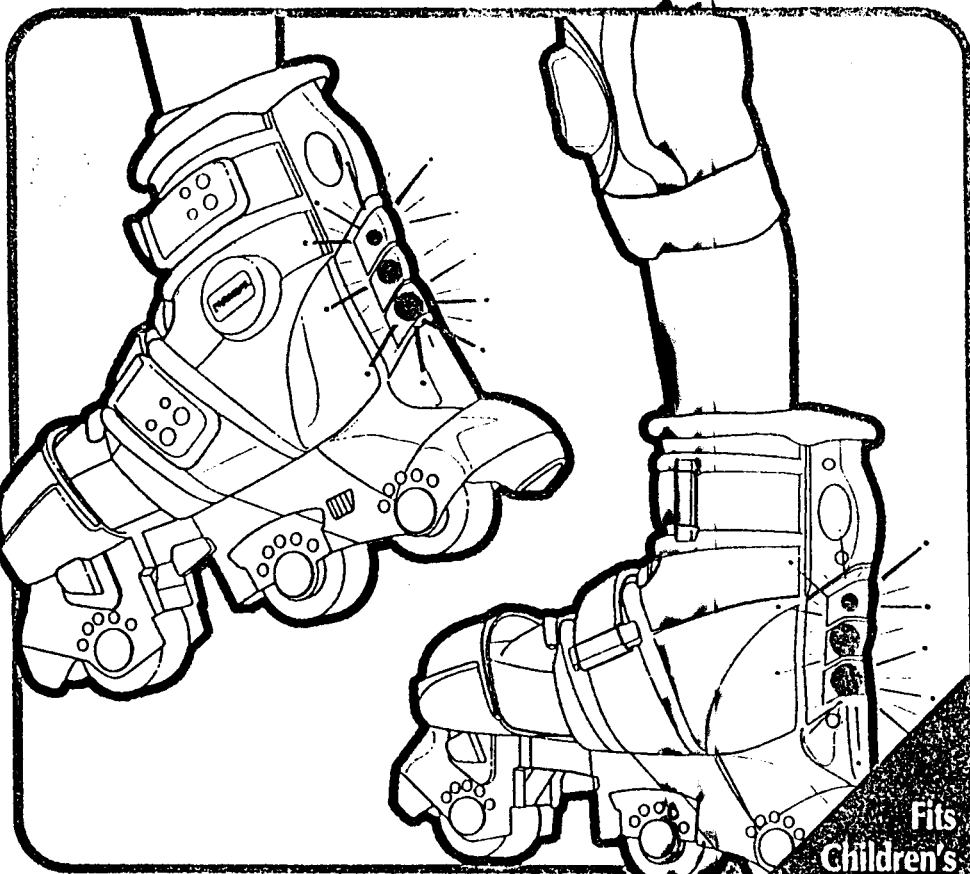

Fits
Children's
Shoe
Size 8
to Adult
Size 2

AGES
3-7

PRESCHOOL

Includes: Two fully assembled skates. (Children must wear sneakers and should wear socks that fit above the "high-top" ankle support boot when skating.) Tool needed: Phillips screwdriver, when batteries need to be replaced.

ADJUSTING STAGES


Flash 'n Go In-Line Skates feature 3 progressive, easy-to-learn skating stages:

STAGE 1: Beginners use the training wheel setting with front wheels locked in the forward-only "lock" position. This provides them with a wider base for maximum stability.


STAGE 2: Training wheels can now be placed "in-line" while keeping front wheels locked for forward-only rolling.

STAGE 3: Front wheels can now be unlocked "OFF" for free-wheeling "in-line" fun for skilled, confident skaters.

TRAINING WHEEL POSITION - STAGE 1

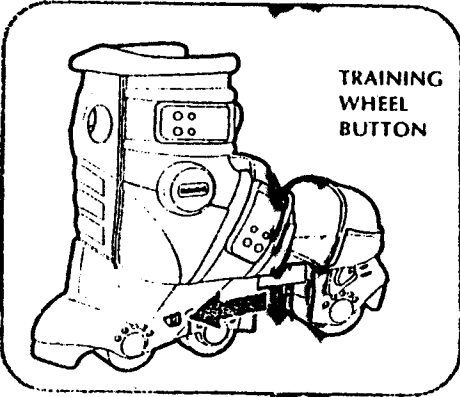


1. Push training wheel button toward back of skate and hold in place.

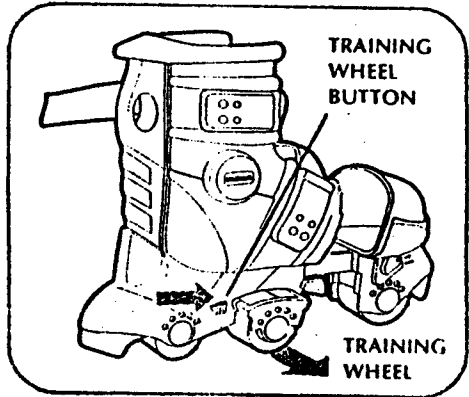


2. Slide training wheel (middle wheel) all the way out, then push button forward to lock wheel in place. Push in on wheel to make sure it is locked. Repeat process to slide wheel back to the "in-line" position.

LOCKED WHEEL POSITION - STAGE 2

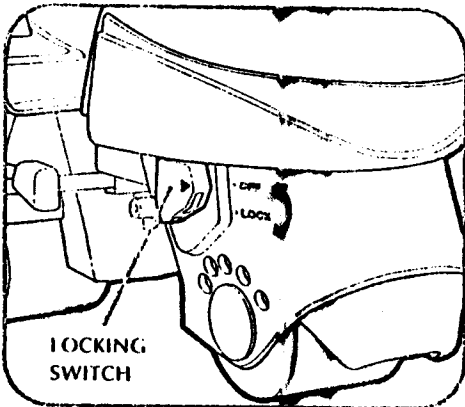

To lock front wheels in the forward-only rolling position, turn the switch to the "LOCK" position. Wheels will not roll backward in this setting.

FREE-WHEELING POSITION - STAGE 3

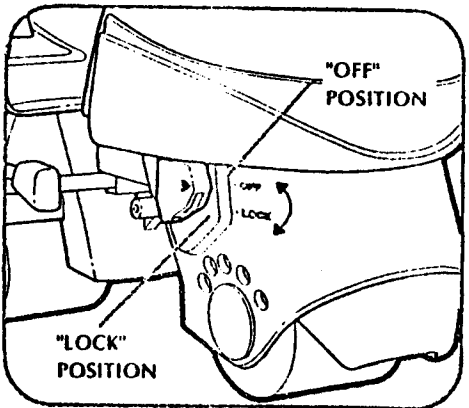


To return front wheels to the "free-wheeling" mode, turn the locking switch to the "OFF" position. Wheels will roll both forward and backward in this setting.


SAFETY CAUTIONS:

- Always supervise your child when he/she is first learning to skate, since a few falls are unavoidable. To best assist a beginner, hold one of the child's hands and guide child along a smooth, level surface.
- To prevent possible injury, use of a safety helmet, elbow, wrist and knee pads is highly recommended.
- Sneakers (or shoes) and socks must be worn while wearing the skates. Don't let child skate in bare feet, thongs, sandals or any other open-toed shoes.
- Check to prevent pant legs, loose laces, etc. from becoming caught in wheels.
- Select skating areas which are free from obstacles and provide a flat skating surface.
- Never let child skate in the street.
- Never let child skate in driveways which enter vehicle traffic routes.
- Never tow skaters with a bicycle or car.


FITTING IN-LINE SKATES: Flash 'n Go In-Line Skates are designed to fit children's shoe size 8 to adult 2. They can be adjusted to fit your child's sneaker or shoe as follows:

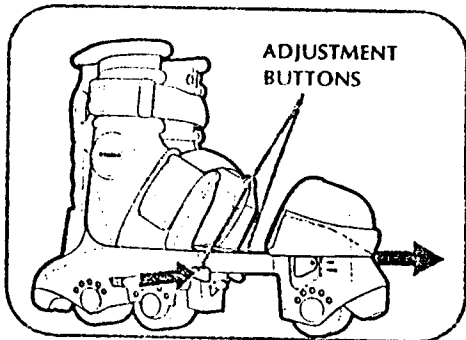


1. Press in the adjustment buttons located on sides of skates. While holding buttons in, pull skate apart to open as shown.

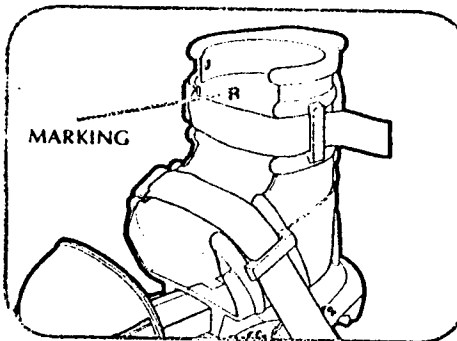

2. Flash 'n Go In-Line Skates are designed with a right and left skate. With child seated, slide right and left feet into skates accordingly. Note: Look inside the skates for "R" and "L" markings.

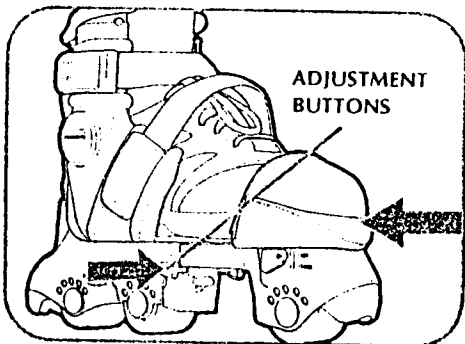

3. Press in and hold adjustment buttons, then push skate together until it fits in a snug, comfortable position against child's sneaker. Release buttons to lock skate in place.

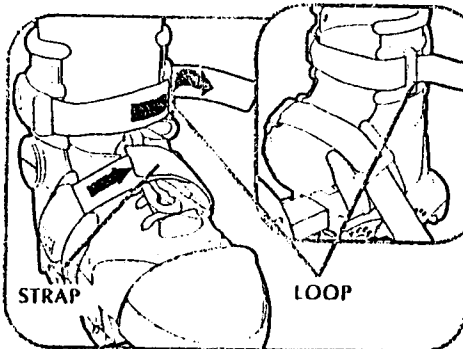


4. Insert skate strap through loop and pull firmly to tighten. Press down fastener to secure strap in place. Note: For the best fit, re-tighten straps.

FLASH 'N GO LIGHTS:

As soon as your child puts Flash 'n Go In-Line Skates on, the 3 chaser lights in back will begin to flash, so your child can learn to skate with a cool attitude!

REPLACING BATTERIES:

Flash 'n Go Skates come equipped with 4 "A76" button cell batteries. The battery compartment is located inside the skate, along the back wall of the boot. When the lights begin to fade or flash erratically, it's time to replace the batteries.

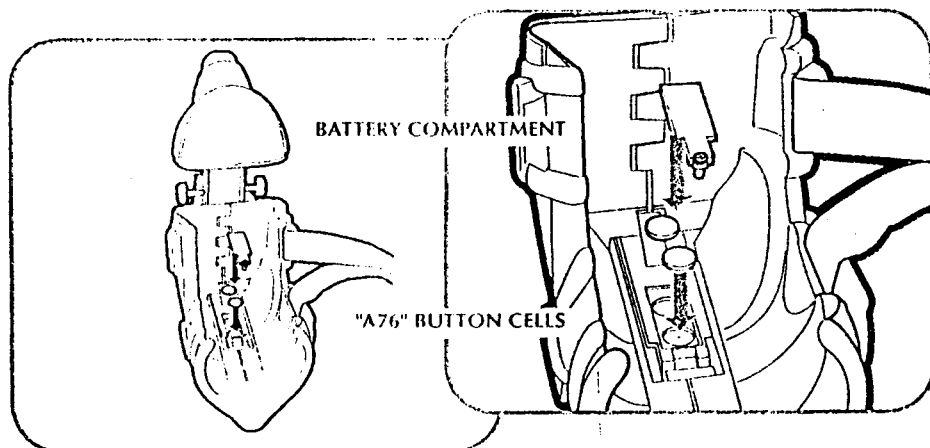

1. To replace batteries, hold skate with toe pointing upward. Use a Phillips screwdriver to loosen (but not remove) the screw that secures the battery door, and remove door. Remove used batteries and insert 2 new "A76" button cells in skate. Replace door, tighten screw with screwdriver, and repeat procedure with the second skate.

CAUTION:

1. As with all small batteries, the batteries included with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
2. Make sure the batteries are inserted correctly and follow the toy and battery manufacturer's instructions.
3. Do not mix old and new batteries.
4. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

© 1997 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office.

U.S. Pat. No. 5,295,701 and U.S. Patent Pending.

ASSEMBLED IN MEXICO FROM CHINESE AND MEXICAN COMPONENTS.

50021 (Girls)

50022 (Boys)

P/N 47189900