

FOOTBALL

ELECTRONIC GAME

 
1 HOW TO WIN

Score as many points as you can! Game consists of a 15 minute quarter. Run, pass, and kick your way to score!

2 REPLACING THE BATTERY

When the battery need replacing, remove the battery compartment lid at the back of the game to take out the exhausted battery and install a new battery of LR 44,SR 44, or equivalent.

Do not use a rechargeable battery.

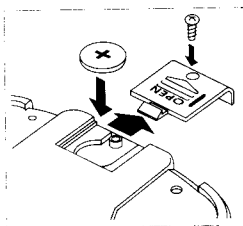

3 CAUTION



High temperature will destroy the unit. Do not leave unit in direct sunlight.



Do not press the liquid crystal display and avoid heavy shock or the display may fall.

 


Clean only with a piece of soft dry cloth.

CAUTION : BATTERIES SHOULD BE REPLACED BY ADULT.

Replace battery at the first sign of erratic operation.

4 CONTROL GUIDE

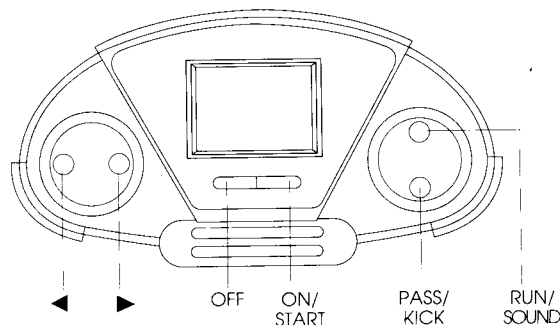

ON/START

- To turn on the unit.
- To start the game.

OFF

RUN/SOUND


- To turn off the unit.
- To run (during game).
- To control sound on or off (during pause before game starts).

PASS/KICK

- To pass (on downs 1/2/3).
- To punt/kick field goal (on down 4).
- To kick for extra point (after touchdown).
- To move left.



- To move right.

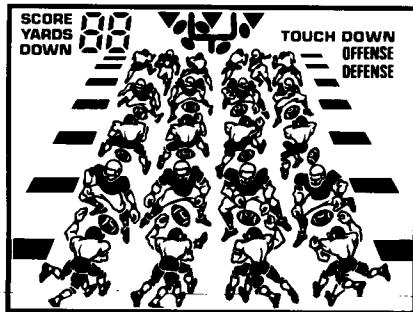

5 HOW TO PLAY

Pull the plastic tab from the battery area to energize your game! Press the ON/START button to turn on the unit. You'll hear an "On" beep and the maximum score is displayed.

You can press the SOUND button to turn sound on or off before the game starts!

Press the ON/START again to start the game! Play begins at your 35 YARD LINE! You are the OFFENSIVE TEAM!

Before each down, indicators flash the sequence of... -DOWN...-YARDS-TO-GO...-FIELD POSITION (then play starts!)

You control your QUARTERBACK! One of your teammates automatically runs in motion in front of you! As the quarterback, use the LEFT and RIGHT buttons to move left and right! Or press the RUN button to run forwards! You can also RUN after moving LEFT and/or RIGHT!

Or press the PASS button to pass the ball to a teammate! If he catches your pass, you'll hear a long tone and the screen clears! The ball is advanced 8 YARDS or 2 YARDS before the goal line! Or your pass could be intercepted by the defense! You can PASS on downs 1/2/3.

On 4TH DOWN, pressing the PASS/KICK button will result in either a PUNT or a FIELD GOAL try! Or you could RUN on 4th down and try for a first down!

To make a first down, you have to cover 10 YARDS in four downs! If you can't make the first down, or you're intercepted, or you punt, the computer team goes on offense!

Then you're PENALIZED 10 YARDS for not making the first down, or if you're already backed up to your own 12 yard line, the ball goes to your own 2 YARD LINE.

You'll hear a short tone (the computer tackling you and stopping you). DEFENSE is flashed on screen, and the rest of the screen clears (this indicates you're automatically playing defense for a moment).

Then your new field position is shown and you're back on offense again! On offense, drive to the goal line for a TOUCHDOWN, which scores 6 POINTS. Then press the KICK button to go for the EXTRA POINT!

If you're short of the goal line on 4th down, press KICK to punt or attempt a field goal. A FIELD GOAL scores 3 POINTS!

After you score a TOUCHDOWN (and the extra point try) or a FIELD GOAL, you start on offense again at your 35 yard line!

At the end of the game, your score is displayed! Press the ON/START button to start a new game after a GAME OVER.

Press the OFF button when you're finished playing. Game shuts off automatically after about 3 minutes of non-play.