


Ages 12 Mos. & Up
6098

Fun Sounds Sketch Pad

Thank you for buying this Playskool® product!


**Includes 2 "AA" batteries. Phillips screwdriver
(not included) needed to replace battery.**

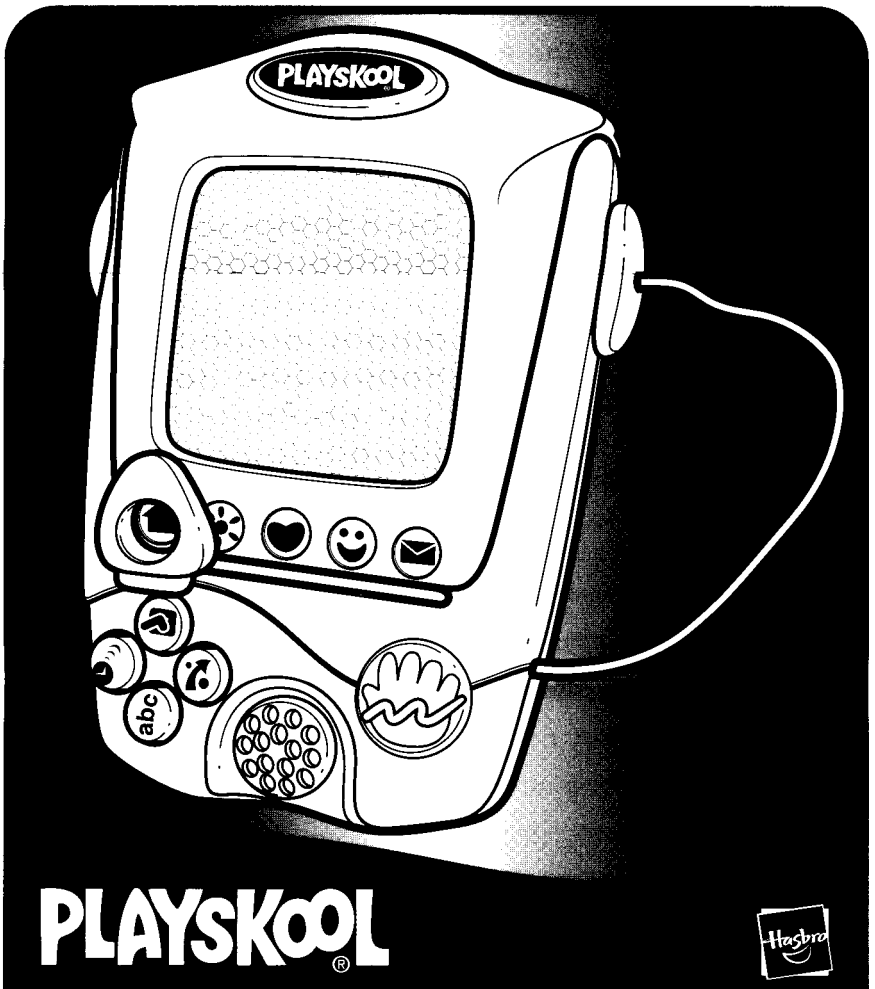

IMPORTANT:

- **Before first time use, darken the writing screen completely, using the easy-grasp pen. Then, slide the erase bar back and forth to clear the screen. Repeat this several times. This will allow you to create the clearest, darkest images on the screen.**
- **Contents may stain fabric. Remove from skin with soapy water.**
- **Do not place product near open flames, heaters, radiators, ovens and other heat sources.**
- **To prevent damage to the screen, do not use excessive force when drawing with pen. Do not use anything other than the attached pen when drawing on screen. Keep sharp objects away from screen.**

TO REPLACE BATTERIES:

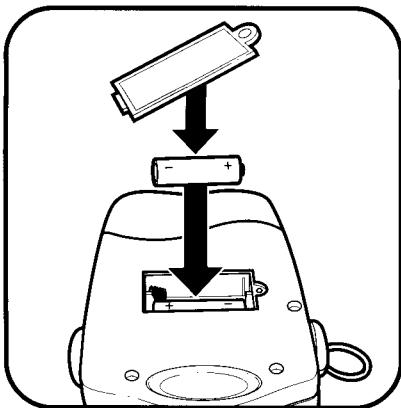

Use a Phillips screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door. Insert 2 fresh "AA" alkaline batteries. Replace door and tighten screw.

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.