

FCC STATEMENT

 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

At Playskool, we want to do all we can to help ensure that children thrive developmentally. That's why we have partnered with the National Campaign for Hearing Health to provide you with this Hearing Checklist for babies.

Your Baby's Hearing Checklist

Provided by
National Campaign for Hearing Health
1050 17th Street NW, Suite 701
Washington, DC 20036

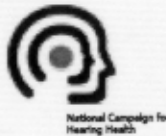

Talk to your doctor if you answer NO to any of these questions:

- | YES | NO | Birth to 3 Months |
|--------------------------|--------------------------|--|
| <input type="checkbox"/> | <input type="checkbox"/> | Reacts to loud sounds |
| <input type="checkbox"/> | <input type="checkbox"/> | Is soothed by your voice |
| <input type="checkbox"/> | <input type="checkbox"/> | Turns head to you when you speak |
| <input type="checkbox"/> | <input type="checkbox"/> | Seems to know your voice and quiets down if crying |
| YES | NO | 3 to 6 Months |
| <input type="checkbox"/> | <input type="checkbox"/> | Looks upward or turns toward a new sound |
| <input type="checkbox"/> | <input type="checkbox"/> | Responds to "no" and changes in tone of voice |
| <input type="checkbox"/> | <input type="checkbox"/> | Enjoys rattles and other toys that make sounds |
| <input type="checkbox"/> | <input type="checkbox"/> | Becomes scared by a loud voice |

The National Campaign for Hearing Health is sponsored by the Deafness Research Foundation. It is a public outreach, professional education and government relations initiative whose goal is to educate the public about hearing health.

Call the National Campaign for Hearing Health at 1.800.535.3323 or visit www.hearinghealth.net for more information.

Based on NIDCD/NIH infant hearing checklist.



 
OVER 12 months

6026

Fun Tunes™ Tractor

Thank you for choosing this unique PLAYSKOOL brand product.

Includes 3 "AA"/R6 (1.5V) batteries. Phillips/crosshead screwdriver (not included) required to replace batteries.

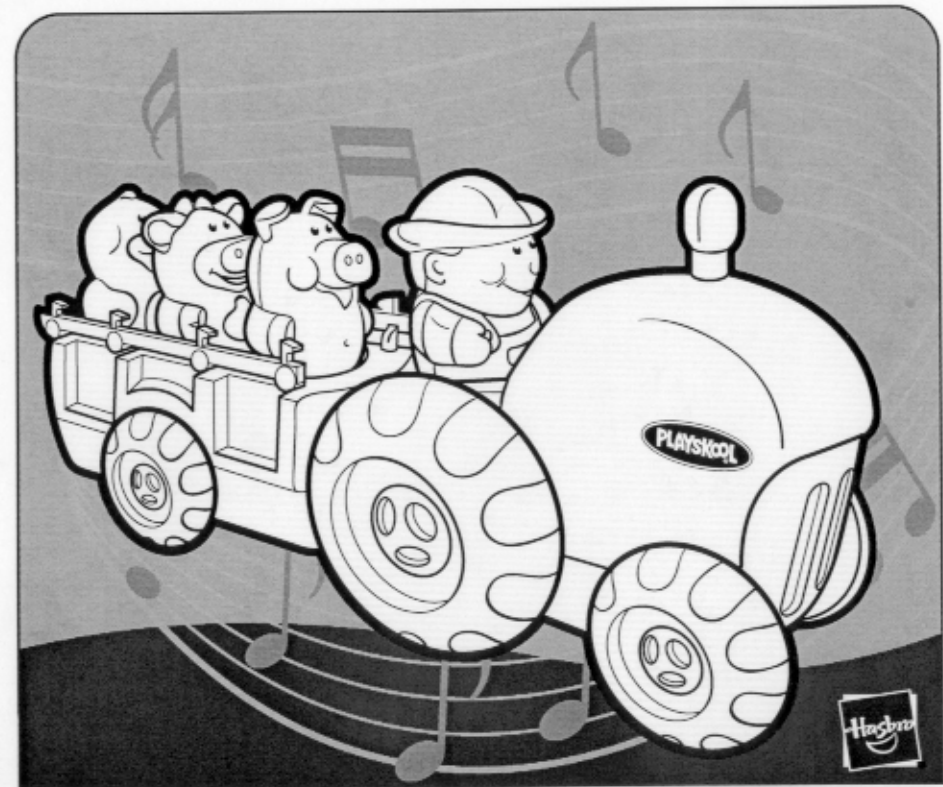


TO PLAY

Please note: The toy is shipped in "DEMO" mode. Move switch to "PLAY" for play at home.

Join the farmer and his animal friends and sing along to the classic children's song, "Old MacDonald Had a Farm."

 
- Place the farmer in the driver's seat, then place an animal in a passenger seat and press the smokestack...you'll hear the farmer sing a verse about that animal! (When you place an animal in a passenger seat, you'll also hear the sound that the animal makes.)
- When the farmer is in the driver's seat and the tractor is empty, he says, "Hey, where is everyone?"
- Place an animal in the driver's seat and you'll hear "Uh, oh...I can't drive!" (The farmer also says this when you place him in a passenger seat.)

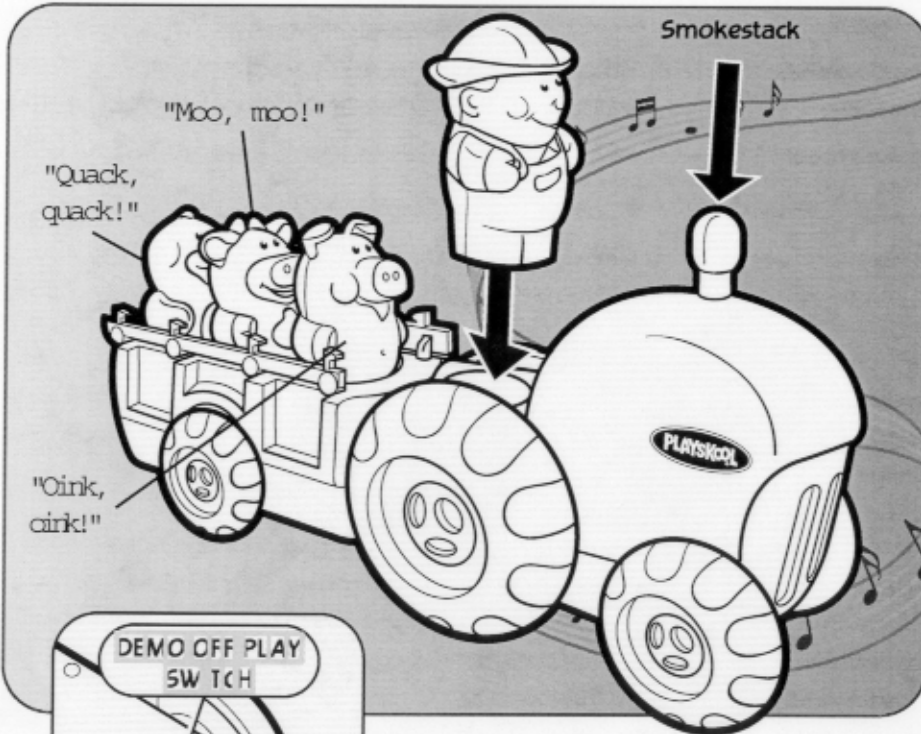

Note: To prevent accidental activation, slide the switch on back of toy to "OFF."

TO REPLACE BATTERIES

 Use a Phillips screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door. Insert 3 fresh "AA"/LR6 alkaline batteries. Replace door and tighten screw.

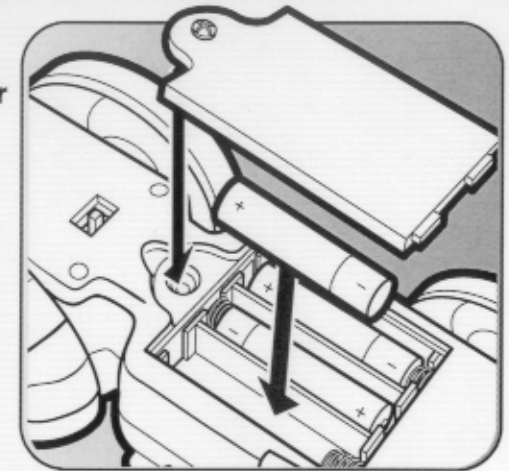

⚠ CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.