

AGES 4+  
70439

GO GO  
My GO  
Walkin' Pup™

## Training Guide



FurReal  
friends™

 


© 2003 Hasbro. All Rights Reserved.  
® denotes Reg. U.S. Pat. & TM Office.  
U.S. Patent Pending  
70439 P/N 6246800100

**TIGER**  
ELECTRONICS

**TIGERTOYS.COM**   
For new products and offers

Questions? Call: 1-800-327-8264



Thank you for purchasing the FURREAL FRIENDS GO GO MY WALKIN' PUP toy, the family friend that walks and plays like a REAL dog!

Requires 4 x 1.5V "C"/LR14 alkaline batteries (not included). Phillips/cross head screwdriver (not included) needed to insert batteries.

FURREAL FRIENDS GO GO MY WALKIN' PUP is the newest member to the FURREAL FRIENDS family! She's a lifelike, affectionate dog that comes to life when you touch her! She responds to sounds and will walk towards you when you call her! She even barks, growls and whimpers just like a REAL dog!

Be sure to take good care of GO GO MY WALKIN' PUP by following the instructions in this booklet!

To begin playing with GO GO MY WALKIN' PUP, you must first install batteries.



## **CAUTION:**

Hair entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.

## MEET GO GO MY WALKIN' PUP

 
GO GO MY WALKIN' PUP loves to be petted and played with! Before you begin playing with GO GO MY WALKIN' PUP, be sure to brush her hair thoroughly to make her look pretty!

GO GO MY WALKIN' PUP is just like a REAL dog in many ways! She loves when you pet her, but most of all, GO GO MY WALKIN' PUP can recognize the sound of your voice! If you talk to her or call her name, she will cock her head to acknowledge that she has heard you. Call her again and she will begin to walk in the direction of your voice. Periodically, she will stop and wait until she hears your voice again. Keep talking to GO GO MY WALKIN' PUP and she will come to you! GO GO MY WALKIN' PUP listens to you best when you play with her in a quiet environment.

If you would like to make GO GO MY WALKIN' PUP stay still, pet her forehead. Continue petting her and she will not move towards your voice, because she is happy while being petted!

## TO INSTALL BATTERIES

Use a Phillips/cross head screwdriver to loosen screw in battery compartment cover (screw stays attached to cover) on the bottom. Insert 4 X 1.5V "C"/LR14 alkaline batteries. Replace cover and tighten screw.

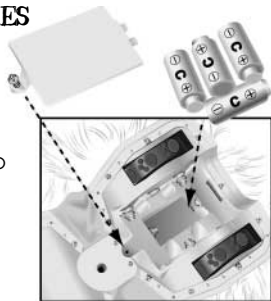

## ⚠ CAUTION: TO AVOID BATTERY LEAKAGE

- Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- Always remove weak or dead batteries from the product.

## IMPORTANT: BATTERY INFORMATION

 
 
Please retain this information for future reference. Batteries should be replaced by an adult.

## ⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

## GETTING STARTED

GO GO MY WALKIN' PUP consists of the following parts:

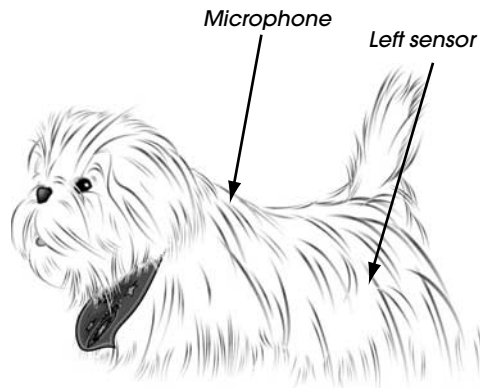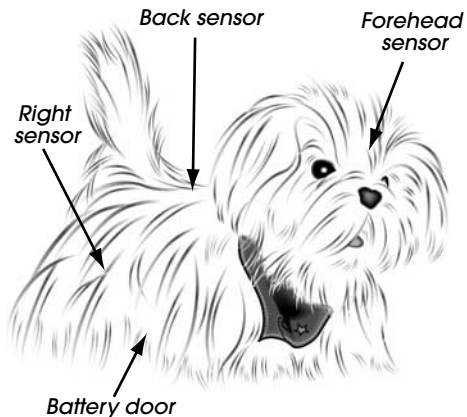

GO GO MY WALKIN' PUP makes a variety of realistic dog sounds and really:

- Barks
- Pants
- Whines
- Yawns
- AND...Growls – but not in a scary way!

## HOW TO PLAY WITH GO GO MY WALKIN' PUP

 
To turn GO GO MY WALKIN' PUP **ON** switch the **ON/OFF** switch to **ON**.



Once turned on, she will bark, and then rock back and forth while panting.



Note: GO GO MY WALKIN' PUP will go to sleep and shut down if she is not played with for a few minutes. You can wake her up by petting her forehead. Please remember to turn the ON/OFF switch to the OFF position if she will not be played for a while, to conserve battery life.

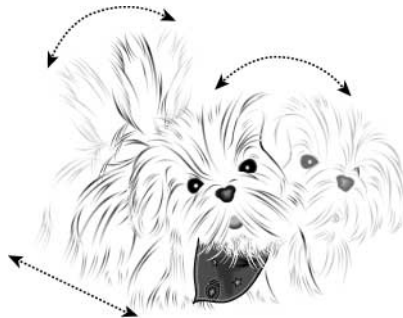

To wake her up, gently pet her forehead, back, left or right side.


GO GO MY WALKIN' PUP is just like a real dog in many ways – she loves attention and to be petted. If you pet her gently on her forehead and stroke her back you will make her happy.

The following illustrations show how you can pet her:

*Forehead  
Sensor*



 *Right Side  
Sensor*

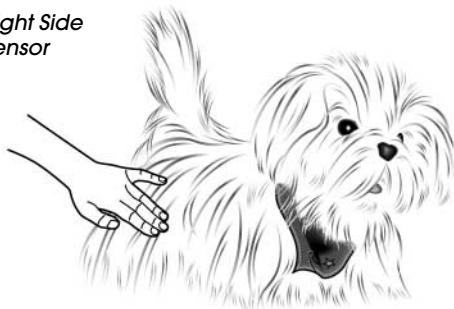

*Left Side  
Sensor*



*Back Sensor*



For more fun interaction with GO GO MY WALKIN' PUP try these advanced tricks:

## Grooming

To activate GO GO MY WALKIN' PUP grooming mode, pet one of her sides, followed by her head, her back, her head, and her back once again. She will stop all walking movement and will only turn her head to respond to petting and sounds. When grooming, please make sure she is on a stable, solid surface. Now, comb and decorate her with hair clips and ribbons.

\*NOTE: Hair clips and ribbons are not included. To get GO GO MY WALKIN' PUP out of grooming mode, press her forehead sensor or back sensor for 5 seconds.

## Guarding

To activate Guard mode, press and hold down her left side for 5 seconds. She will growl, which alerts you that she is in Guard mode. She will not move, but instead will turn towards any sounds and growl gently. Guard mode will END once she is petted and she will become happy and bark enthusiastically.

**Stay:** To make her stay, hold her right side for 5 seconds. Then, as you walk away, speak three commands to her. Upon the third and final command, she will come to you.

**Circular Parade:** Pet either of her sides 5 times to make her parade in circles!

## Sleep

Sometimes she will need to rest, so if you stop playing with her, she will fall asleep!

Do not play with GO GO MY WALKIN' PUP on sand, grass, or dirt covered surfaces.

## CLEANING INSTRUCTIONS

To clean your dog's fur, gently brush her with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- DO NOT PUT IN THE WASHING MACHINE
- DO NOT SUBMERGE IN WATER
- DO NOT GET WET EXCEPT A DAMP CLOTH ON THE FUR
- TO PREVENT STAINING THE FUR, WIPE DIRT OFF IMMEDIATELY
- IF THE DOG GETS WET, REMOVE THE BATTERIES AND DRY THE FUR
- ONCE COMPLETELY DRY, REPLACE THE BATTERIES
- DO NOT USE DETERGENT OR STAIN REMOVERS ON THE FUR



High temperature will destroy the unit. Do no leave unit in direct sunlight.



Clean only with a piece of soft dry cloth.

- Prevent spills of food and beverage on the unit.
- Do not throw or kick the product, and do not push sharp objects through the speaker openings.

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help