


INSTRUCTION MANUAL

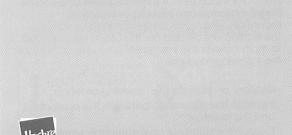



P/N 6422310000


© 2004 Hasbro. All Rights Reserved. ® denotes Reg. U.S. Pat. & TM Office.

Patent Pending.

70066


TIGERTOYS.COM

Questions? Call 1-800-327-8264

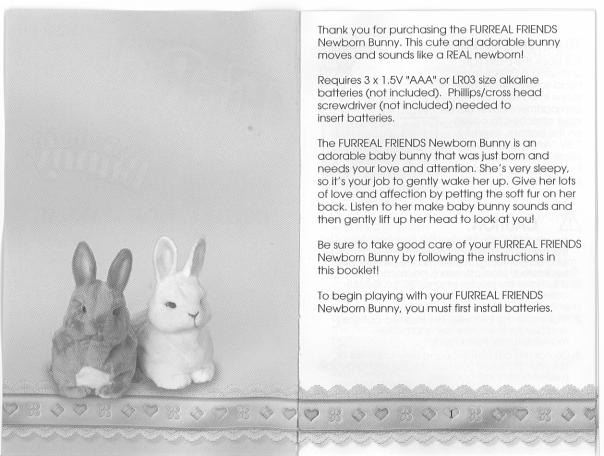

TO INSTALL BATTERIES

Pull back the plush flap, and using a Phillips/cross head screwdriver, loosen screw in battery compartment cover (screw stays attached to cover) on the bottom. Insert 3 X 1.5V "AAA" or LR03 size alkaline batteries (not included). Replace cover and tighten screw.

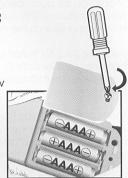

1

CAUTION:

- As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and, in the U.S., have the doctor phone (202) 625-3333 collect, or, in Canada, have the doctor call your provincial Poison Control Centre.
- Make sure the batteries are inserted correctly and always follow the toy and battery manufacturers' instructions;
- Do not mix old batteries and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.




CAUTION:

- Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
- Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.
- Remove batteries if product is not to be played with for a long time.
- 5. Do not short circuit the supply terminals.
- 6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
- As with all small items, these batteries should be kept away from children. If swallowed, seek medical attention immediately.

GETTING STARTED


Your FURREAL FRIENDS Newborn Bunny consists of the following parts:

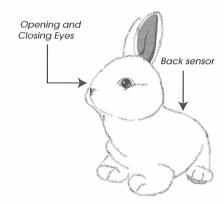


Your Bunny makes a variety of realistic sniffing sounds and other cute bunny sounds to let you know when she is happy, playful, sleepy, or needs some love and attention!

HOW TO PLAY WITH YOUR NEWBORN BUNNY

To turn your Newborn Bunny ON, pull back the plush flap over the battery door and switch the ON/OFF switch to ON. Then replace the flap.

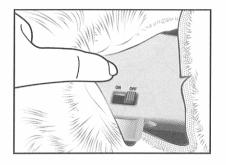

Once turned on, your sleepy Newborn Bunny will begin to wake up. She will start to move her head to an upright "awake" position and will then open her eyes. Now it's time to play with your bunny!

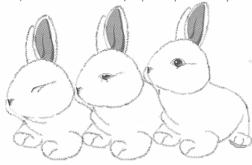

There are two ways to interact with your Newborn Bunny. If you pet her every so often, she will stay awake and will continue to move her head and open her eyes. Keep petting her every few seconds to keep her happy and playful!



Or, if you want to put your Bunny to sleep, pet her constantly without stopping. This nurturing type of petting will calm her down and make her lay down, close her eyes, and go back to sleep. If you stop petting her altogether, she will go back to sleep.



Note: Please remember to turn the ON/OFF switch to the OFF position if she will not be played with for a while, to conserve battery life.

Your Bunny is like a real bunny in many ways. Show her lots of love and affection to keep her happy!

CLEANING INSTRUCTIONS

To clean your bunny's fur, gently brush her with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- DO NOT PUT IN THE WASHING MACHINE
- DO NOT SUBMERGE IN WATER
- DO NOT GET WET EXCEPT A DAMP CLOTH ON THE FUR
- TO PREVENT STAINING THE FUR, WIPE DIRT OFF IMMEDIATELY
- IF THE BUNNY GETS WET, REMOVE THE BATTERIES AND DRY THE FUR
- ONCE COMPLETELY DRY, REPLACE THE BATTERIES
- DO NOT USE DETERGENT OR STAIN REMOVERS ON THE FUR



High temperature will destroy the unit. Do not leave unit in direct sunlight.



Clean only with a piece of soft dry cloth.

- Prevent spills of food and beverage on the unit.
- Do not throw or kick the product, and do not push sharp objects through the speaker openings.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no augrantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.