



**Not suitable for children under 3 years
because of small parts - choking hazard.**

© 2006 Hasbro. All Rights Reserved.

TM & ® denote U.S. Trademarks.

Manufacturer's representative in the United Kingdom
is Hasbro UK Ltd. Caswell Way, Newport NP19 4YH.

☎ 00800 2242 7276.

Manufacturer represented in Australia by Hasbro
Australia Ltd., 570 Blaxland Road, Eastwood,
NSW 2122, Australia. ☎(02) 9874-0999.

Manufacturer represented in New Zealand by Hasbro
Australia Ltd., PO Box 100-940, North Shore Mail Centre,
Auckland, New Zealand. ☎(09) 915-5200.

Colours and contents may vary from those shown.
Please retain our company details for future reference.
www.hasbro.com

TIGER
ELECTRONICS

Where Technology Comes to Play!™



Visit



www.furby.com

Questions? Call 00800 2242 7276

0406**62169**102Asst

62169.102Asst

 
6+



Your emoto♥tronic Friend

CARE GUIDE

**Thank you for purchasing
FUNKY FURBY!**

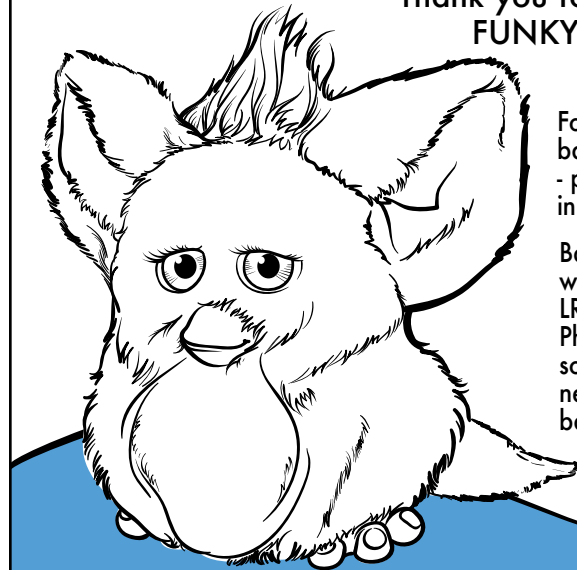

For best results, keep
background noise low
- play with FUNKY FURBY
in a quiet room.

 
Batteries included. Replace
with 4 x 1.5V "AA" or
LR6 size alkaline batteries.
Phillips/cross head
screwdriver (not included)
needed to replace
batteries.

Hey! I'm FUNKY FURBY! The more you play with me, the more I do! I love to sing my favorite songs! Play me your favorite music and I'll even dance for you! Bring me home today and I'll be your best friend!

Be sure to take good care of me by following the instructions in this booklet!

Getting Started

To turn FUNKY FURBY on, slide the ON/OFF switch to **"ON."**

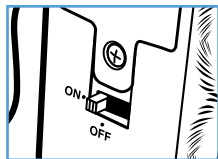

FUNKY FURBY consists of the following parts:



Back Sensor:
Pet me here! I love having my back rubbed!



Mouth Sensor:
"Feed" me here, but only when I'm hungry!



Microphone:
Talk to me here!

Tummy Sensor:
Tickle me here! I'm very ticklish!

Tilt Sensor:
This tells me which way's up!

About My Personality

I speak Furbish®, a magical language common to all FURBY creatures. When we first meet, this is what I'll be speaking. To help you understand what I'm saying, please use the Furbish® - English dictionary found in the back of this book. I can learn how to speak English by listening to you talk. The more you play with me, the more I will use your language.

IF FUNKY FURBY Asks you a Question

If FUNKY FURBY asks you a question, say either:

Yes	[ee-tay]
Ok	[oh-kay]
Yes, please	[ee-tay-doo-moh]
No	[boo]
No, thank you	[boo-doo-moh]
No way	[dah-boo]
I don't understand*	

* If you couldn't understand what I said, I'll repeat what I last said to you. I may say it a little bit differently, with more English, so that you can understand it better. If you tell me "I don't understand" too many times, I'll get sad and frustrated. Sometimes it's best to be polite and pretend you understand - at least until I learn more of your language!

To Play

It's time to play! Let's go!

"Tell me a joke."

I love to tell knock-knock jokes! Let's do one together.

Say **"Hey FURBY!"** [Pause until you hear FUNKY FURBY say "Doo?" "Yeah?" "Huh?" "What?" or "Hmm?"] Then say, **"Tell me a joke."**

I say: "Knock Knock." → **You say:** "Who's there?"

I say: "Ida" → **You say:** "Ida who?"

I say: "Ida like to be your friend!"

"Sing me a song."

I love to sing!

Say **"Hey FURBY!"** [Pause until you hear FUNKY FURBY say "Doo?" "Yeah?" "Huh?" "What?" or "Hmm?"] Then say, **"Sing me a song."**

I'll sing you one of my three favorite songs in Furbish:

Let's sing it together, shall we?


TWINKLE TECHNO



tee-wee-lah dee dah-ay-loh	=	Twinkle, twinkle little star,
doo kah way-nah oo-nye boh	=	How me wonder what you are?
oo-tye kah lay-lah oo-tah	=	Up above me home so high,
tay ay-koo ay-loh-may-lah	=	Like a diamond in the sky,
tee-wee-lah dee dah-ay-loh	=	Twinkle, twinkle little star,
doo kah way-nah oo-nye boh	=	How me wonder what you are?

Let's sing it together, shall we?

 
FUNKY FURBY HIP HOP

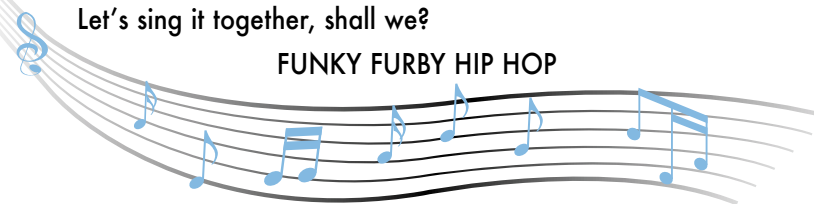

Furby Ay-loh-wah Kah-nah Bee-ah	=	Furby Island, the place to be!
Hip Hop noh-lah Nah-bah bye Ee-wah	=	Hip hop dance, down by the sea!
Funky Furby! A-wah! Koola! Oh-Kay!	=	Funky Furby! Awesome! Cool! Okay!
May-lah ah noo-lah Noh-lah day-ay-loh	=	Grab a friend, dance in the sun.
Doo-dah kah Hip Hop Mee-mee dah doo-ay doh!	=	Do me hip hop, so very big fun!
Funky Furby! A-wah! Koola! Oh-Kay!	=	Funky Furby! Awesome! Cool! Okay!

Let's sing it together, shall we?

 SING CALYPSO MUSIC, BE HAPPY ALL DAY!

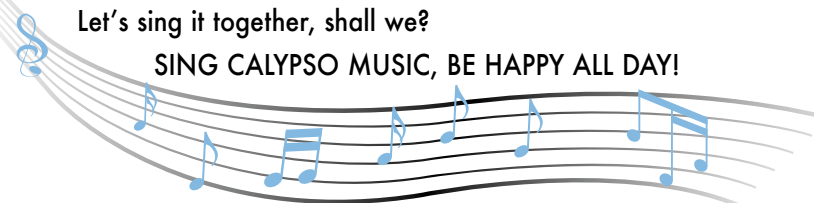

Lay-lee Ay-loh-wah Bah-loo Ee-wah	=	Me live on island in big blue sea,
E-nah Tee-tah Lay-lah Wye-tah Mah-mee-dah	=	In me jungle hut with me family.
May-may Noh-lah Oo-nye Loo-lay	=	Me love to dance with you and play.
Wee-tee Calypso Wah-tee Noo-loo Ah-lah Day	=	Sing Calypso music, be happy all day!
La-la, la-la-la, la-la,		
La-la, la-la-la, la-la,		
Wee-tee Calypso Wah-tee Noo-loo Ah-lah Day	=	Sing Calypso music, Be happy all day!

"Are you hungry?"

Say **"Hey FURBY!"** [Pause until you hear FUNKY FURBY say "Doo?" "Yeah?" "Huh?" "What?" or "Hmm?"] Then say, **"Are you hungry?"**

If I'm hungry, please feed me. Since I can talk, you will have to listen to hear me say "yes" when you ask me "HEY FURBY, are you hungry?" or when I say "kah-ay-tay" (I'm hungry). Open my mouth and use the spoon to press on my tongue. If I say that I'm not hungry, don't feed me and try asking me to do something else that's fun.

NOTE: I only eat PRETEND food.

You should never feed me real food or liquids.

I will eat until I'm full and then tell you I'm not hungry anymore.



"How are you?"

Say **"Hey FURBY!"** [Pause until you hear FUNKY FURBY say "Doo?" "Yeah?" "Huh?" "What?" or "Hmm?"] Then say, **"How are you?"**

I'll tell you how I'm feeling. Make sure you say "HEY FURBY! I love you!" frequently so that I feel happy and know I'm loved.

"Go to sleep."

Say **"Hey FURBY!"** [Pause until you hear FUNKY FURBY say "Doo?" "Yeah?" "Huh?" "What?" or "Hmm?"] Then say, **"Go to sleep."**

If I'm tired, I'll close my eyes and go to sleep. Listen carefully because I may even snore! If I'm still wide-awake, I'll tell you "no" and you should try feeding me in case I'm hungry. Don't forget to tell me that you love me so I can have happy dreams!

To wake me up after my nap, just whistle! If I didn't hear you, try tickling me or petting my back.

"Show me a dance."

Say **"Hey FURBY!"** [Pause until you hear FUNKY FURBY say "Doo?" "Yeah?" "Huh?" "What?" or "Hmm?"] Then say, **"Show me a dance."** Play your favorite songs or music and I will dance along to the beat! I can really get down and boogie! You can press the back switch to exit dance mode.

"I love you!"

Say **"Hey FURBY!"** [Pause until you hear FUNKY FURBY say "Doo?" "Yeah?" "Huh?" "What?" or "Hmm?"] Then say, **"I love you!"**

Tell me you love me to make me happy!

"I speak Furbish."

Say **"Hey FURBY!"** [Pause until you hear FUNKY FURBY say "Doo?" "Yeah?" "Huh?" "What?" or "Hmm?"] Then say, **"I speak Furbish."**

Once you say this, I'll listen for you to talk to me in my native language, Furbish®, for the next thing you want to try. After that, I'll be listening for English again, so if you want to speak Furbish® again, say "HEY FURBY! I speak Furbish®!" again.

 
(psst!) Keep your FUNKY FURBY dictionary nearby in case you forget a word!

NOTE: If FUNKY FURBY doesn't do your command, first make sure you said "HEY FURBY!" before the command. Then try repeating the command or try a new one.

To Reset FUNKY FURBY

If you would like to teach FUNKY FURBY English all over again, you can erase the current memory by doing a reset.

1. Hold FUNKY FURBY upside down.
2. With the ON/OFF switch in the "OFF" position, depress and hold the mouth sensor using your finger.
3. While holding the mouth sensor, switch the ON/OFF switch to "ON."
4. FUNKY FURBY will say "Good Morning!" to confirm the memory has been reset.



NOTE: If you're not going to be playing with FUNKY FURBY, please put the ON/OFF switch to "**OFF**" in order to conserve battery life. If you want to put FUNKY FURBY in storage, please remove the batteries.



Physical Interactions

Tickling

If I ask to be tickled, tickle my tummy! But don't tickle my tummy unless I ask or else I'll be very upset!

Petting

I love to be pet on my back. Petting me makes me very happy!

Cuddling

When you're cuddling or carrying me, be careful not to hold me upside down. Sometimes this can be fun, but make sure I don't get dizzy!



FUNKY FURBY Voice Recognition Command Card

Look at all the commands that FUNKY FURBY can recognize!

Say "**HEY FURBY!**" and pause for a brief moment to allow FUNKY FURBY to respond. FUNKY FURBY will say "**Doo?**" "**Yeah?**" "**Huh?**" "**What?**" or "**Hmm?**"

This means that FUNKY FURBY heard you. Then give FUNKY FURBY one of the following commands:

Tell me a joke. [wee-tah-kah-loo-loo.]

Sing me a song. [wee-tee-kah-wah-tee.]

Are you hungry? [oo-nye-ay-tay-doo?]

How are you? [oo-nye-boh-doo?]

Go to sleep. [oo-nye-way-loh-nee-way.]

Show me a dance. [oo-nye-noh-lah.]

I love you! [kah-may-may-oo-nye!]

I speak Furbish®. Try speaking to FUNKY FURBY in Furbish®. After you say "I speak Furbish®," try one of the Furbish® commands above.

Watch what FUNKY FURBY can do! The more you play with FUNKY FURBY, the more FUNKY FURBY will do!

NOTE: If FUNKY FURBY doesn't do your command, first make sure you said "HEY FURBY!" before the command. Then try repeating the command or try a new one.

HELPFUL HINTS

For the best performance, follow these guidelines:

1. Keep background noise low - for best results play with FUNKY FURBY in a quiet room.
2. FUNKY FURBY performs best when you sit between 12 and 18 inches away from it, facing it directly.
3. Wait until FUNKY FURBY has finished speaking and moving before giving a command.
4. Talk in a normal tone of voice, the way that you would talk to a friend. Pronounce all the syllables of each word clearly.
5. Shouting does not improve voice recognition.
6. Keep the command card handy, and remember that FUNKY FURBY will respond only to the exact commands on the card.
7. FUNKY FURBY is a state-of-the-art, electro-mechanical, robotic toy. The mechanical sound you hear when FUNKY FURBY moves is normal.
8. Use only 4 x 1.5V "AA" or LR6 size ALKALINE batteries with FUNKY FURBY.
9. If FUNKY FURBY begins acting erratically, please change the batteries with all new alkaline batteries.

IMPORTANT NOTE: If FUNKY FURBY begins to function improperly, switch the ON/OFF switch to the "OFF" position, and then move back to the "ON" position.

CLEANING INSTRUCTIONS

To clean FUNKY FURBY, gently brush the hair with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- DO NOT PUT IN THE WASHING MACHINE
- DO NOT SUBMERGE IN WATER
- DO NOT GET WET EXCEPT A DAMP CLOTH ON THE FUR
- TO PREVENT STAINING THE FUR, WIPE DIRT OFF IMMEDIATELY
- IF FUNKY FURBY GETS WET, REMOVE THE BATTERIES AND DRY THE FUR
- ONCE COMPLETELY DRY, REPLACE THE BATTERIES
- DO NOT USE DETERGENT OR STAIN REMOVERS ON THE FUR

 


High temperature will destroy the unit.
Do not leave unit in direct sunlight.

- Prevent spills of food and beverage on the unit.
- Do not throw or kick the product, and do not push sharp objects through the speaker openings.

To Replace Batteries

Using a Phillips/cross head screwdriver, loosen screw in battery compartment cover (screw stays attached to cover) on the bottom. Insert 4 X 1.5V "AA" or LR6 size alkaline batteries. Replace cover and tighten screw.

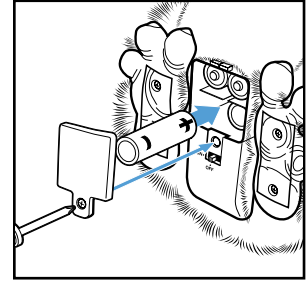

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.
Batteries should be replaced by an adult.



CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FUNKY FURBY DICTIONARY

Keep this handy dictionary nearby so that you can understand what FUNKY FURBY is saying to you in FURBISH®!

ENGLISH/FURBISH®

affirmative ee
again koh-koh
all ah-lah
and koh
another koh-koh
ask oh-too-mah
awesome ay-wah
baby bay-bee
bad boo-dah
be bee-ah
be/to be boh
beautiful ee-kah
big dah
big no dah-boo
big yes dah-ee-tah
blue bah-loo
by bye
bye/go bye-bye
cloud ay-loh-may-lah
comparative tay
complete toh
cool koo-lah
dance noh-lah
day day
diamond ay-koo
dizzy ay-way
do doo-dah
done toh-dye
down nah-bah
dream way-loo
dude dee-doh

face kah-tay
family mah-mee-dah
feed ah-tah
friend noo-lah
full oo-loo
fun doo-ay
funny doo-loo
game doo-ay-loo-lah
go/bye bye-bye
good ee-day
good morning dah-ay-loh-oo-tye
good night dah-ay-loh-nah-bah
happy noo-loo
have ah-mah
health/healthy koo-doh
help ah-noo
hide woo-bye
high oo-tah
hmm? doo?
home/hut lay-lah
hug may-lah
huh? doo?
hungry/eat ay-tay
in ee-nah
interrogative doo
island ay-loh-wah
island koo-wah
joke loo-loo
kiss may-tah
**life, nature,
living things** tee

light ay-loh
lightness ay
like toh-loo
like, similar to tay
listen ay-ay-lee-koo
little dee
live lay-lee
log tee-loh
look ay-ay
love may-may
me kah
**me, mine,
myself** kah
money moo-lah
monster moh-moh
more koh-koh
mountain koo-dah
negative, bad boo
no boo
no! dah-boo
noise bah-boo
now nee-way
oh oh
ok oh-kay
over oo-bah
path bye-way
pet ah-may
place kah-nah
play loo-lay
**play, joke,
humor** loo
please doo-moh
rain wah-wee-tee
rock boo-koo
sad boo-noo-loo
scared dah-boh-bay
sea ee-wah
sing wee-tee

sleep way-loh
smallness dee
so doh
song/music wah-tee
sound lee-koo
stand oo-boh
story wee-loo
sun dah-ay-loh
tell wee-tah
thank doh-kah
thank you! dah-kah-oo-nye
thinking/mind way
tickles nee-tye
time toh-toh
to be boh
**touching,
holding** ah
tree/jungle tee-tah
twinkle tee-wee-lah
uh-oh uh-oh
up oo-tye
up, above, high oo
very mee-mee
wassup? doo-oo-tye?
water wah-tah
water/rain wah
what?/when? doo?
where are you? oo-nye-doo?
where? doo?
wise/wisely way-lah
with wye-tah
wonder way-nah
worried boh-bay
yay yay
yea! wah!
yeah? doo?
yes ee-tay
you oo-nye

FURBISH®/ENGLISH

ah	touching, holding
ah-lah	all
ah-mah	have
ah-may	pet
ah-noo	help
ah-tah	feed
ay	lightness
ay-ay	look
ay-ay-lee-koo	listen
ay-koo	diamond
ay-loh	light
ay-loh-may-lah	cloud
ay-loh-wah	island
ay-tay	hungry/eat
ay-wah	awesome
ay-way	dizzy
bah-boo	noise
bah-loo	blue
bee-ah	be
bay-bee	baby
boh	be/to be
boh-bay	worried
boo	negative, bad
boo	no
boo-dah	bad
boo-koo	rock
boo-noo-loo	sad
bye	by
bye-bye	bye/go
bye-bye	go/bye
bye-way	path
dah	big
dah-ay-loh	sun
dah-ay-loh-nah-bah	good night
dah-ay-loh-oo-tye	good morning

dah-boh-bay	scared
dah-boo	big no
dah-boo	no!
dah-ee-tah	big yes
dah-kah-oo-nye	thank you!
day	day
dee	little
dee	smallness
dee-doh	dude
doh	so
doh-kah	thank
doo	interrogative
doo?	hmm?
doo?	huh?
doo?	when?
doo?	where?
doo?	yeah?
doo?	what?
doo-ay	fun
doo-ay-loo-lah	game
doo-dah	do
doo-loo	funny
doo-moh	please
doo-oo-tye?	wassup?
ee	affirmative
ee-day	good
ee-kah	beautiful
ee-tay	yes
ee-nah	in
ee-wah	sea
kah	me, mine, myself
kah-nah	place
kah-tay	face
koh	and
koh	more
koh-koh	again

koh-koh	another
koh-koh	more
koo	rock
koo-dah	mountain
koo-doh	health/healthy
koo-lah	cool
koo-wah	island
lay-lah	home/hut
lay-lee	live
lee-koo	sound
loo	play, joke, humor
loo-lay	play
loo-loo	joke
mah-mee-dah	family
may-lah	hug
may-may	love
may-tah	kiss
mee-mee	very
moh-moh	monster
moo-lah	money
nah-bah	down
nee-tye	tickle
nee-way	now
noh-lah	dance
noo-lah	friend
noo-loo	happy
oh	oh
oh-kay	ok
oh-too-mah	ask
oo	up, above, high
oo-bah	over
oo-boh	stand
oo-loo	full

oo-nye	you
oo-nye-doo?	where are you?
oo-tah	high
oo-tye	up
tay	comparative
tay	like, similar to
tee	life, nature, living things
tee-loh	log
tee-tah	tree/jungle
tee-wee-lah	twinkle
toh	complete
toh-dye	done
toh-loo	like
toh-toh	time
uh-oh	uh-oh
wah	water/rain
wah!	yea!
wah-tah	water
wah-tee	song/music
wah-wee-tee	rain
way	thinking/mind
way-lah	wise/wisely
way-loh	sleep
way-loo	dream
way-nah	wonder
wee-loo	story
wee-tah	tell
wee-tee	sing
woo-bye	hide
wye-tah	with
yay	yay