

Hide and Seek.....



Your Furby can sense changes in light. Furby can tell when it gets dark and when it gets light.

If you Walk or Run with Furby through areas where it is light and dark such as going inside from outside. Furby may think you want to play hide and seek.

If this happens, Furby will become quiet and "hide".

If you want to play with Furby when Furby does this, simply turn him upside down to end the game.

Furby will say "Me done".

Then Furby will be ready to play again.





