 




Gentle Vibes™

Requires 2 "C" alkaline batteries (not included). Phillips screwdriver required for battery insertion. Fits most cribs, strollers, playards, carriers and bouncers.



PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

Dear Parent,

Thank you for choosing Playskool's Gentle Vibes for your child. This unique product was designed to help calm your baby by creating soothing vibrations similar to those felt during a car ride. To ensure that you - and your baby - receive maximum value from this device, please be sure to read and follow all instructions carefully.


If you have any questions, comments, or need additional information concerning this product or its parts, please call our Playskool Consumer Service hotline at 1-800-PLAYSKL (1-800-752-9755), Monday through Friday, 8:00 AM to 5:00 PM Eastern Time.

All written inquiries should be mailed to:

Playskool Consumer Service Department
P.O. Box 200, Pawtucket, Rhode Island 02862-0200

BATTERY PLACEMENT

With a Phillips screwdriver, unscrew and remove 4 screws from the back of product. Remove top. Insert 2 "C" alkaline batteries into the battery compartment, using the diagram in the compartment for proper placement. Replace top and retighten screws.

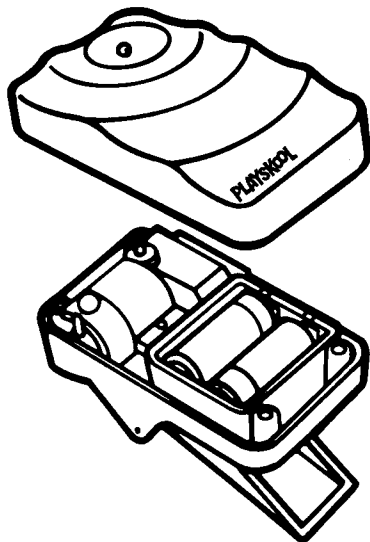


CAUTION: To avoid battery leakage:

1. Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instructions.
2. Do not mix old or new batteries, or alkaline, standard (carbon-zinc) or rechargeable batteries.
3. Always remove exhausted or dead batteries from the product.
4. Remove batteries if product is stored for a long period of time.

TO OPERATE

LED status indicator (light is on during motion)

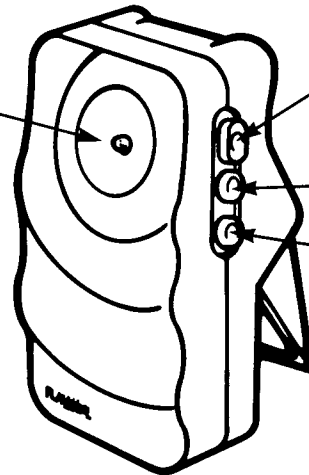

OFF (automatic shut-off after 20 minutes)


ON/LOW

ON/HI

To activate motion, press one of the ON buttons:

- Press ON/LOW for vibrations of lower intensity, and ON/HI for vibrations of higher intensity.
- Press OFF button to stop motion. Gentle Vibes will also shut off automatically after twenty minutes of motion.



TO ATTACH

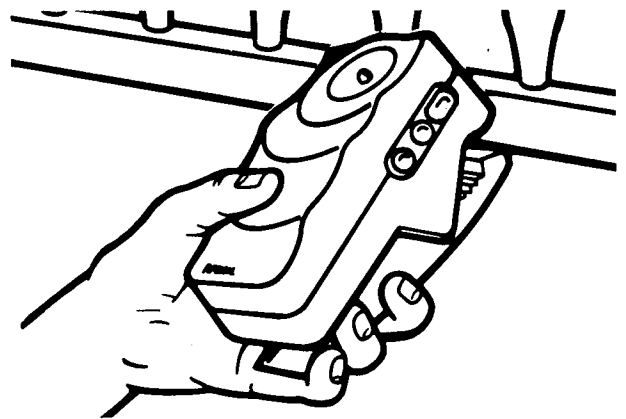


Gentle Vibes™ easily attaches to a variety of baby furniture. Simply squeeze open the clip, and clamp the device to slats, frames, etc., in the places shown on the back of this page..

WARNING: DO NOT clamp Gentle Vibes to top rail of playard, playpen, crib, cradle or bassinet, due to the possibility of a child's clothing getting caught on the open end of the clip. When Gentle Vibes is used on a crib, the crib sides should be raised and the mattress should be in one of the lower positions.



PLAYARD

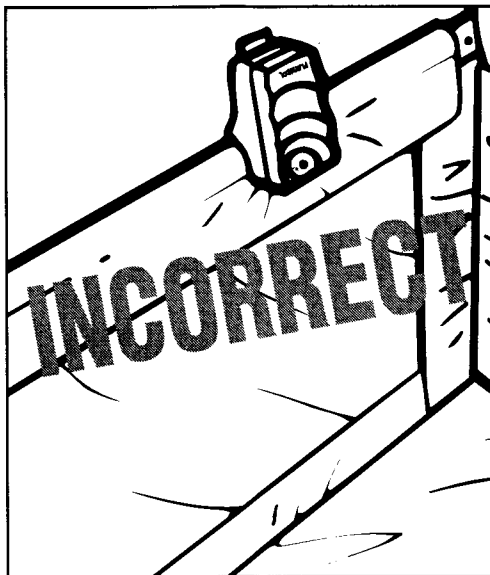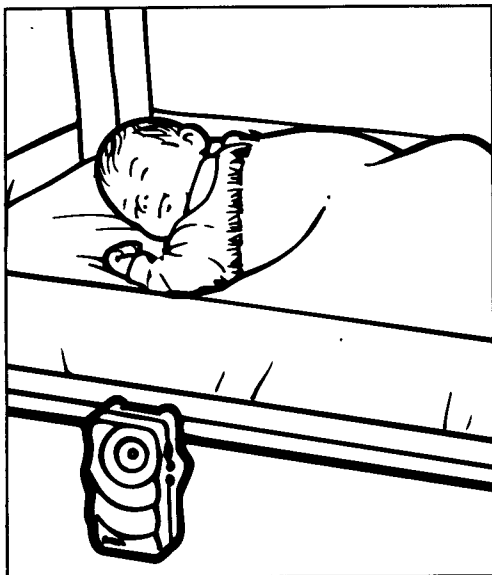

BOUNCER

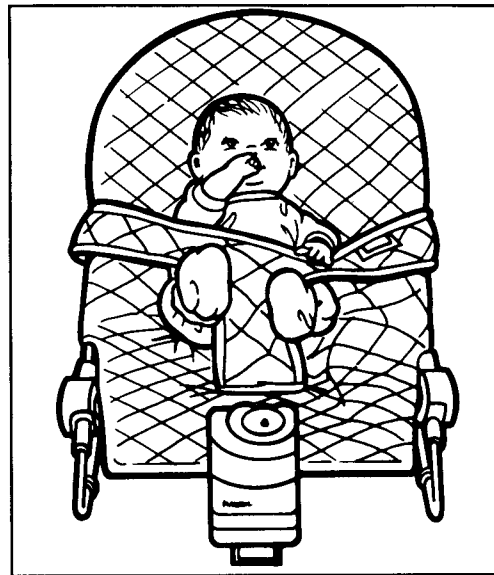

CRIB

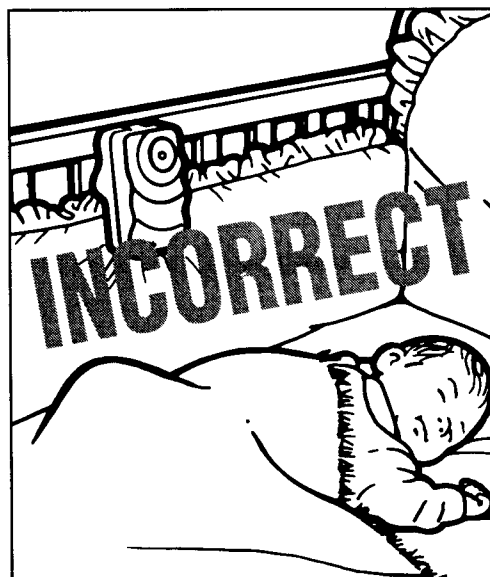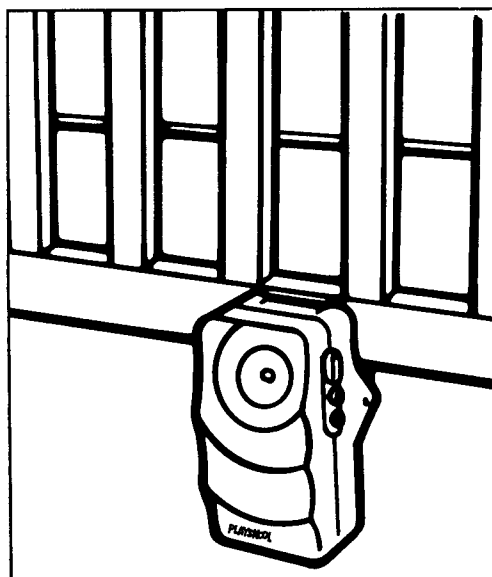

CARRIER



STROLLER



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

U.S. Patent Pending

© 1995 Hasbro, Inc., Pawtucket, RI 02862. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office. **MADE IN CHINA.**

30811

P/N 45934200