



LULLABY GENTLE VIBES™

Requires 4 "AA" alkaline batteries (not included).
Phillips screwdriver required for battery insertion.
Fits most cribs, strollers, playards, carriers and bouncers.

**PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE REFERENCE.**

Dear Parent,


Thank you for choosing Playskool's Lullaby Gentle Vibes for your child. This unique product was designed to help calm your baby by providing comforting vibrations and soothing nursery music.

To ensure that you - and your baby - receive maximum value from this device, please be sure to read and follow all instructions carefully.

Please note that Lullaby Gentle Vibes will not calm all babies. It is not intended as a "cure-all" device and may not soothe babies with colic or an excessive crying problem. If your baby appears to have episodes of colic or cries excessively, please consult your physician.

If you have any questions, comments, or need additional information concerning this product or its parts, please call our Playskool Consumer Service hotline at 1-800-PLAYSKL (1-800-752-9755), Monday through Friday, during business hours (eastern time).

All written inquiries should be mailed to:
Playskool Consumer Service Department,
P.O. Box 200, Pawtucket, Rhode Island 02862-0200

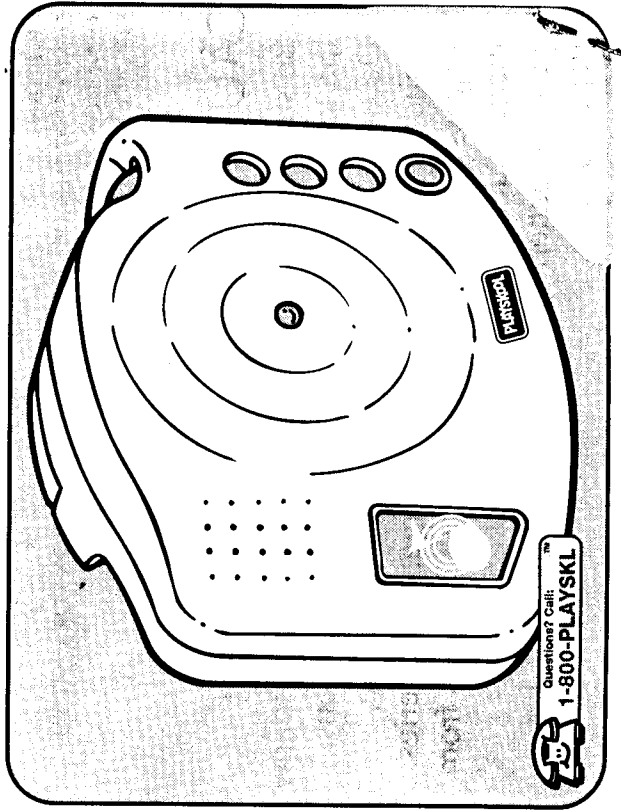

Questions? Call:
1-800-PLAYSKL

PLAYARD



WARNING:

DO NOT attach Lullaby Gentle Vibes to inside top rail of playard, playpen, crib, cradle or bassinets, due to the possibility of a child's clothing getting caught on the open end of the clip.

DO NOT attach Lullaby Gentle Vibes to carry handle of infant car seats or carriers.

When Lullaby Gentle Vibes is used on a crib, the crib sides should be raised and the mattress should be in one of the lower positions.

DO NOT attach Lullaby Gentle Vibes to a car seat when in a car.

PROBLEMS?

- Vibration and music modes do not activate.
- Check to see if timer button on back of unit is in LOCK position. If so, move button to either 15- or 30-minute setting.
- Be sure DEMO switch is on the UNIT ON position. (See TO READY LULLABY GENTLE VIBES FOR OPERATION.)
- Replace batteries.
- The item (crib, stroller etc.) that the unit is attached to vibrates faintly or not at all, even when unit is set on HI.
- Check to be sure unit is firmly attached in the proper location. (See TO ATTACH UNIT for correct and incorrect placement.)
- Replace batteries.
- The vibrations have become less intense (even with unit set on HI), and the music volume has decreased.
- Replace batteries.


© 1996 Hasbro, Inc., Pawtucket, RI 02862.

All Rights Reserved.


U.S. Patent Pending.

MADE IN CHINA. 30812 P/N 47517000 C. 060A

CARRIER

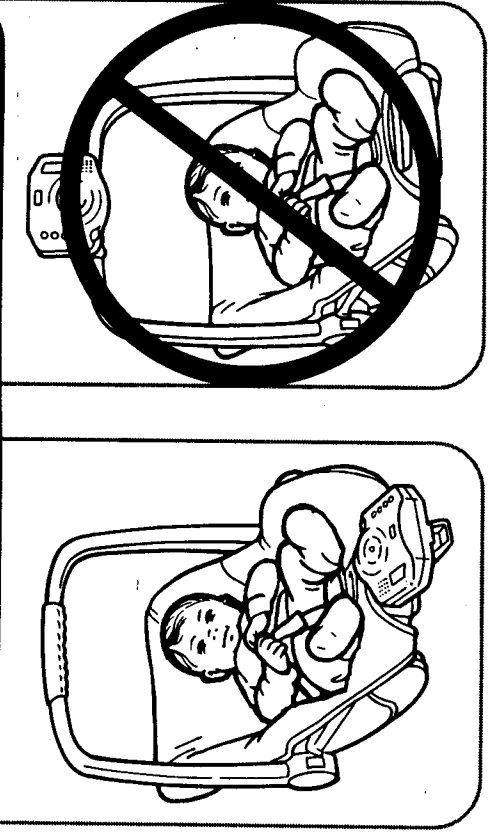

BOUNCER

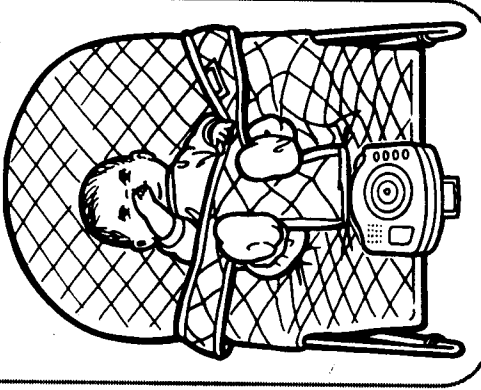

STROLLER



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.


TO READY LULLABY GENTLE VIBES FOR OPERATION

ADJUST DEMO SWITCH & REPLACE FACTORY-SUPPLIED BATTERIES

With a Phillips screwdriver, unscrew and loosen 4 corner screws on back of unit. Remove top.

Slide small black DEMO switch to UNIT ON position.

(DEMO switch in DEMO MODE position is for in-store demonstration only.)

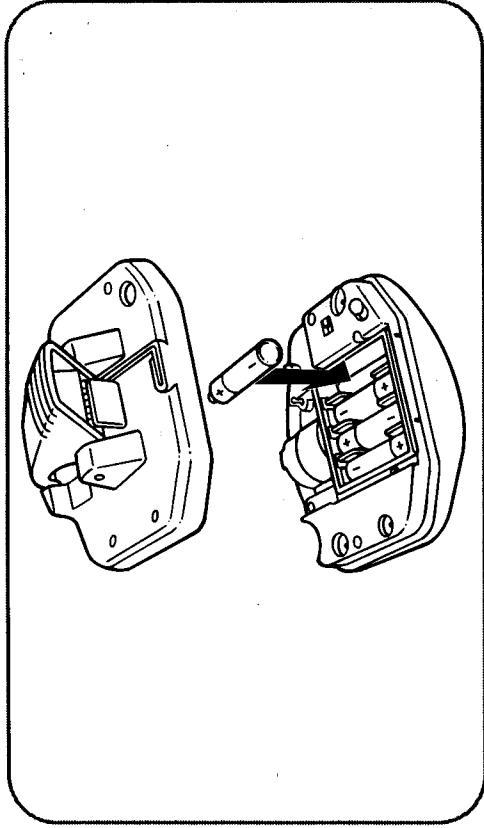

Remove factory-supplied batteries and insert 4 fresh "AA" alkaline batteries into the battery compartment, using the diagram in the compartment for proper placement. Replace back of unit and retighten screws.

(Batteries included with unit are for in-store demonstration only).

IMPORTANT:

- DEMO SWITCH MUST BE IN "UNIT ON" POSITION FOR UNIT TO FUNCTION.

- REPLACE EXISTING BATTERIES BEFORE USING UNIT.

CAUTION: To avoid battery leakage:

1. Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instructions.
2. Do not mix old or new batteries, or alkaline, standard (carbon-zinc) or rechargeable batteries.
3. Always remove exhausted or dead batteries from the product.
4. Remove batteries if product is stored for a long period of time.

TO OPERATE

- Slide timer button (on back of unit) from LOCK position to either 15- or 30-minute setting.
- To activate vibration mode, press LOW, MEDIUM or HI, depending on the intensity of vibrations desired. Press OFF button to stop vibrations.
- To activate music mode, press the MUSIC ON/OFF button. Use VOLUME knob to adjust sound level. Press MUSIC ON/OFF button to stop music.
- Vibration and music modes will operate at the same time or independently. (Green LED will light when unit is operating.)
- Lullaby Gentle Vibes will shut off automatically after 15 or 30 minutes of vibrations and/or music depending on the time setting you have chosen. If you select one mode while the other is already active, the timer will reset to the beginning. If, however, you change vibration speeds after the timer has started, the timer will not be interrupted.


Music button turns lullaby songs on and off

Music volume knob

3 vibration buttons for different levels of intensity


Vibration "off" button

LED status indicator

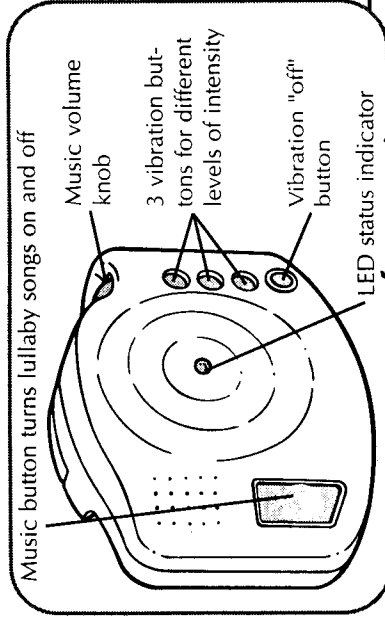

Timer/lock button

Squeeze-on clip for easy attachment

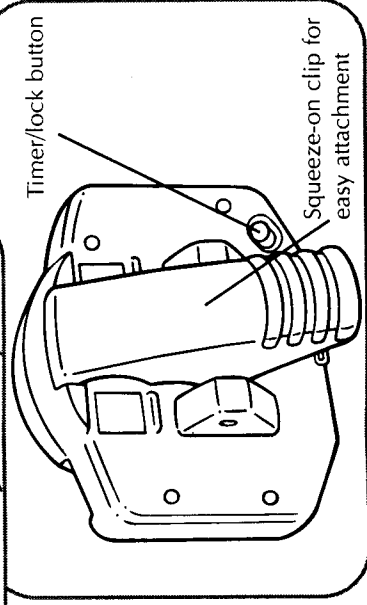


TO ATTACH UNIT


Lullaby Gentle Vibes features a two-position clip for easy attachment to a variety of baby furniture.

Simply squeeze open the clip, and clamp the unit to slats, rails, frames, etc., using either the large or small clip opening to provide a snug fit. Note: The small clip opening is specially designed to fit on bouncer frames.

Be sure the unit is firmly attached to ensure full effect of the vibrations and to prevent unit from moving during operation.

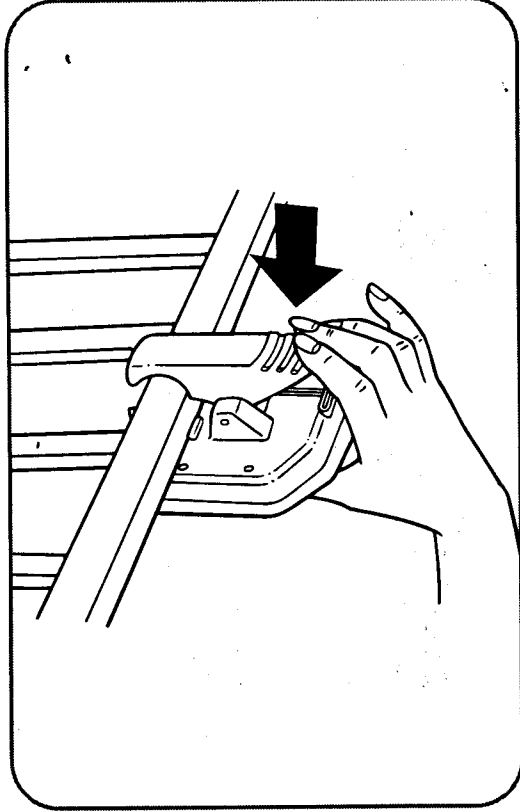

CRIB

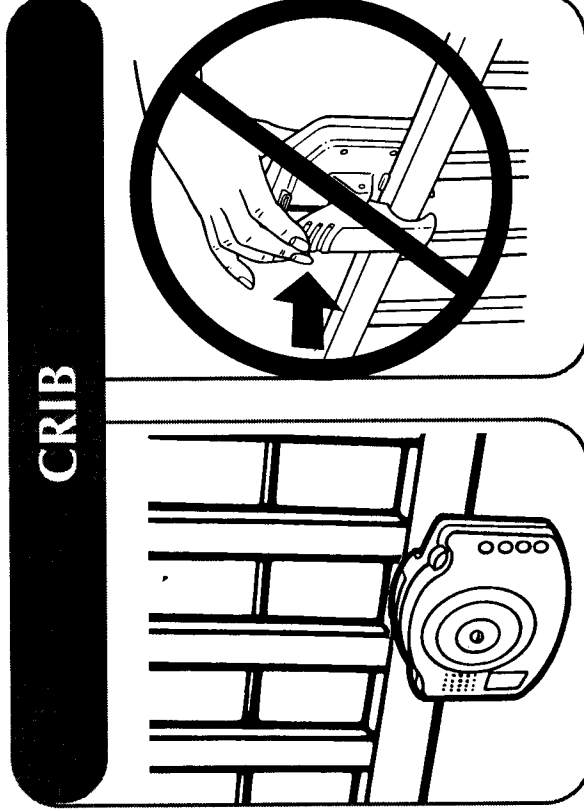

- To ensure the unit stays off during travel (when it could be bumped and accidentally activated), slide the timer button on back of the unit to LOCK position