


TO OPERATE:

To turn on the walkie talkie, turn the ON/OFF VOLUME CONTROL dial to the ON position.

Slowly adjust the ON/OFF VOLUME CONTROL dial to the desired

3. To send a message, press and hold the TALK button with the SPEAKER/MICROPHONE about 4" from your mouth. Speak directly into the SPEAKER/MICROPHONE in a normal voice.

 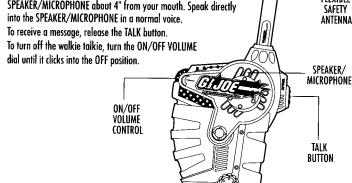


INSERTING THE BATTERIES FOR BOTH UNITS

Important Note: Battery installation should be done by an adult.

1. Open the battery compartment unit on the back of the unit by pushing in the direction of the arrow and lift.

- 2. Remove discharged battery (if necessary) and insert new battery according to the diagram provided in the battery compartment.
- 3. Insert one 9V (6LR61) battery into each unit, making sure to correctly connect the positive and negative terminals.
- 4. Close the battery compartment door and dispose of used batteries properly.



WHEN TO REPLACE BATTERIES

Change the batteries when walkie talkie does not operate properly, or when pressing a button does not trigger a response from the unit.

To ensure proper function:

- Battery installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

WARNING: DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- Recrient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

CAUTION/DEFECT OR DAMAGE



High temperature will destroy the unit. Do not leave unit in direct sunlight.



Clean only with a piece of soft dry cloth.

- Prevent spills of food and beverage on the unit.
- Do not submerge the product in water.
- Do not throw or kick the product, and do not push sharp objects through the speaker openings.

If a part of your game is damaged or something has been left out, DO NOT RETURN IT TO THE STORE. The store doesn't have replacement parts. Instead, write to us at:

Tiger Electronics Consumer Service 980 Woodlands Parkway Vernon Hills, IL 60061 (800)844-3733

In your note, mention the name of your game, your game's model number, and tell us briefly what the problem is. Also include sales slip, date, place of purchase and price paid. We will do our best to help.

FLEXIBLE

- 1. If your walkie talkie does not operate properly, try a new set of batteries.
- 2. After use, always turn off the walkie talkie.
- 3. Do not touch antenna with your fingers or hand, while you are using walkie talkie. It will cause weak
- 4. Your walkie talkie set has been fully adjusted prior to shipment from the factory. Do not touch the internal parts other than to replace the battery.
- 5. To prevent damage, do not expose the walkie talkie to rain or moisture.

90-DAY LIMITED WARRANTY

Tiger Electronics (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger. Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S.S12.00. Payments must be by check or money order payable to Tiger Electronics.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

Hasbro Inc. Consumer Returns A-847

1027 Newport Ave. Pawtucket, RI 02862

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to

For more information about Tiger Electronics, our products and special promotions, please visit our web site at: www.tigertoys.com

© is the code name for America's during, highly trained special mission force. Its purpose: to defend human freedom against ©CDPO®, a ruthless terrorist organization determined to rule the world. The AMORTH Section is made up experts in different disciplines, and they fight for freedom wherever there's trouble - on the land, on the sea or in the air. Led by DUKETM, the courageous Sergeant, the ® team must be ever vigilant to stop the evil plans of COBRA COMMANDER® and his forces the Real American Hero!®



Where Technology Comes to Play!" ®, TM, & © 2002 Tiger Electronics, a division of Hasbro. Inc. All Rights Reserved. 980 Woodlands Parkway. Vernon Hills, IL 60061 USA www.tigertovs.com

®, TM, & © 2002 Tiger Electronics, a division of Hasbro, Inc. All Rights Reserved. Belvedere House, Victoria Avenue, Harrogate, North Yorkshire HG1 1EL, United Kinadom www.tigertoys.co.uk

200203000IWTI-01 PRINTED IN CHINA