

AGES 5+
57465/57455 Asst.



NIGHT ATTACK™ CHOPPER

Includes unassembled vehicle, 2 SOUND ATTACK weapons, 10 missiles and instructions.










Assembly required. No tools needed.
Includes 2 "AA" batteries. Phillips screwdriver
(not included) required to replace batteries.

WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.

- 1. ROTATING ROTOR BLADES!
- 2. COCKPIT OPENS AND SEATS THREE FIGURES (NOT INCLUDED)!
- 3. WORKING LIGHT!
- 4. POSEABLE NOSE GUN!
- 5. SOUND ATTACK™ PORT!
- 6. ROLLING FRONT WHEELS!
- 7. 3 STORAGE AREAS FOR SOUND ATTACK™ WEAPONS!
- 8. MISSILE LAUNCHERS!
- 9. BUTTON FOR SOUNDS!
- 10. SQUEEZE TRIGGER TO MAKE ROTOR BLADES TURN!
- 11. ROTATING TAIL ROTOR BLADE!

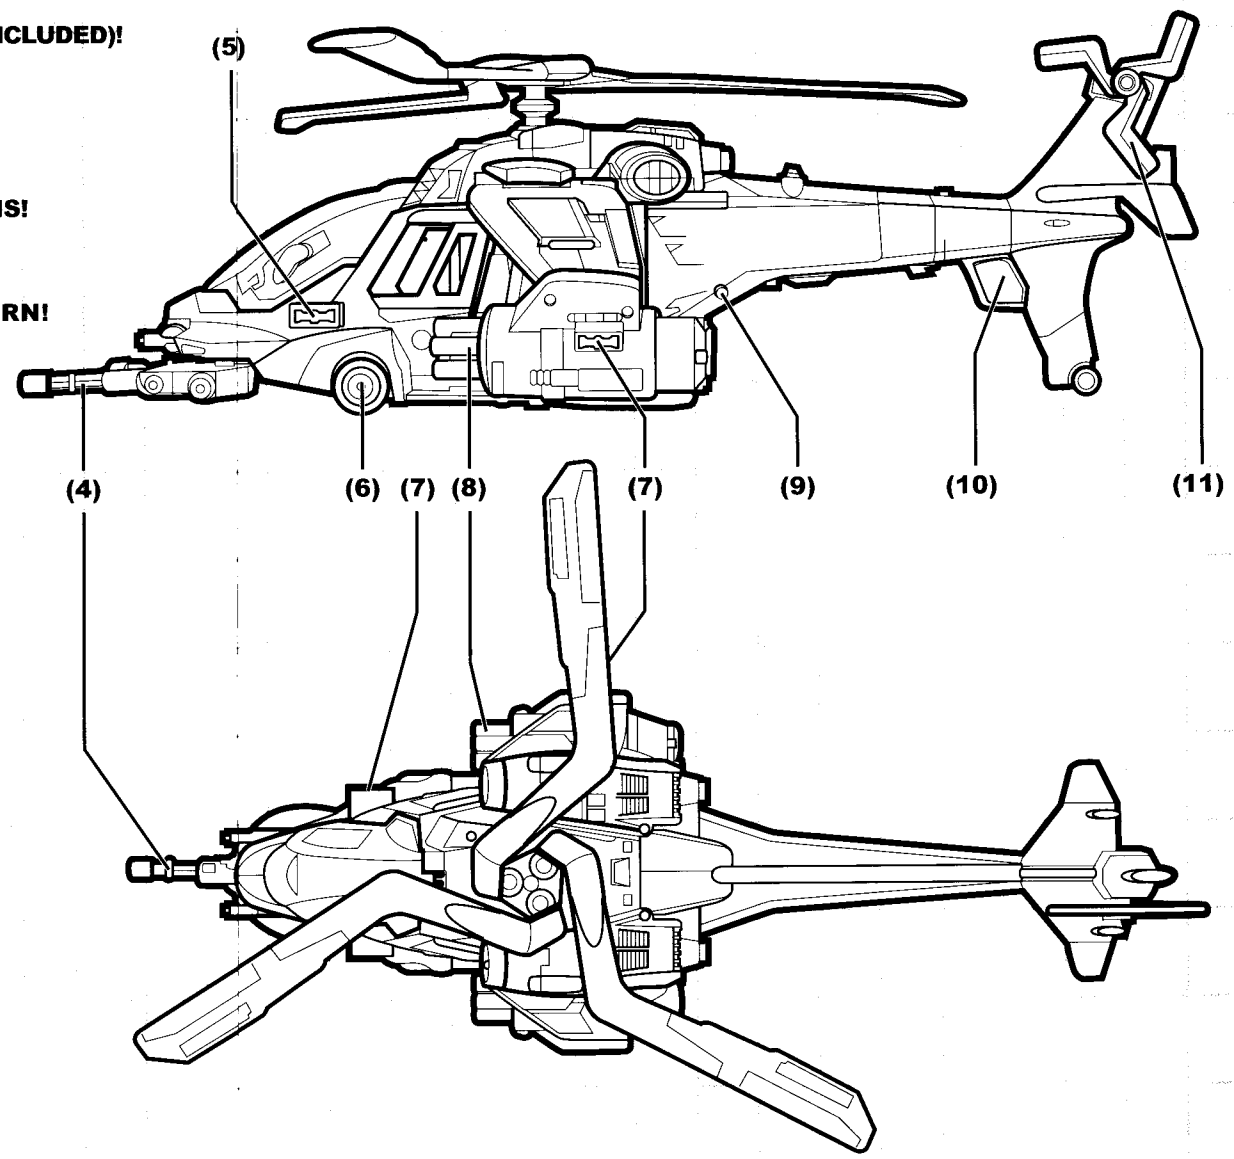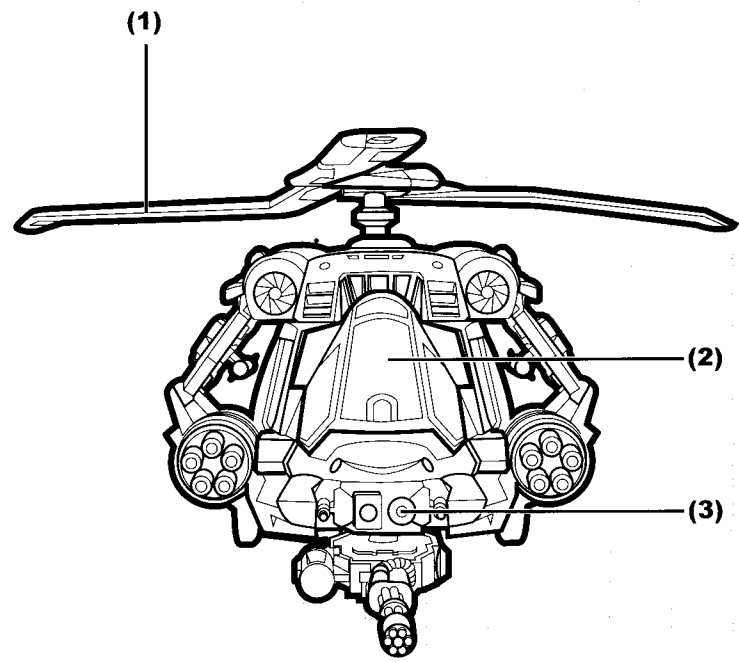

NIGHT ATTACK™ CHOPPER

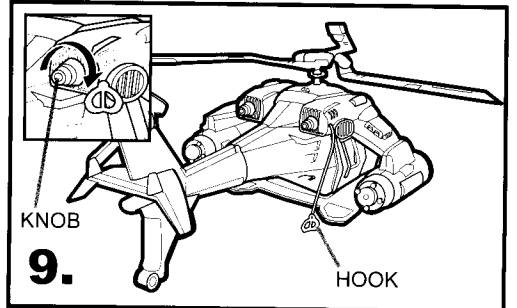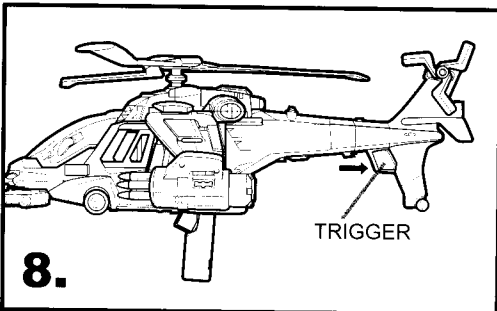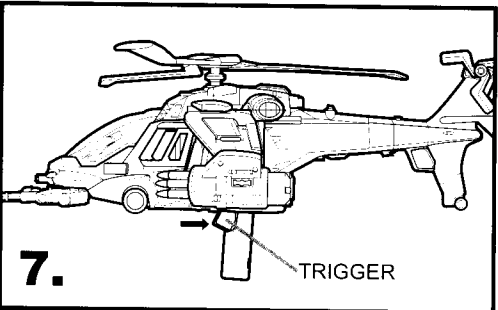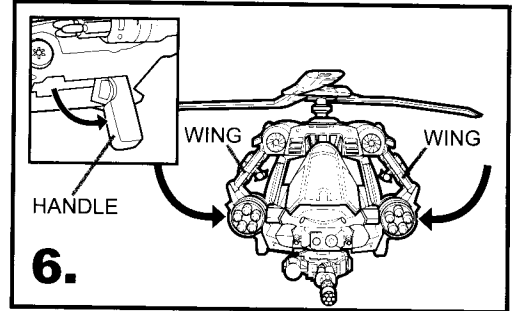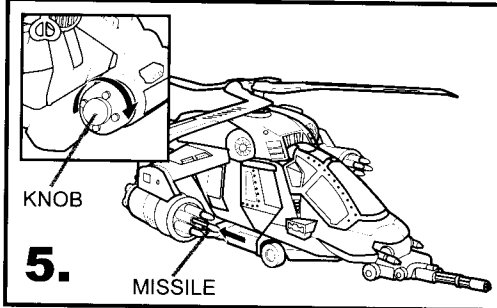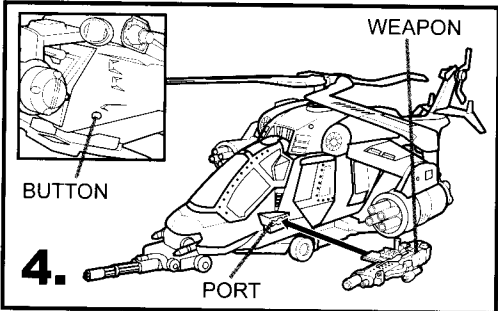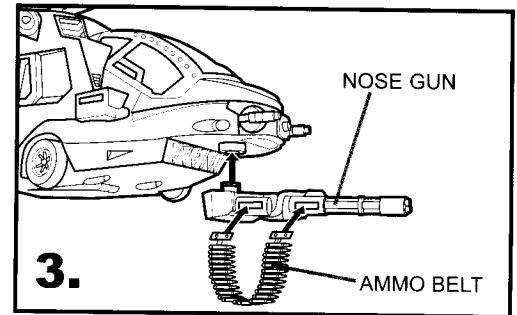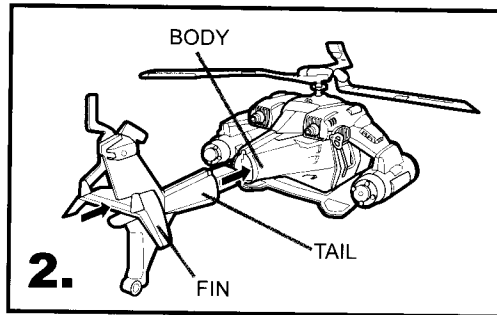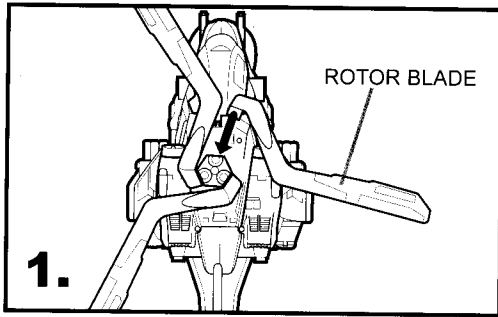

ASSEMBLY

1. Attach rotor blade.
2. Attach fin to tail. Attach tail to body.
3. Attach nose gun. Attach ammo belt to nose gun.

OPERATION

SOUND ATTACK™ Weapons

4. Attach one of the SOUND ATTACK Weapons to the port then press button to hear weapon sounds. Sound Attack weapons can also be stored in one of the storage ports.

Gun Wings


5. Wind knob on end of each gun. Insert 5 missiles into each gun.
6. If necessary, place wings in lower position. Pull down handle.
7. Squeeze trigger to raise gun wings and fire missile. Keep squeezing trigger to fire remaining missiles.

Features

8. Squeeze trigger to rotate rotor blades.
9. Pull hook to extend rope. Wind knob to raise hook.

To replace batteries:

Loosen screw in cover on bottom of vehicle. Remove cover. Insert 2 fresh "AA" batteries into compartment. Replace door, and tighten screw.

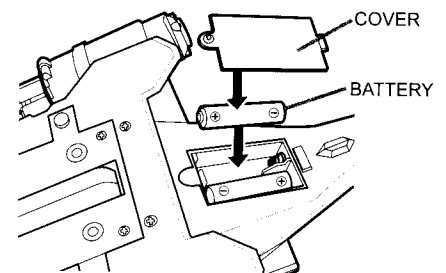

⚠ CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old batteries and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
3. Always remove weak or dead batteries from the product.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including any interference that may cause undesired operation. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Product and colors may vary.
© 2002 Hasbro. All Rights Reserved.
© denotes Reg. U.S. Pat. & TM Office.
U.S. Patent Pending



P/N 6174960000