



WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.


AGE 5+
81585 Asst.

Forward Air Control™

Includes 3x1.5v A76/R44 button cell batteries.
Phillips/crosshead screwdriver (not included) required to replace batteries.

Instructions

Attach cords
as shown.

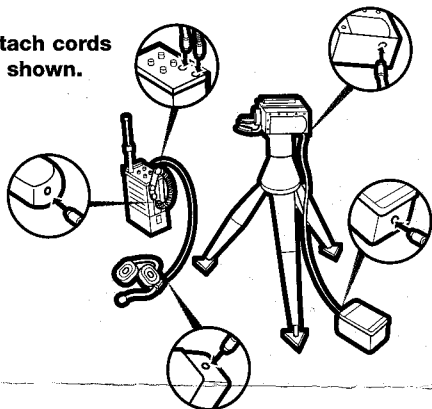

PHRASES: The radio feature includes sequential phrases recorded from a radio transmission between actual military air strike team members.

Forward Air Control: "DELTA TWO FIVE, THIS IS WHISKEY-ZERO-SEVEN, IMMEDIATE SUPPRESSION, TARGET NUMBER ALPHA-BRAVO-ONE-ZERO-ZERO-TWO, OVER."

Jet Bomber Pilot: "ALPHA-BRAVO-ONE-ZERO-ZERO-TWO, OUT."

FAC: "LASING TARGET NOW, OVER."

JBP: "MISSILE AWAY, OVER."

FAC: "MISSILE AWAY, OUT."

FAC: "TARGET DESTROYED, OVER."

JBP: "TARGET DESTROYED, OUT."

Place radio in backpack.



Attach phone to strap.




Place headset on figure.



Some poses may require hand support.
Product and colors may vary.
© 2002 Hasbro. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.



TO REPLACE BATTERIES:

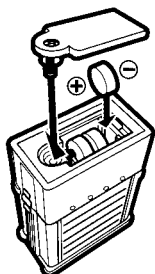

Use a Phillips/crosshead screwdriver (not included) to loosen screw securing battery compartment door and remove door (screw remains attached to door). Remove and discard batteries. Insert 3 A76/LR44 (1.5v) button cell alkaline batteries. Replace battery door and tighten screw with screwdriver.



CAUTION:

- 1) As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
- 2) Make sure the batteries are inserted correctly and follow the toy and battery manufacturers' instructions.
- 3) Do not mix old and new batteries, alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

- 1) Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- 2) Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
- 3) Remove exhausted or dead batteries from the product.
- 4) Remove batteries if product is not to be played with for a long time.
- 5) Do not short-circuit the supply terminals.
- 6) Should this product cause, or be affected by, local electrical interference, move it away from the other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7) RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.