
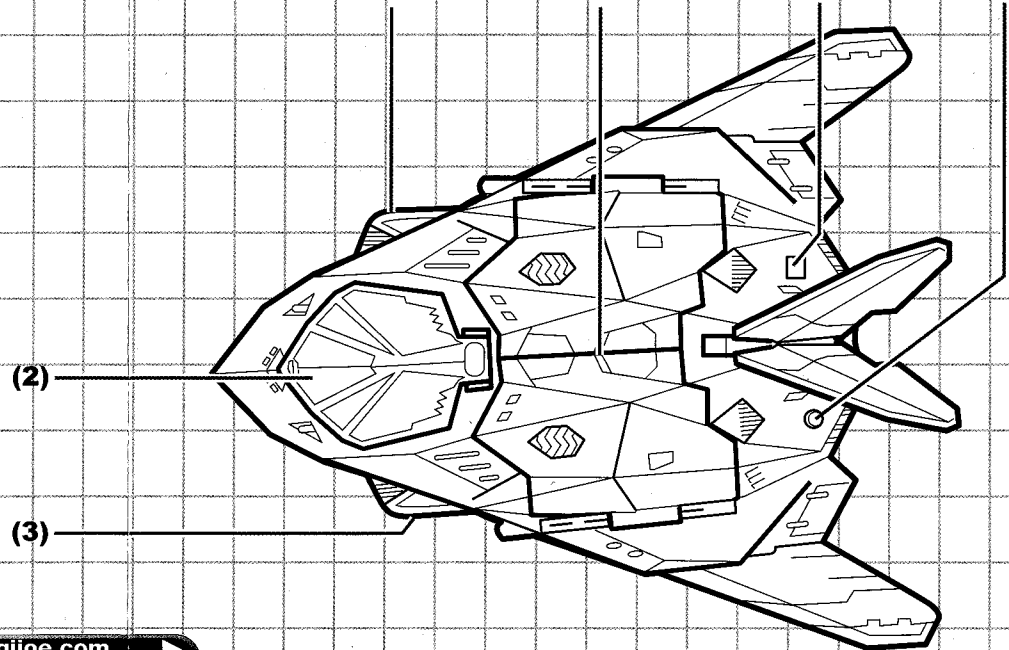


SKY SWEEPER™ JET


Includes 2 x 1.5v AAA/R03 batteries.
 Phillips/crosshead screwdriver (not included)
 needed to replace batteries.

Includes jet, spy plane, SOUND ATTACK™
 weapon, 2 missiles and instructions.

1. TAIL SLIDES OPEN!
2. COCKPIT OPENS AND SEATS ONE FIGURE!
3. SOUND ATTACK™ PORT!
4. RETRACTABLE WINGS!
5. STORAGE AREA FOR SOUND ATTACK WEAPON!
6. RETRACTABLE LANDING GEAR!
7. WEAPON COMPARTMENT OPENS!
8. REMOVABLE SPY PLANE WITH SLIDE-OPEN WINGS!
9. PUSH BUTTON FOR ENGINE SOUNDS!
10. PUSH BUTTON FOR ATTACK SOUNDS!

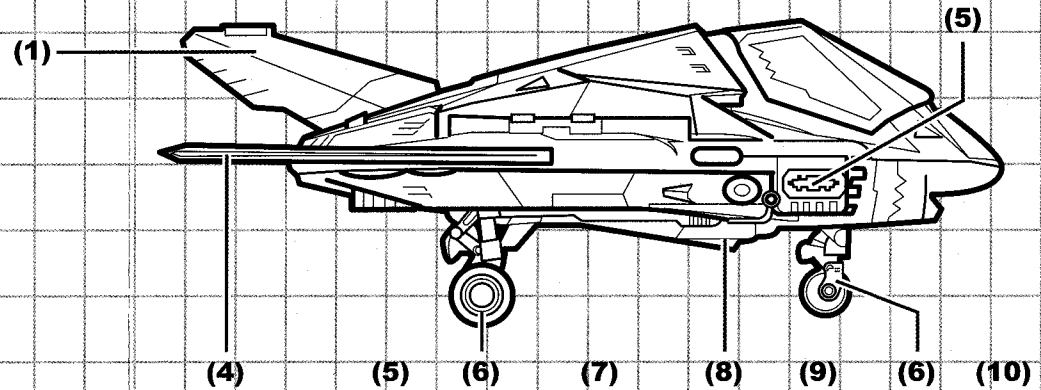





Attach SOUND ATTACK™ weapon then press button to hear firing sounds!

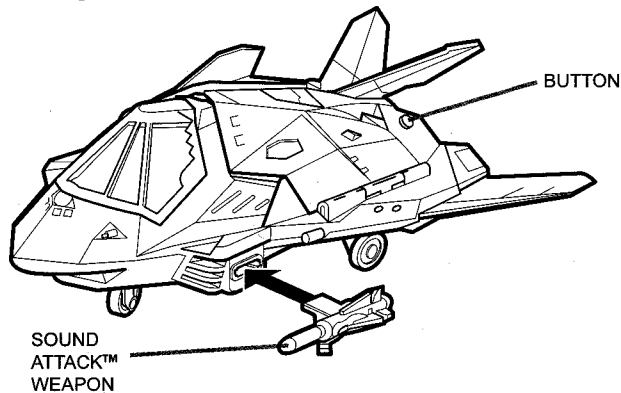

gijoe.com
 FOR NEW PRODUCTS AND OFFERS

Product and colors may vary.
 © 2002 Hasbro. All Rights Reserved.
 ® denotes Reg. U.S. Pat. & TM Office
 U.S. Patent Pending

SKY SWEEPER™ JET INSTRUCTIONS

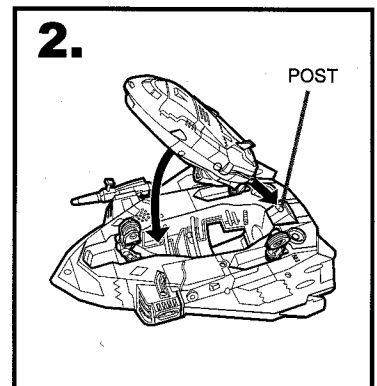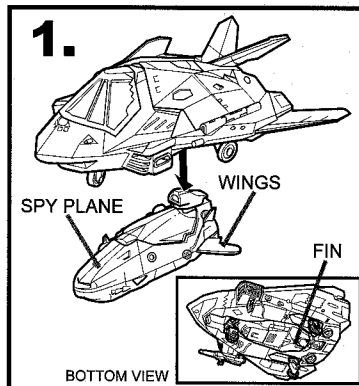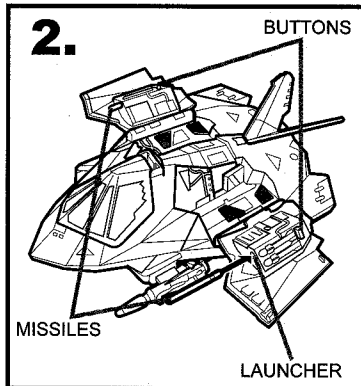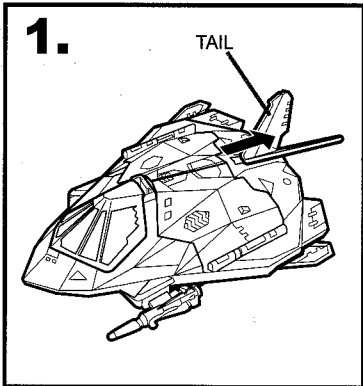


To fire missiles:

1. Push tail back. (ILL.1)
2. Open weapon compartments as shown. Load missiles into launchers. Press buttons to fire. (ILL.2)

Spy plane:

1. To remove plane from jet, hold fin and pull plane out of jet. Open wings. (ILL.1)
2. To replace plane in jet, close wings. Insert post on jet into hole in plane. Swing plane down until it locks in place. (ILL.2)

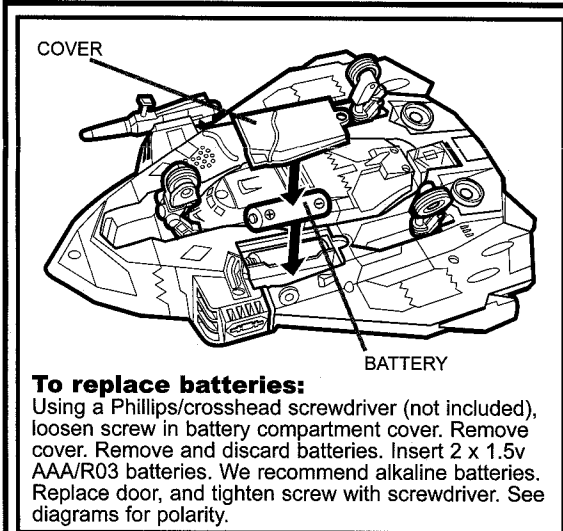

To replace batteries:

Using a Phillips/crosshead screwdriver (not included), loosen screw in battery compartment cover. Remove cover. Remove and discard batteries. Insert 2 x 1.5v AAA/R03 batteries. We recommend alkaline batteries. Replace door, and tighten screw with screwdriver. See diagrams for polarity.

! CAUTION:

- 1) As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
- 2) Make sure the batteries are inserted correctly and follow the toy and battery manufacturer's instructions.
- 3) Do not mix old and new batteries, alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

- 1) Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- 2) Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
- 3) Remove exhausted or dead batteries from the product.
- 4) Remove batteries if product is not to be played with for a long time.
- 5) Do not short-circuit the supply terminals.
- 6) Should this product cause, or be affected by, local electrical interference, move it away from the other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7) RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.