

This toy simulates the function of household appliances. Please caution your child about the hazards of household appliances.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

PLAYSKOOL

AGES 2+
08764

Cool Crew

Gab the Talking Telephone™



Thank you for choosing this unique PLAYSKOOL toy!

Batteries included. Replace with 3 x 1.5V "AA" or LR6 size alkaline batteries. Phillips/cross head screwdriver (not included) required for battery installation.



© 2005 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks
08764 P/N 6544970000

PLAY FEATURES

GAB and ABBEY are telephone and answering machine characters with lots of fun phrases and realistic sounds!

- Press in the antenna, then press any button to see your friend's eyes and mouth move as you hear fun sounds and phrases! There are 18 phrases and sounds in all!

Note: Pressing in the antenna once will animate the toy's eyes and mouth for 2 button-activated phrases or sounds; pressing twice will animate the toy for 4 phrases or sounds.


- Press any button (but not the antenna) for sounds and phrases without animation.
- Place the phone in the cradle to hear GAB and ABBEY "talk" to each other!
- Remove the phone from the cradle for other fun sounds and phrases!

Phone Voice (out of cradle)

"Your face rings a bell!"

"At the tone, it's time to play."

Press Antenna to Animate toy

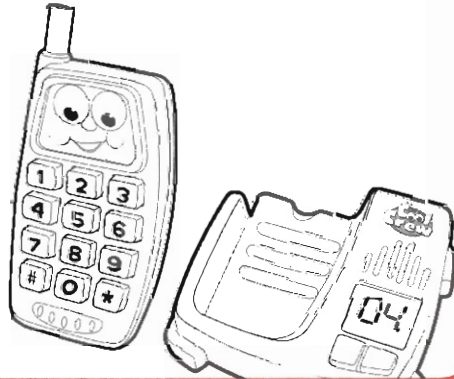

Phone/Answering Machine Voices (in cradle)

"Gotta secret?"

"Tell-a-phone!"


"Phone tag!"

"You're it!"



TO REPLACE BATTERIES

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Remove and discard old batteries. Insert 3 fresh "AA" or LR6 (1.5V) alkaline batteries. Replace door and tighten screw.

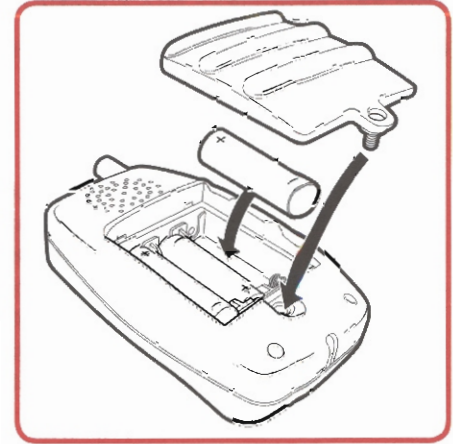

! CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

! CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.