

PLAYSKOOL[®]

BIRTH +
23393

Bedtime Wishes™

 **Glowworm™**

Thank you for purchasing this lovable friend!



TO USE

NOTE: This product is shipped in "demo" mode. Open seam on back and slide switch to "play" for full use at home.

Your child's **BEDTIME WISHES GLOWORM** friend eases the transition to bedtime with a friendly, glowing face and special wish that rhymes. All it takes is a gentle squeeze to bring this lovable character to life.

WASHING INSTRUCTIONS




(DO NOT WASH TOY WITH ELECTRONIC UNIT INSIDE!)

Open back, untie laces and remove electronic unit. Place the toy in pillow case and tie end closed. Machine wash in cold water, gentle cycle, mild detergent, **NO BLEACH**. Tumble dry in pillow case on low heat setting. After the toy is dry, distribute filling evenly throughout body. (During washing, filling may bunch up.) Place electronic unit in the toy with the bulb toward the head and the activation bar facing tummy. Fit lace through tab on each side of unit and tie to other lace. Close seam.

TO REPLACE LIGHT BULB


PR-3 or PR-7 (max 1.2W) bulb required. (Light bulb should be replaced by an adult.)

1. Open seam on back. Untie laces and remove electronic unit.
2. Loosen and remove screws from lens cover. Remove lens cover, and pull out and discard old bulb.
3. Insert a PR-3 or PR-7 (max 1.2W) light bulb into bulb compartment. Place lens cover back on electronic unit and retighten screws. Test to be sure unit works by pressing activation bar.
4. Place electronic unit in the toy with the bulb toward the head and the activation bar facing tummy. Fit lace through tab on each side of unit and tie to other lace. Close seam.

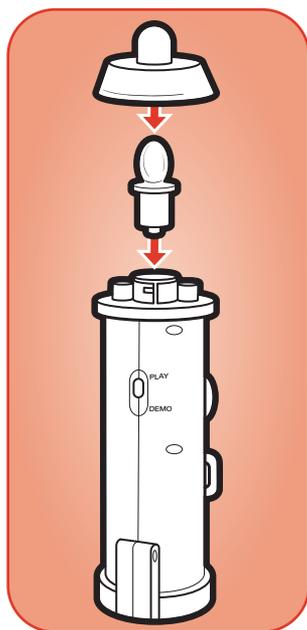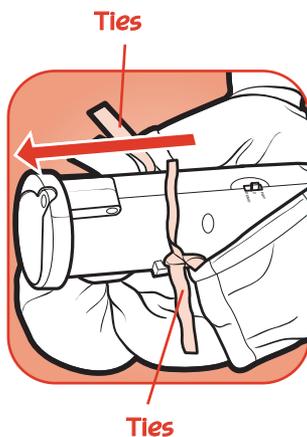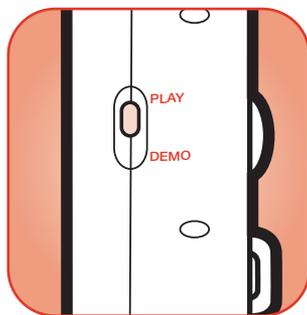

TO REPLACE BATTERIES

Using a Phillips/cross head screwdriver, loosen screw in battery cover (screw will remain attached to cover). Remove and discard old batteries. Insert 3 fresh 1.5V "AA" or R6-size batteries into battery compartment. Alkaline batteries recommended. Replace cover and retighten screw.

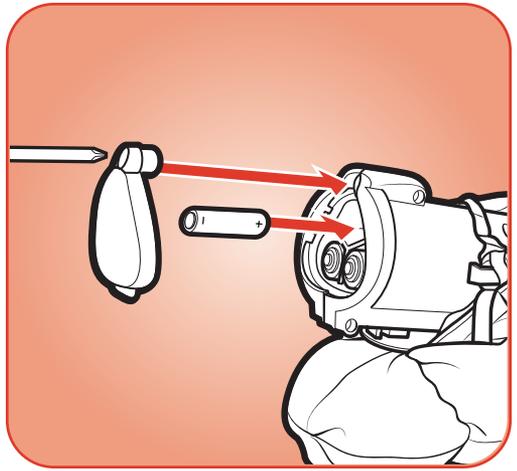

CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.
Batteries should be replaced by an adult.

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

At Playskool, we want to do all we can to help ensure that children thrive developmentally. That's why we have partnered with the National Campaign for Hearing Health to provide you with this Hearing Checklist for babies.

Your Baby's Hearing Checklist

Provided by
National Campaign for Hearing Health
1050 17th Street NW, Suite 701
Washington, DC 20036



Talk to your doctor if you answer NO to any of these questions:

YES	NO	Birth to 3 Months
<input type="checkbox"/>	<input type="checkbox"/>	Reacts to loud sounds
<input type="checkbox"/>	<input type="checkbox"/>	Is soothed by your voice
<input type="checkbox"/>	<input type="checkbox"/>	Turns head to you when you speak
<input type="checkbox"/>	<input type="checkbox"/>	Seems to know your voice and quiets down if crying

YES	NO	3 to 6 Months
<input type="checkbox"/>	<input type="checkbox"/>	Looks upward or turns toward a new sound
<input type="checkbox"/>	<input type="checkbox"/>	Responds to "no" and changes in tone of voice
<input type="checkbox"/>	<input type="checkbox"/>	Enjoys rattles and other toys that make sounds
<input type="checkbox"/>	<input type="checkbox"/>	Becomes scared by a loud voice

The National Campaign for Hearing Health is sponsored by the Deafness Research Foundation. It is a public outreach, professional education and government relations initiative whose goal is to educate the public about hearing health.

Call the National Campaign for Hearing Health at **1.800.535.3323** or visit www.hearinghealth.net for more information.

Based on NIDCD/NIH infant hearing checklist.

FILLING: ALL NEW MATERIALS: 100% POLYESTER
FIBER REG. NO. PA-282



© 2003 Hasbro. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.
23393 P/N 6314170000

PLAYSKOOL.COM 
FOR NEW PRODUCTS AND OFFERS
Questions? Call: 1-800-PLAYSKL