

Your Motion-Activated Scabbers™ is equipped with a powerful electric cell that will light up thousands and thousands of times!

HOW TO USE:

1. On the bottom of the clip-on is a switch. Turn the switch clockwise to turn it on! You may need to use the edge of a coin to turn the switch. This activates the clip-on to light whenever it is jiggled.
2. To turn off the light: turn the switch on the bottom counterclockwise.

CAUTION:

- A non-replaceable electric cell is used in this product.
- Do not disassemble this product to prevent children from swallowing the electric cell.
- Do not allow children below the age of three to hold this product in order to prevent them from swallowing it.
- Throw away the transparent plastic material after you open the package. It is just packing material and is not part of the clip-on.

WARRANTY

For DEFECT OR DAMAGE and 30-DAY LIMITED WARRANTY information, please call 1-800-844-3733.