Your Motion-Activated Wand is equipped with a powerful electric cell that will light up thousands and thousands of times! HOW TO USE:

1.On the bottom of the clip-on is a switch. Turn the switch clockwise to turn it on! You may need to use the edge of a coin to turn the switch. This activates the clip-on to light whenever it is jiggled. 2.To turn off the light; turn the switch on the bottom counterclockwise.

CAUTION:

 A non-replaceable electric cell is used in this product. · Do not disassemble this product to prevent children from swallowing

the electric cell · Do not allow children below the age of three to hold this product

in order to prevent them from swallowing it. · Throw away the transparent plastic material after you open the

package. It is just packing material and is not part of the clip-on. WARRANTY

For DEFECT OR DAMAGE and 30-DAY LIMITED WARRANTY information, please call 1-800-844-3733.