Your Motion-Activated Fluffy^m is equipped with a powerful electric cell that will light up thousands and thousands of times! HOW TO USE:

1.On the bottom of the clip-on is a switch. Turn the switch clockwise to turn it on! You may need to use the edge of a coin to turn the switch. This activates the clip-on to light whenever it is jiggled.

2. To turn off the light: turn the switch on the bottom counterclockwise.

CAUTION:

A non-replaceable electric cell is used in this product.
Do not disassemble this product to prevent children from swallowing

the electric cell.

• Do not allow children below the age of three to hold this product

in order to prevent them from swallowing it.

 Throw away the transparent plastic material after you open the package. It is just packing material and is not part of the clip-on.

WARRANTY

For DEFECT OR DAMAGE and 30-DAY LIMITED WARRANTY information, please call 1-800-844-3733.