

NEEDS
ELECTRONICS

HIT CLIP


MICRO
MUSIC SYSTEM

Micro Boombox with FM Radio Cartridge Instruction


Ages 5 & Up
Item No. 59944

Playing a HitClip

1. Slide HitClip Single into Boombox.

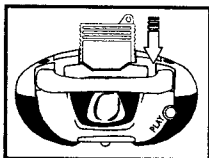


2. Press the Play button to start and stop music.

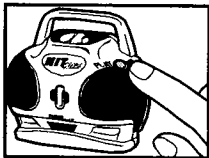


Playing an FM Cartridge


1. Insert the FM Cartridge into the Boombox.

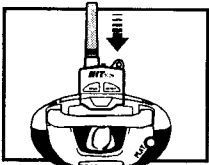

2. Put the On/Off switch in the ON position.

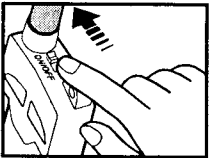


3. Push the Reset button to start at the bottom of the dial.

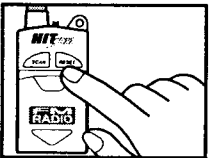


4. Press the Scan button to electronically scan for the strongest FM radio stations.

Push Press the Reset button to return to the bottom of the dial.

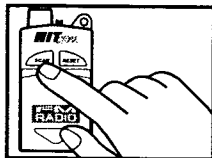

Battery Replacement

1. Your Rockin' Micro Boombox comes with batteries already installed.
2. Per diagram, unscrew battery door lock.
3. Remove exhausted batteries and dispose of.
4. Insert 3 new AAA/LR03 batteries.
5. Replace batteries door and tighten screw.

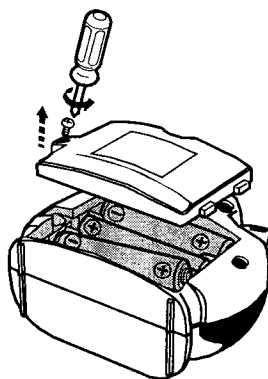

To ensure proper function

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc), or rechargeable batteries (nickel-cadmium).
- Batteries installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being recharged (if removable).
- Rechargeable batteries are only to be recharged under adult supervision (if removable)
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not dispose of batteries in fire, batteries may explode or leak.

WARNING:
CHOKING HAZARD - SMALL PARTS.
NOT FOR CHILDREN UNDER 3 YEARS.