

 


**Video Jockey™
Instructions** Ages 5 & Up
Art. No. 60421

The HitClips™ Video Jockey™ –
Your own personal video creator!
The HitClips™ Video Jockey™ lets
YOU call the shots! Now you can
create your own customized video for
any of your HitClips™. Your music –
and video – your way!

The HitClips™ Video Jockey™ lets you start
creating videos very quickly, but it also
has many cool options for you to explore.

We suggest you take a minute and read
the instructions in order to get the most
out of the HitClips™ Video Jockey™.
Soon you'll be in the director's chair!

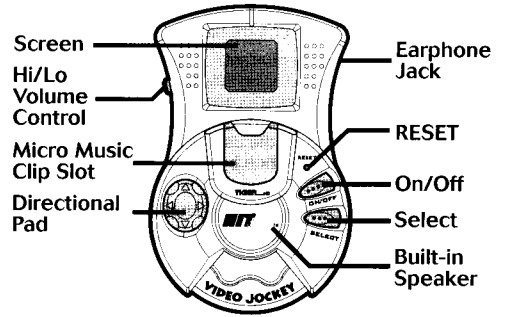

Turn on the HitClips™ Video Jockey™ by
using the On/Off button, Select button or
Directional Pad.

NOTE: The Video Jockey™ unit will turn itself
off after 3 minutes of inactivity (to help
conserve batteries). If this happens,
simply turn the HitClips™ Video Jockey™
back ON by pressing the On/Off button,
Select button or Directional Pad.

After a short animation, you will see Menu 1.
You can always press the Select button to
skip an animation.

If the unit becomes erratic, press the
RESET button to reset the unit.



Here you can select to PLAY a previously
created video or MAKE a new video.

Adjusting the Screen

There is a Contrast bar at the bottom of the
screen. If you are having trouble viewing the
screen (or it is too dark or too light) simply
press the Directional Pad left ◀ or right ▶.
Pressing ◀ will make the screen lighter.
Pressing ▶ will make the screen darker.

Playing a Video/Making a Video

Use the ▲ and ▼ to cycle to either Play Video
or Make Video.

Use the Select button to confirm your choice.
If you choose Play Video, the last created video
will play automatically.

NOTE: The video will last as long as the length
of the song, even if your video is longer or
shorter. If you don't have a HitClips™
Micro Music Clip inserted into the
HitClips™ Video Jockey™, pressing Play
will show you a video without music.
Make sure to insert a HitClips™ Micro
Music Clip into the Video Jockey™
before playing your video.

If you haven't created a video, then a random
one will be quickly put together for you.

This random video will choose from all the
potential video clips in the HitClips™
Video Jockey™.

If you choose Make Video, you will be taken
to Menu 2.



Here you may select to create a Custom Video
or a Random Video.

Use the ▲ and ▼ to cycle to your choice.
Press the Select button to confirm. You can
also go back to the previous menu by
selecting the back arrow ◀.

Random Video

If you select Random Video, you will not need
to place every single video clip into your video.
You will be asked a few questions and then
the Video Jockey™ will create a video
for you.



The first question asked will be if you want to
create a video that features Boys, Girls or both.
Use the ▲ and ▼ to cycle to your choice.

Press the Select button to confirm. You can
also go back to the previous menu by selecting
the back arrow ◀. Once you make your choice,
you'll be asked if you want to create a video
that features a Solo artist or a Group.



Use the ▲ and ▼ to cycle to your choice.
Press the Select button to confirm. You can
also go back to the previous menu by selecting
the back arrow ◀. Once this choice is made,
the HitClips™ Video Jockey™ will randomly
create a video based on your selections. You'll
then be taken back to Menu 1, where you can
play the video by selecting Play Video.



Use the ▲ and ▼ buttons to cycle to your
choice. Press the Select button to confirm.

Custom Video

If you have chosen to make a Custom video
you will be able to select from many different
sequences and place them in any order you
wish. You have total control in this mode.

TIP: If you have created a Random video
previously, you may edit it as well. You
don't always need to start from scratch!



Use the ▲ and ▼ to cycle to your choice.
Press the Select button to confirm. You can
also go back to the previous menu by selecting
the back arrow ◀.

Clip Select

The first thing you'll want to do is select the
various clips that will play in your video.
Selecting Clip Select will take you to the first
of 4 clip menus.



By default, you will be shown the "Dance"
animation menu first. If you would like to select
other types of animations from the other menus
("Dance", "F/X", or "Cool Clips") or just simply
go back to the other menus, just press the Up
or Down buttons ▲ and ▼.

If you select "F/X" or "Cool Clip" you'll be taken
straight to Menu 10. "Dance" needs a little
more explanation.

When you select "Dance" (by pressing the
Select button), you will be asked a
few questions.



The first question asked will be if you want to
choose a clip that features a Solo artist or
a Group.

Use the ▲ and ▼ to cycle to your choice.
Press the Select button to confirm. You can
also go back to the previous menu by selecting
the back arrow ◀.



 
 
If you select Solo Artist, you will be asked if
you would like to choose a clip that features
a Boy or a Girl.

Use the ▲ and ▼ to cycle to your choice.
Press the Select button to confirm. You can
also go back to the previous menu by selecting
the back arrow ◀.



If you select Group, you will be asked if you
would like to choose a clip that features a Boy
Band or a Girl Band.

Use the ▲ and ▼ to cycle to your choice.
Press the Select button to confirm. You can
also go back to the previous menu by selecting
the back arrow ◀.

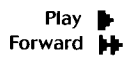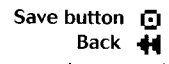

Once you have made your decisions about
which clips to choose from, you will be shown
the animation sequences from which you
may Select.

Once you have chosen which menu you want to look through first, use the Back and Forward icons to cycle through the different animations.

If you would like to preview the animation, select the Play icon .

If you would like to add the animation to the end of your video (you can change the order later), select the Save icon .

When you have filled the memory, you will be told that the "video is full". (Remember that a video can be made with just a single clip, as it will loop until the music stops.)

You can Preview your video now and Edit it.

Previewing your video

If you select to Preview your video, it will last only as long as the video or song, whichever is shorter.

 
Editing your video



This menu will allow you to cycle through all the clips that you selected. You may also Play each one.

Use the and button to scroll through your clips.

Use the and buttons to cycle through the other various options. The options appear in the center of the screen.

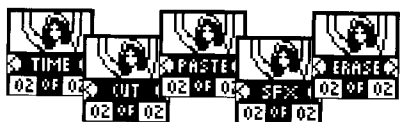

Select **Play** to watch that particular clip.



Selecting **Time** will show you how much time is taken by the current clip and also all the clips combined.



Selecting **Cut** will cut the current clip out of the sequence.



You may Cut an animation back in at a different point, if you wish, by selecting **Paste**.



Choosing **SFX** will allow you to put a special effect into the selected animation. Press the Select button (once SFX is chosen) to cycle through the different Special Effects. If the clip selected is an F/X clip then SFX will have no effect (because it already is a "special effect").



If you want to erase the video and begin again, select **Erase**. You will be asked if you really want to Erase, just to make sure.



Selecting **Back** will take you to the previous menu. You can keep choosing **Back** to get all the way back to Menu 1.

 


Here you may Play your newly created Video. Show it to your friends and family. You made it!

Keep practicing directing videos and you never know what may happen!!!

Battery Installation

1. Unscrew battery door. (see diagram)
2. Remove used batteries and dispose of properly.
3. Insert 3 new AAA/LR03 batteries.
4. Replace batteries door and tighten screw.

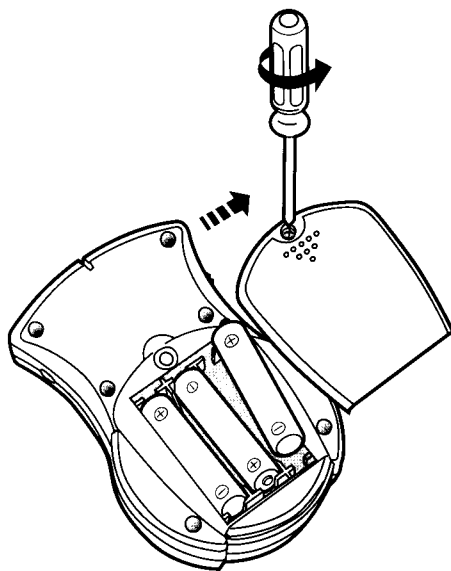

To ensure proper function

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc), or rechargeable batteries (nickel-cadmium).
- Batteries installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being recharged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable)
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Do not dispose of batteries in fire, batteries may explode or leak.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

90-Day Limited Warranty

Tiger Electronics (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S. \$10.25. Payments must be by check or money order payable to Tiger Electronics.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Repair Department
1000 N. Butterfield Road, Unit 1023
Vernon Hills, IL 60061, USA

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT,

INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights, which vary, from state to state.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at: www.tigertoys.com

Please retain instructions for future reference.

TIGER
ELECTRONICS
A division of Hasbro, Inc.



Where Technology Comes to Play!™

©, TM, & © 2001 Tiger Electronics
All rights reserved.
980 Woodlands Parkway
Vernon Hills, IL 60061 USA
www.tigertoys.com

PRINTED IN CHINA

200201270IWT1-01