

HIT CLIPS™

**MICRO
MUSIC SYSTEM**

Installation

Installation is easy. Simply follow these directions to install the unit:

1. Plug one end of the phone cord (supplied) into the jack at the bottom of the Micro Music Telephone. Plug the remaining end of phone cord into the telephone wall jack.
2. Plug the earbud with microphone (provided) into the Micro Music Telephone input jack.
3. Slide the On/Off switch to ON and listen for the dial tone. If there is no dial tone, check to make sure all the phone cord is firmly plugged into phone jack.
4. After installation, for each call you receive and make, you can hear and talk to the calling party with the earbud & microphone set as long as you like.


Telephone Instruction

Ages 5 & Up
Item No. 59915


User interface

The Micro Music Telephone has the following keys and switches.

- | | |
|------------------------|---------------------------|
| 1. On/Off switch | 6. Earbud/Microphone Plug |
| 2. Play button | 7. Music volume control |
| 3. Talk volume control | 8. Redial button |
| 4. Flash button | 9. Telephone Jack |
| 5. Microphone | 10. Belt Clip |

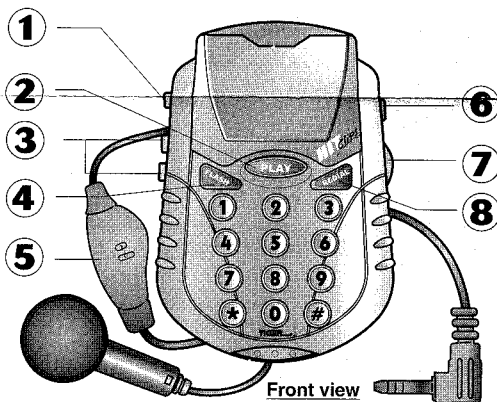

Front view

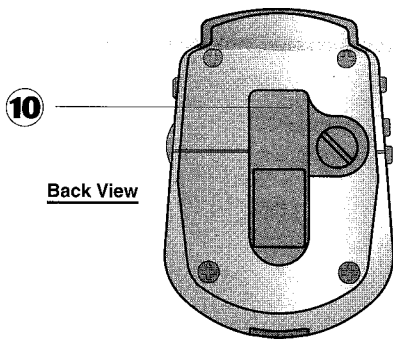

Back View

Setting the Micro Music Telephone

1. Talk Volume Control
The Volume push button controls the volume of your conversation. Press the up arrow to increase the volume. Press the down arrow to decrease the volume.
2. Music Volume Control
The Music Volume Control will adjust the volume of your HitClips Micro Music Clip. Rotate the wheel downwards to increase the volume. Rotate the wheel upwards to decrease the volume.

Operation of Micro Music Telephone

1. Making an outgoing call

- a. Slide the On/Off switch to the ON position and listen for the dial tone through the earbud.
- b. Enter the telephone number using the numeric dial pad.
- c. When you finished the call, slide the On/Off switch to the OFF position.

2. Receiving an incoming call

- a. When the telephone is not in use and a new call is received, the Micro Music Telephone will ring at your pre-set ringer volume level. Slide the On/Off switch to the On position and talk to the caller through the microphone.
- b. When the telephone is already in use and another call comes in, simply press the Flash button to click over to the other line.
- c. When you finished the call, slide the On/Off switch to the Off position.

3. Playing a Micro Music Clip

- a. To play your HitClips Micro Music Clip for a friend, simply slide the chip into the top of the unit and press the play button.

4. Redial function

You can redial the last number called with just one touch of the Redial button.

- a. Slide the On/Off switch to the On position.
- b. Press the Redial button once, the last sequence of digits dialed will be automatically redialed.
- c. When you finished the call, slide the On/Off switch to the Off position.

90-Day Limited Warranty

FCC and Phone Company Information

Tiger Electronics (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S. \$13.50. Payments must be by check or money order payable to Tiger Electronics, Ltd.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Repair Department
1000 N. Butterfield Road, Unit 1023
Vernon Hills, IL 60061, USA

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

This equipment complies with Part 68 of the FCC Rules. On the base unit of this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. If requested, this information must be given to the telephone company.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

If your equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operations or procedures that could effect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

If you experience trouble with this telephone equipment, please contact the following address and phone number for information on obtaining service or repairs.

The USOC jack RJ-11C is provided. The modular jack is a compatible one for Part 68 of the FCC Rules compliant.

Company: Tiger Repair Department
Address: 1000 N. Butterfield Road, Unit 1023
Vernon Hills, IL 60061, USA
Tel: 1(800)844-3733

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

This phone only works with tone phone systems.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at: www.tigertoys.com

Please retain instructions for future reference.

TIGER
ELECTRONICS

A Division of Hasbro, Inc.
Where Technology Comes to Play!

©, TM, & © 2001 Tiger Electronics

All rights reserved.

980 Woodlands Parkway,
Vernon Hills, IL 60061, USA

www.tigertoys.com

PRINTED IN CHINA



200101080IWT1-01

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Do not use this product near water, for example, near a bathtub, bathroom sink, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be risk of remote electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.

SAVE THESE INSTRUCTIONS