


60500

ICE DANCE Princess™


Instructions

DOLL


Inserting Batteries (uses 3 "C" Alkaline)

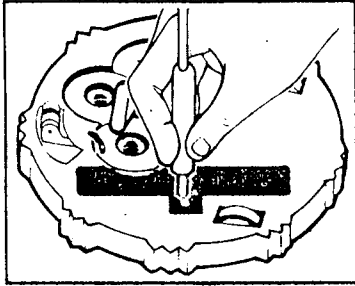


1. Turn the platform over.
Remove the battery cover. Using a small phillips screwdriver, carefully loosen the screw holding the cover in place. The cover can easily be lifted off with the screw.

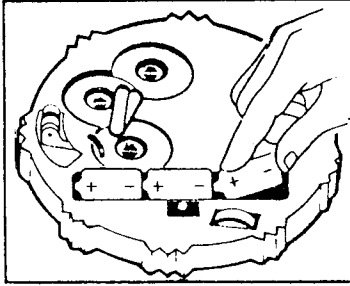

2. Place 3 size "C" Alkaline batteries inside the battery chamber.

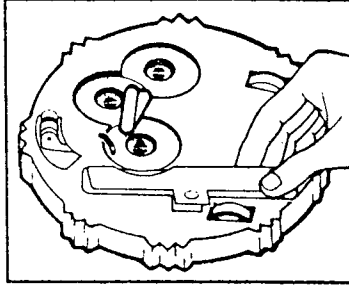


3. Replace the battery cover.
With the batteries in place, set the battery cover back into its original position. Replace the screw.

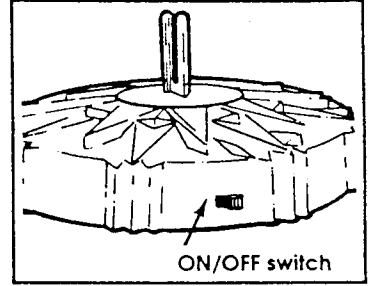


4. Use the ON/OFF switch located on the backside of the platform to turn the ICE DANCE PRINCESS Doll on and off.


Using and Storing the Skating Discs

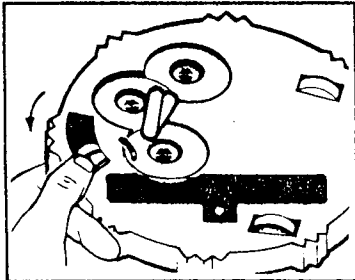


Using a skating disc.
Turn the platform over. With forefinger or thumb, push front wheel to the right. Keep wheel in this position, making sure pink

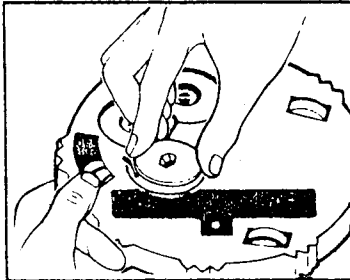

peg stays to the left. Pick skating disc of your choice and push down to snap into place. You can now let go of the front wheel.

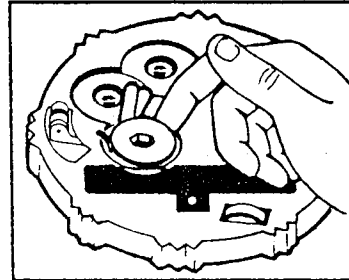


Removing a skating disc.
To remove a skating disc, place forefinger under skating disc and carefully lift off.


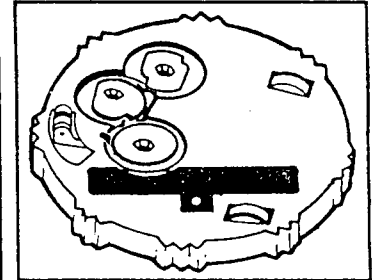


Storing your skating discs.
The extra skating discs store in the recessed area on the underside of the platform.


Ice Dance Princess™ Skating Discs and Patterns for smooth, flat surfaces

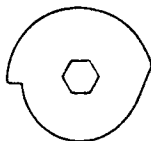


Double Loop Disc -
The ICE DANCE PRINCESS Doll performs a series of lovely double loops.

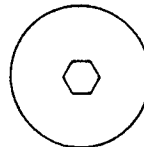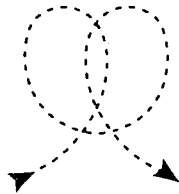


Princess Pirouette Disc -
The ICE DANCE PRINCESS Doll spins in small, quick circles.

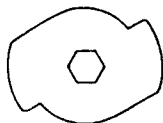


Snowflake Swirl Disc -
The Snowflake Swirl Skating Disc produces a beautiful snowflake design by repeating a pattern of small circles leading into a large circle.

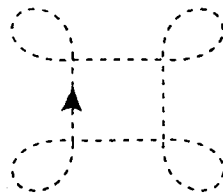


Glitter Glide -
Without a Skating Disc in place, the ICE DANCE PRINCESS Doll will spin as she "skates" forward.

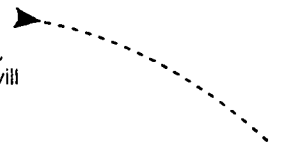

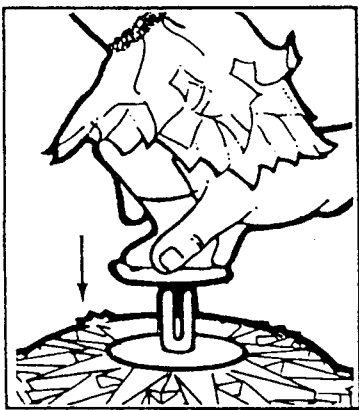

Placing the Ice Dance Princess™ Doll onto her Platform

The double post inserts into either foot to help you pose your doll. Once she is in the chosen position, and the selected skating disc is in place, turn the switch on. When removing doll from platform, hold post base in place.

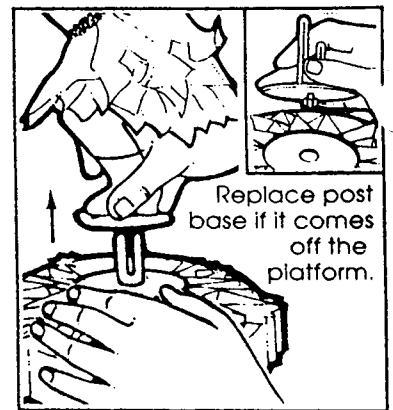

Try These Ice Dance Princess™ Skating Poses



Glitter Glide

Do not insert a Skating Disc.




Frosty Flower

Insert Snowflake Swirl Skating Disc.



Double Loops

Insert Double Loop Skating Disc.

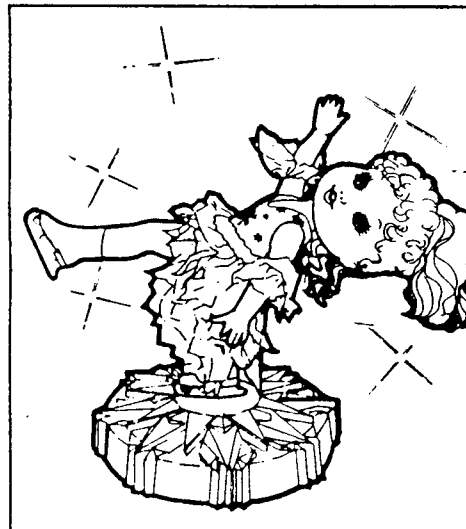

Spectacular Spin

Insert Princess Pirouette Skating Disc.



Lovely Loop

Insert Snowflake Swirl Skating Disc.



Twinkle Twirl

Insert Double Loop Skating Disc.

NOTE TO PARENTS: Doll's outfit should be hand-washed, cold water, line-dried. Periodically clean wheels under platform with a damp cloth. Do not submerge platform in water.