




Disney • PIXAR

## Omnidroid Electronic Battle Playset

### MODES OF PLAY

1. **Practice Mode** - Selecting Practice Mode will activate Omnidroid at Level 1 difficulty. To increase difficulty, press Level Button to select Levels 2-6. Omnidroid will remain at whichever difficulty level you select.
2. **Advance Mode** - Selecting Advance Mode will activate Omnidroid at Level 1 difficulty. To increase difficulty, press Level Button to select Levels 2-6. Omnidroid will automatically advance to the next level when you complete a level.

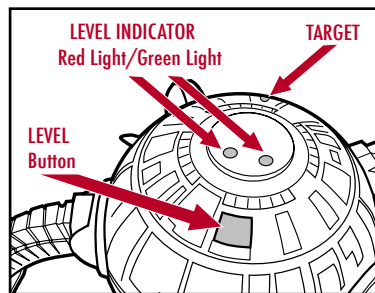

### DEFEATING THE OMNIDROID


The red target is active only when the green LED on the Omnidroid is illuminated. If you fire the wrist module while the green LED is off, you will miss. If you run out of shots, the Omnidroid will destroy you and say "Target is Victorious!"

### INCREASING DIFFICULTY LEVELS

The Level Button is directly opposite the red target on the Omnidroid. Press the Level Button to select difficulty levels 2-6.

### RESETTING WRIST MODULE

Hold down fire button for 5 seconds, until all LEDs come back on, or switch unit off and back on. Be sure to reset the wrist module between levels, or you'll run out of ammo and the Omnidroid will beat you!

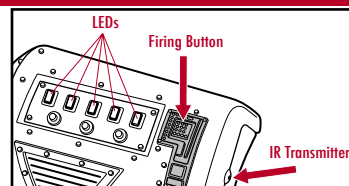

The term OMNIDROID is used by permission of Lucasfilm Ltd.

© Disney/Pixar

®\* and/or TM\* & © 2004 Hasbro. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office.

P/N 6389090000



Questions? Call: 1-800-327-8264