

27674


Ages 5 & Up



T-REX TRANQ GUN™ INSTRUCTIONS


Requires 2 "AA" batteries. (not included)

BATTERY REPLACEMENT:

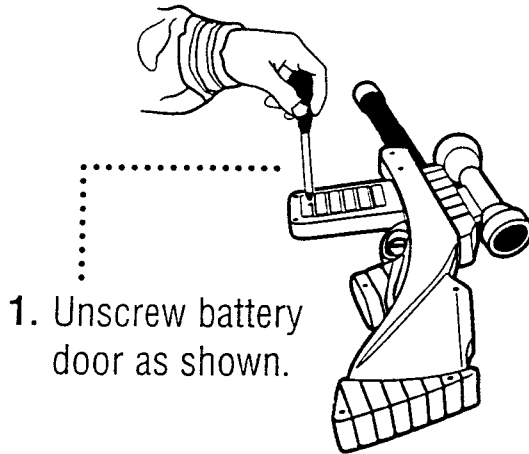

1. Unscrew battery door as shown.

2. Insert battery as shown and replace door.

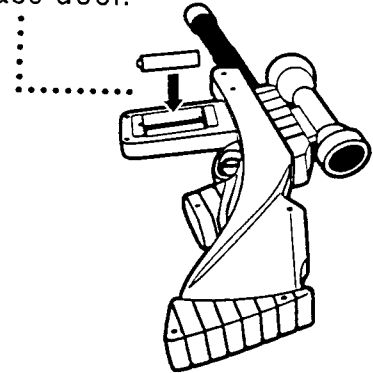

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old batteries and new batteries.
3. Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
4. Always remove exhausted or dead batteries from the product.

FCC STATEMENT

"This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help."

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



THE LOST WORLD: JURASSIC PARK TM & © 1996 Universal City Studios, Inc. and Amblin Entertainment, Inc. All Rights Reserved. Licensed by MCA/Universal Merchandising Inc. ©1996 Hasbro, Inc., Pawtucket, Rhode Island 02862 USA. All Rights Reserved. ® denotes Reg. U.S. Pat. & TM Office.
MADE IN CHINA.