



ELECTRONIC PINBALL GAME

AGES 5 & UP

INSTRUCTIONS

ENTER THE EXCITING WORLD OF JURASSIC PARK™ with this real-action pinball game! When the ball hits a bumper, you'll hear dinosaur roars and see bright, flashing lights as your score is tallied on the automatic digital scoreboard. It's a ROAR-ing good time!

Includes Electronic Pinball Game, 2 support legs and instructions.

Requires 4 "C" batteries (not included). Phillips® screwdriver required for battery insertion. Some assembly required.

BATTERY INSTALLATION

- On underside of game, remove screw and slide out battery compartment cover.
- Insert 4 "C" batteries (alkaline recommended) into compartment as indicated on bottom of compartment.
- Slide cover back on and retighten screw.

CAUTION:


1. When installing replacement batteries, make sure the batteries are inserted correctly and follow the toy and battery manufacturers' instructions.
2. Never mix old batteries with new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Batteries may explode or leak if recharged, disassembled or heated.
4. Remove batteries if product is stored for a long period of time.
5. Always remove exhausted or dead batteries from the product.

GET READY . . .

- Remove the 2 support legs from the foam package inserts and slide them into slots on underside of game as indicated in illustration.

GET SET . . .

- Place game on a flat surface.
- Slide the ON/OFF switch to ON.
- Push the scoring reset button to set score at zero.
- Set the ball counter to "1".
- From underside of game, pull down the gate holding the ball in place. Ball should roll to a stop at ball counter.
- Turn the ball counter clockwise and pull back the launcher to position ball at the top of the launcher.

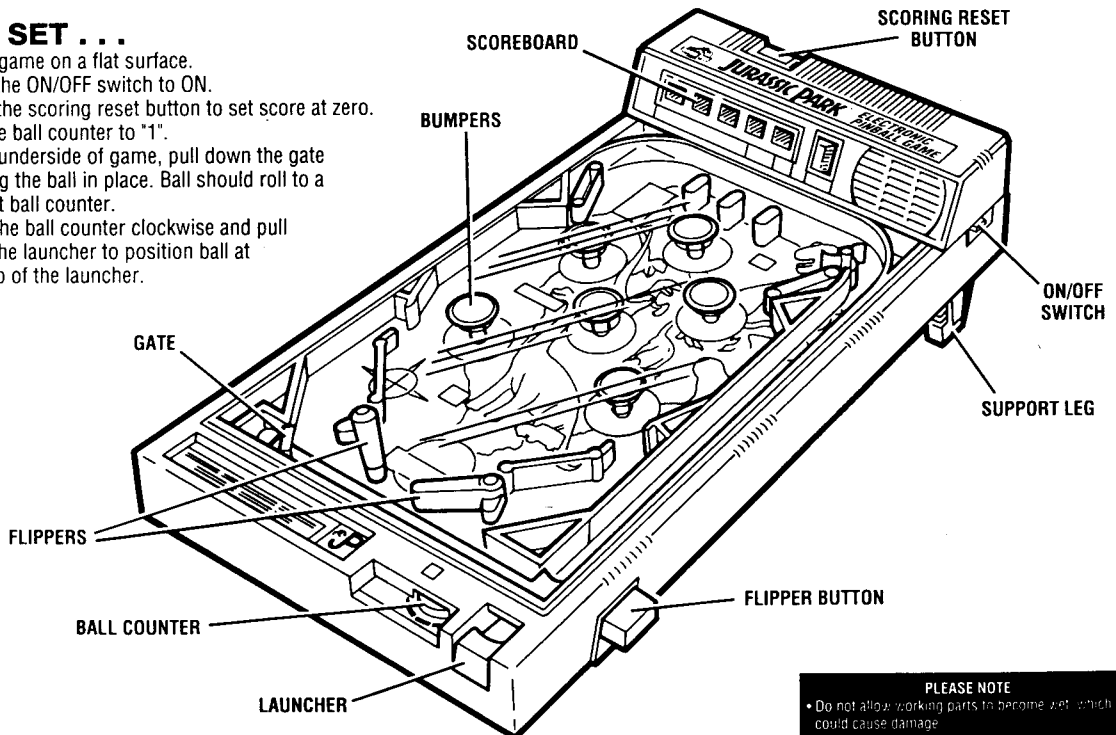

PLEASE NOTE

- Do not allow working parts to become wet, which could cause damage.
- Change batteries if sounds become faint or garbled.

GO!

- Release launcher to put the ball in play.
- Use the flippers to keep the ball rolling. (Press the flipper buttons to activate the flippers.)
- When the ball hits the bumpers, the scoreboard will automatically tally the points, while you hear dinosaur sounds and see flashes of light.
- After playing three balls, check your score, then press the scoring reset button to play another game!



Jurassic Park™ & © 1993 Universal City Studios, Inc. & Amblin Entertainment, Inc.
Distributed by Kid Dimension, Inc., a subsidiary of Hasbro, Inc., Pawtucket, RI 02862 USA. © 1993 Kid Dimension, Inc.
© denotes Reg. U.S. Pat. & ™ Office.
MADE IN CHINA.
28601 P/N 44460000