



# **SMALL BUBBLES**

(Pull trigger all the way to make small bubbles)

- . Non-rechargeable batteries are not to be recharged.
- · Rechargeable batteries are to be removed from the toy before being charged.
- · Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- . Batteries are to be inserted with the correct polarity.
- · Exhausted batteries are to be removed from the toy.
- . The supply terminals are not to be short-circuited
- . Do not mix old and new batteries.
- . Do not mix alkaline, standard (carbon zinc), or rechargeable batteries.

## To Fill:

Pour bubble solution into dipping cap.

Close bottle to prevent spills. Dip nozzle into cap. Remove toy from bubble solution. Squeeze gently on trigger to blow bubbles.

### CONSUMER INFORMATION

ITEM: Bubble Gun™ ITEM NUMBER: 5030

AGE GRADE: Ages 3 and up
ASSEMBLY REQUIREMENTS: None

BATTERY REQUIREMENTS: 2 AA (1.5 volt) Alkaline Batteries

iapa, CA 94558 USA

'ARENTS: Please use discretion when purchasing toys for children the are younger than the recommended age grade on this package last tay is not suitable for children under 36 months of age, or who still place objects in their mouths. This toy may contain small parts, or potential for small parts exists.

SAFETY REQUIREMENTS: This product meets or exceeds the safety jurements of ASTM F 963 and EN 71.

RETAIN PACKAGING FOR DETAILS

Use **Koosh Bubbles**" Premium **Bubble Solution** for Best Results

No. 5030 Ages 3 to 137



The configuration of this product and items designated ® and/or TM are property of OddzOn, Inc.

© 1998 OddzOn, Inc. Napa, CA 94558 Made in China **All Rights Reserved** Bullin Calution Made in H. C. A



