

**VORTEX**

FireStorm™


INSTRUCTIONS

To get the most fun out of your new Vortex Firestorm, please exercise caution when using it, especially when loading the Spin Fire rings. If you do have trouble at any time, be sure to ask an adult for their help.


1. Pull back the Power Slide until it locks into place. This will unlock the Spin Fire Ammo Chamber. (Fig.1)
2. Load the Spin Fire rings into the cells in Ammo Chamber one at a time. NOTE: THE THICK ROUND FRONT EDGE OF THE RINGS SHOULD BE POINTING OUTWARD WHEN THE RINGS ARE LOADED. THE ARROWS ON THE SIDE OF THE RINGS SHOULD BE POINTING OUTWARD IN THE SAME DIRECTION AS THE ARROWS ON THE SIDE OF THE LAUNCHER NEAR THE AMMO CHAMBER. (Fig.2) To load all six rings, rotate the Ammo Chamber CLOCKWISE. (Be sure that the Power Slide is all the way back in its rear most position so the Ammo Chamber is free to rotate.)
3. Be sure that the rings are fully inserted into the cells in the Ammo Chamber. Pat them down gently to be sure they are all the way in. When properly loaded, they will sit on the 10 little hooks at the bottom of each cell, the 10 hooks should be visible (Fig 3).

NOTE: IT IS IMPORTANT THAT THE RINGS BE LOADED CORRECTLY. IF THEY ARE LOADED BACKWARDS OR IMPROPERLY, THEY MAY CAUSE A MISFIRE, AND IN FACT, MAY JAM THE LAUNCHER.


(Fig.1)

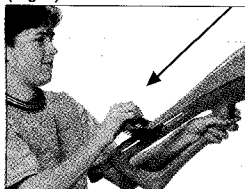

(Fig.2)

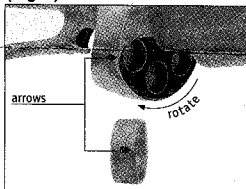

(Fig.3)

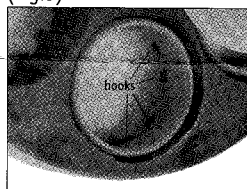

4. After loading, push the Power Slide all the way forward. That will rotate the Ammo Chamber into firing position
5. Aim the Fire Storm launcher and pull the trigger to fire. (Fig. 4)
6. Pull the Power Slide all the way back and then push it forward again to rotate the Ammo Chamber and engage the next ring. Pull the trigger again to fire! Repeat until all the rings have been fired. Reload the rings as described in step one and launch again.

IMPORTANT: IF YOU PULL THE TRIGGER AND FIRE, AND A RING IS NOT LAUNCHED FROM THE BARREL, STOP IMMEDIATELY! DO NOT ATTEMPT TO LAUNCH AGAIN. CHECK TO SEE IF THE RING IS JUST INSIDE THE BARREL. IF IT IS, SIMPLY TURN THE LAUNCHER UPSIDE DOWN AND SHAKE THE RING OUT.

IF THE RING IS STUCK BETWEEN THE END OF THE FIRING ROD AND THE RING CARRIER THAT LAUNCHES THE RING, IT MUST BE PULLED OUT. CALL FOR AN ADULT TO HELP. DO NOT PUT YOUR HAND INSIDE THE BARREL.

BE SURE THE POWER SLIDE IS IN THE FORWARD POSITION, THEN USE A SIMPLE TOOL TO REACH IN AND PULL IT OUT. A RULER, A LONG SCREWDRIVER, A COAT HANGER BENT IN THE SHAPE OF A HOOK, OR OTHER LONG SLENDER OBJECT SHOULD WORK. A PAIR OF LONG-NOSED PLIERS WOULD BE PERFECT. (Fig.5)

(Fig.4)



(Fig.5)

