 


AGE 4+
33005

TO REPLACE THE LIGHT BULB

 
PR6 bulb required.

Use a Phillips screwdriver to remove 4 screws from battery/bulb unit. Take unit out of toy. Turn unit over, remove screw from bulb cover and remove cover. Pull out old light bulb and replace with a new PR6 bulb. Refasten bulb cover and battery/bulb unit.

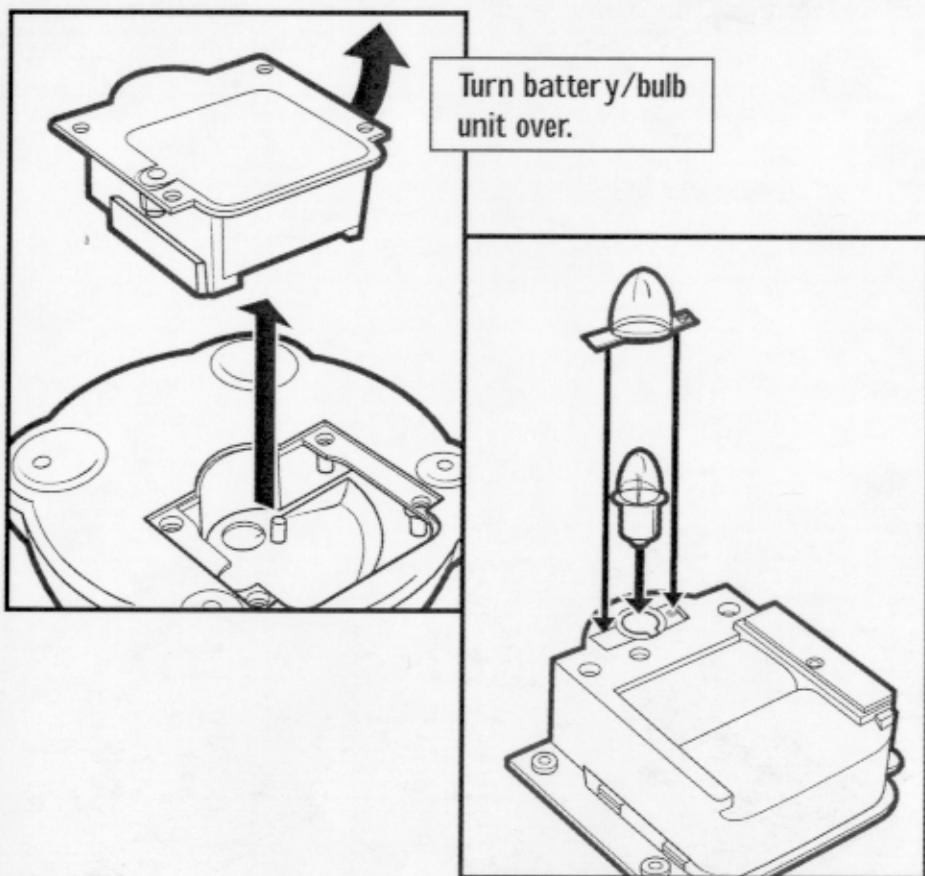


TRAVEL
The ORIGINAL
Light-up picture maker!
Lite·Brite

Requires 2 "C" alkaline batteries (not included). Phillips screwdriver required (not included) for battery installation.

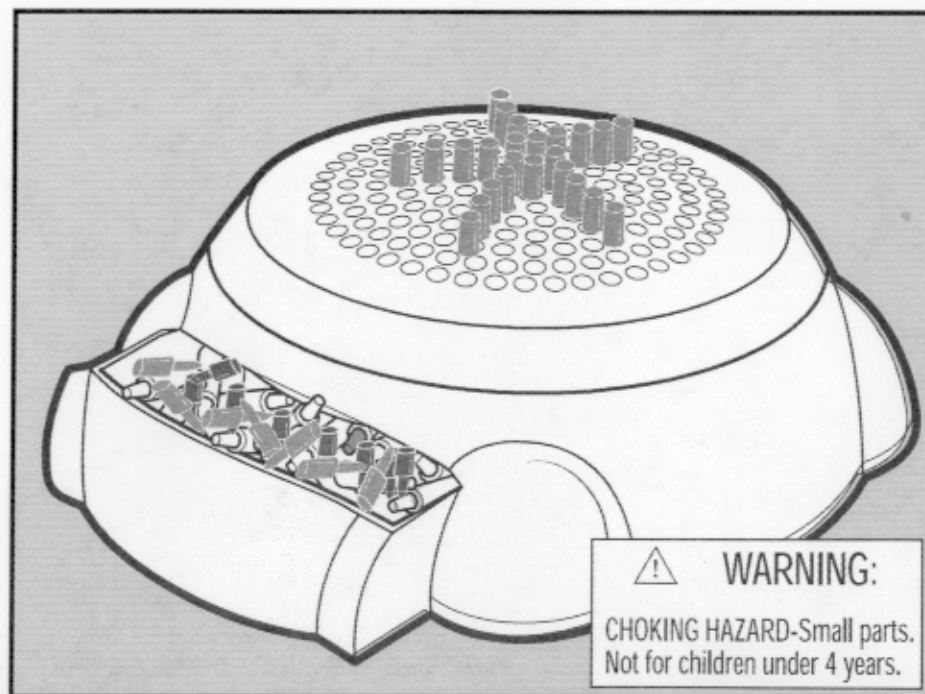

TO INSTALL BATTERIES

 Using Phillips screwdriver, loosen screw in battery compartment cover (screw stays attached to cover). Remove cover. Insert with 2 "C" alkaline batteries. Replace cover and tighten screw.

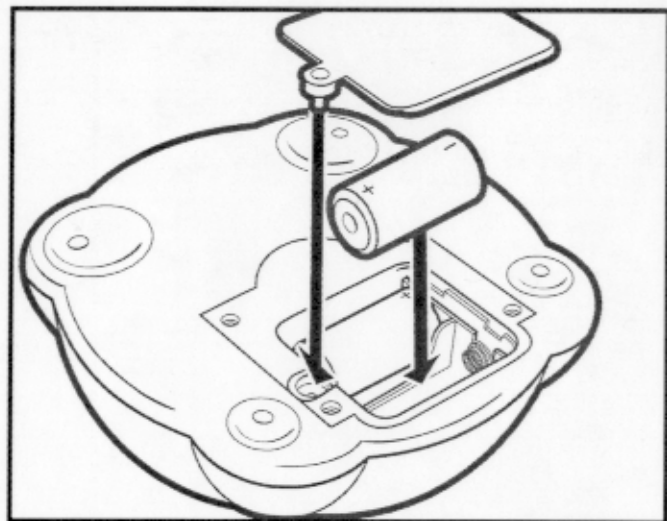

⚠ CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

TO PLAY

This portable, fun-filled toy comes with 160 pegs to make all kinds of light-up designs. All it takes is your imagination!

- Insert the pegs into the holes to make colorful designs. Be creative!
- Press on the top of the toy to make your creations shine! The light will stay on for approximately 50 seconds each time you press the top, then turn off to conserve battery life.

(Note: The light may also come on as you insert the pegs.)

