

CAUTION: ELECTRIC TOY

Not recommended for children under 4 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

Be sure to remove the plug from the wall outlet when not using your LITE-BRITE® Cube. Parents should periodically inspect the cord and plug for damage and repair if necessary. Adult supervision is recommended for children playing with electrical toys operating at 120 volts.

ADULT ASSEMBLY REQUIRED. REPLACE BULB WITH 25-WATT ROUND OR BLUNT-TIP CANDELABRA BASE LIGHT BULB (50/60 Hz .21 amps 110-120V. AC only). DO NOT USE BENT-TIP BULB. PHILLIPS SCREWDRIVER REQUIRED (NOT INCLUDED).

ATTENTION: JOUET ÉLECTRIQUE

Déconseillé aux enfants de moins de 4 ans. Comme pour tout autre appareil électrique, des précautions s'imposent lors de la manipulation et de l'utilisation pour éviter les secousses électriques.

S'assurer de débrancher la fiche de la prise de courant murale lorsque le LITE-BRITE n'est pas utilisé. Les parents devraient inspecter le cordon d'alimentation et la fiche régulièrement pour déceler tout signe d'usure et le réparer le cas échéant. La supervision d'un adulte est recommandée lorsque des enfants jouent avec des jouets électriques alimentés par un courant de 120 volts.

DOIT ÊTRE ASSEMBLÉ PAR UN ADULTE. REMPLACER LA VIEILLE AMPOULE PAR UNE NEUVE DE 25 WATTS A CULOT CANDELABRE ROND OU TRONQUÉ (50/60 Hz .21 A 110-120 V c.a. seulement). NE PAS UTILISER D'AMPOULE À PLOT REPLIÉ. TOURNEVIS CRUCIFORME REQUIS MAÏS NON INCLUS.

CUIDADO: JUGUETE ELECTRICO

No se recomienda para niños menores de 4 años. Como con cualquier producto eléctrico, deben tomarse precauciones durante la manipulación para evitar descargas eléctricas.

Desenchufe la unidad LITE-BRITE mientras no se utilice. Los padres deben inspeccionar periódicamente el cable y el enchufe para detectar cualquier daño y repararlo en caso de ser necesario. Se recomienda la supervisión de un adulto mientras el niño juega con juguetes eléctricos que funcionan con una corriente de 120 voltios.

REQUIERE SER ARMADO POR UN ADULTO. REMPLACE LA BOMBILLA GASTADA POR UNA BOMBILLA NUEVA DE 25 VATIOS TIPO CANDELABRO DE PUNTA REDONDA O SIN PUNTA (50-60 Hz, .21 A, 110-120 V c.a. solamente). NO UTILICE BOMBILLA DE PUNTA DOBLADA. REQUIERE DESTORNILLADOR EN CRUZ, NO INCLUIDO.

Age : 4+
Edad : 4+
Model 06511
Modèle 06511
Modelo 06511



LR 24153

(ELECTRIC TOY)



LISTED

1PW4



WARNING:

CHOKING HAZARD - Small parts.
Not for children under 4 years.



ATTENTION:

 
 
RISQUE D'ÉTOUFFEMENT:
Petites pièces. Déconseillé aux
enfants de moins de 4 ans.



CUIDADO:

PELIGRO DE ASFIXIA:
Piezas pequeñas. No es para
niños menores de 4 años.

The Light-up Picture Maker!
Le jouet d'images lumineuses!
¡El juguete de imágenes luminosas!

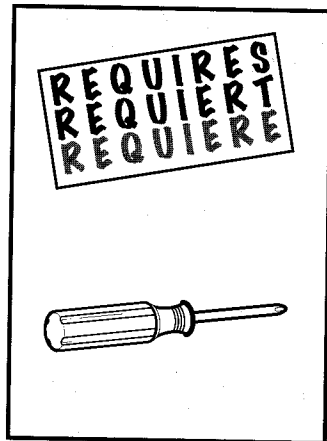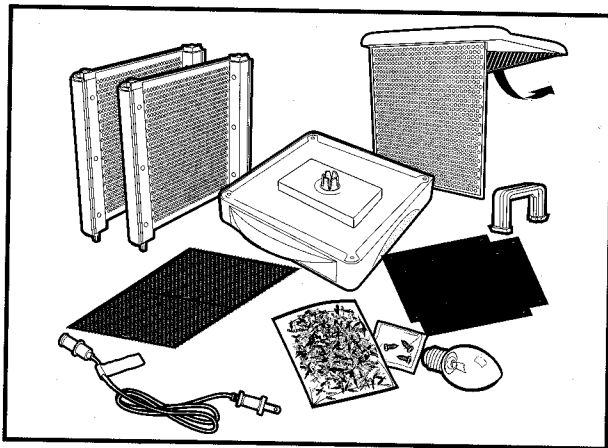

Thank you for purchasing this Lite-Brite® product! Please read and follow these instructions carefully, and retain them for future use.

 
INCLUDES: • LITE-BRITE® CUBE (7 PIECES) • LIGHT BULB • SNAP-IN CORD • 8 SCREWS
• OVER 500 STANDARD & POWER PEGS™ • 8 CLASSIC PICTURES • 2 FREE-FORM SHEETS

ADULT ASSEMBLY REQUIRED.

REPLACE BULB WITH 25-WATT ROUND OR BLUNT-TIP CANDELABRA BASE LIGHT BULB (50/60 Hz .21 amps 110-120V. AC only).


DO NOT USE BENT-TIP BULB.

PHILLIPS SCREWDRIVER REQUIRED (NOT INCLUDED).

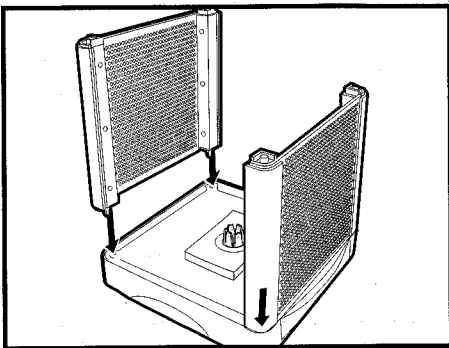


TO ASSEMBLE THE CUBE

 
1. INSTALL SCREEN SECTIONS. Fit the posts on the 2 screen sections into the holes in the cube base. Flip the unit over. Secure sections by tightening 4 screws into the base holes with a Phillips screwdriver.

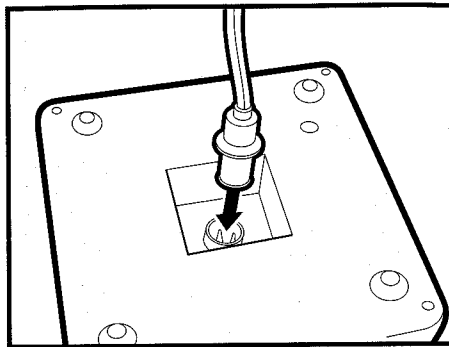

 2. SNAP IN THE CORD. From the bottom of the base, firmly push the socket end of the cord into the opening in the base until it snaps into place.

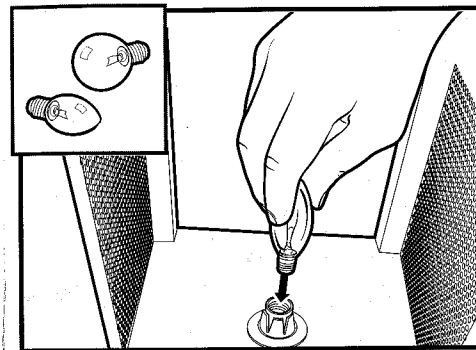

 3. INSERT THE BULB. Flip the unit up. Insert the bulb into the socket by turning it clockwise while holding the cord in place. For a replacement bulb, the Lite-Brite® Cube requires a 25-watt bulb with a small, candelabra base. Use only round or blunt-tip bulbs. Do not use bent-tip bulb. Note: The unit will not accept a standard base bulb. Do not use a bulb larger than 25 watts. If a 25-watt bulb is not available, a 15-watt bulb can be used.

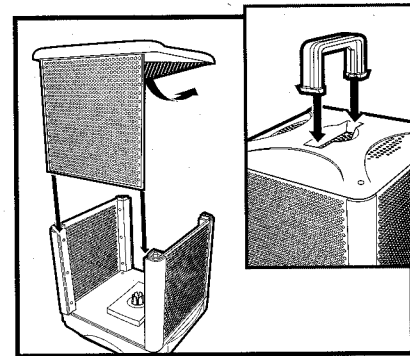


4. INSTALL CUBE TOP/SCREEN SECTIONS. Unfold and grasp both screen sections from the cube top and guide them into the slots on the assembled screen holes. Push the sections all the way into the slots so that the top is flush against the assembled screen sections. Secure the top/screen section assembly by tightening 4 screws into the corner holes in the cube top.

5. INSTALL HANDLE. Fit the handle into the recessed area on the cube top. Snap the handle into place.

WARNING: Do not use light bulbs larger than 25 watts

 
WARNING: Shock hazard. Pull Plug before changing light bulb. NEVER plug in the Cube until the peg screens are in place.

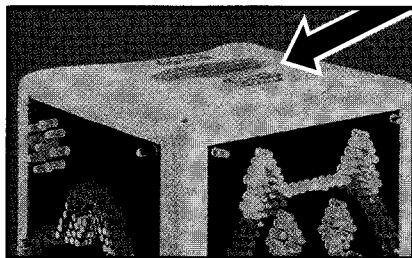

6. **APPLY LABELS.** Peel and apply the labels to the top of unit as shown.


IMPORTANT SAFETY INSTRUCTIONS

 CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

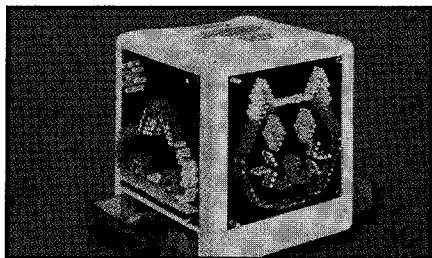


TO CREATE A LITE-BRITE® PICTURE

 1. Tear the picture sheets along the perforated lines and remove.
2. Place a picture sheet flat and straight on the peg screen. Position the sheet so that the star on each corner is next to a corner on the peg screen. Push a peg through the hole in each star to secure the picture to the screen.
3. Plug the cord into a wall outlet (110-120 volts, AC 50/60 Hz) to light the bulb.
4. When creating a classic picture, follow the printed letters on the sheet to tell which colored pegs to use (see chart). When making a hidden design picture (not included), follow directions on the sheets for peg placement. If you are making a free-form picture, simply insert the pegs through the holes wherever you want for your own unique designs.

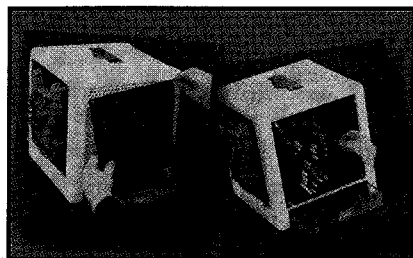

5. Insert the colored pegs through the paper and into the peg screen as far as they will go. Your Lite-Brite® unit includes multiple, attached Power Pegs™. Use double, triple or quadruple Power Pegs when 2, 3 or 4 of the same color is indicated consecutively on a picture sheet. Of course, you can also use them any way you like. Watch the pegs light up in bright, vibrant colors.
- Note: The 2 peg drawers are removable for easy access to pegs.

LETTER ON PICTURE	COLORED PEG TO USE
R	RED
B	BLUE
O	ORANGE
W	WHITE
G	GREEN
Y	YELLOW
P	PINK
V	VIOLET

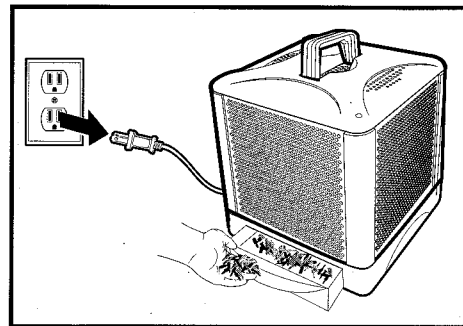 

AFTER PLAYING:

Be sure to unplug your Lite-Brite® Cube when not in use. Store pegs in the 2 drawers provided.

LORSQUE TU AS TERMINÉ DE JOUER:

N'oublie pas de débrancher ton Cube Lite-Brite lorsque tu ne t'en sers pas. Range les chevilles dans les tiroirs du module.

DESPUÉS DE JUGAR:

Asegúrate de que el Cubo Lite-Brite esté desconectado cuando no se esté utilizando. Guarda las clavijas en los 2 cajones.