



6. APPLY LABELS. Peel and apply the labels to the top of unit as shown.

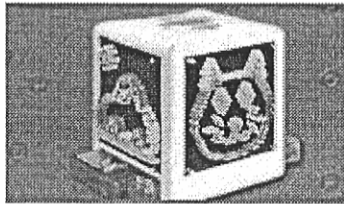

TO CREATE A LITE-BRITE PICTURE


1. Tear the picture sheets along the perforated lines and remove.
2. Place a picture sheet flat and straight on the peg screen. Position the sheet so that the star on each corner is next to a corner on the peg screen. Push a peg through the hole in each star to secure the picture to the screen.
3. Plug the cord into a wall outlet (110-120 volts, AC 50/60 Hz) to light the bulb.
4. When creating a classic picture, follow the printed letters on the sheet to tell which colored pegs to use (see chart). If you are making a free-form picture, simply insert the pegs through the holes wherever you want for your own unique designs.

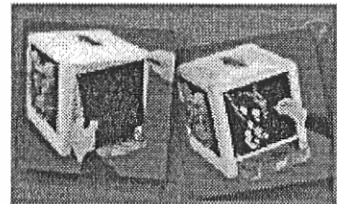

5. Insert the colored pegs through the paper and into the peg screen as far as they will go. Your LITE-BRITE unit includes multiple, attached Power Pegs™. Use double, triple or quadruple POWER PEGS when 2, 3 or 4 of the same color is indicated consecutively on a picture sheet. Of course, you can also use them any way you like. Watch the pegs light up in bright, vibrant colors.
Note: The 2 peg drawers are removable for easy access to pegs.

IMPORTANT SAFETY INSTRUCTIONS
CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

LETTER ON PICTURE	COLORLED PEG TO USE
R	RED
B	BLUE
O	ORANGE
W	WHITE
G	GREEN
Y	YELLOW
P	PINK
V	VIOLET

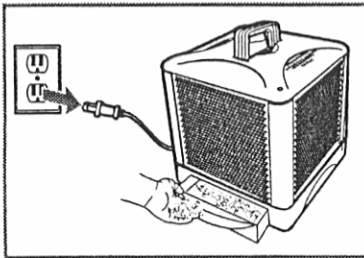

AFTER PLAYING:

Be sure to unplug your LITE-BRITE Cube when not in use. Store pegs in the 2 drawers provided.



CAUTION: ELECTRIC TOY

Not recommended for children under 4 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

Be sure to remove the plug from the wall outlet when not using your LITE-BRITE Cube. Parents should periodically inspect the cord and plug for damage and repair if necessary. Adult supervision is recommended for children playing with electrical toys operating at 120 volts.

ADULT ASSEMBLY REQUIRED. REPLACE BULB WITH 25-WATT ROUND OR BLUNT-TIP CANDELABRA BASE LIGHT BULB (50/60 Hz, .21 amp; 110-120V, AC only). DO NOT USE BENT-TIP BULB. PHILLIPS SCREWDRIVER REQUIRED (NOT INCLUDED).