


## MERMAID

## Under the Sea Palace

Thank you for purchasing this Disney Princess toy! For maximum play value, be sure to read and follow instructions.

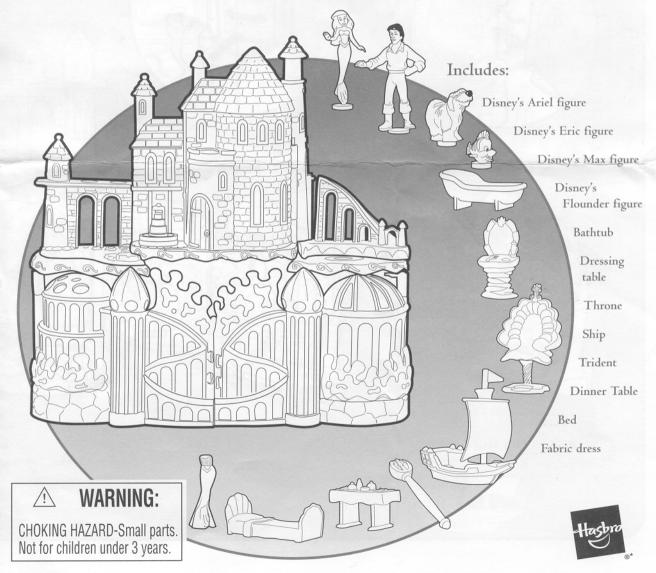


## ASSEMBLY

Fit door hinges into grooves as shown.




Playset closes and accessories store inside.

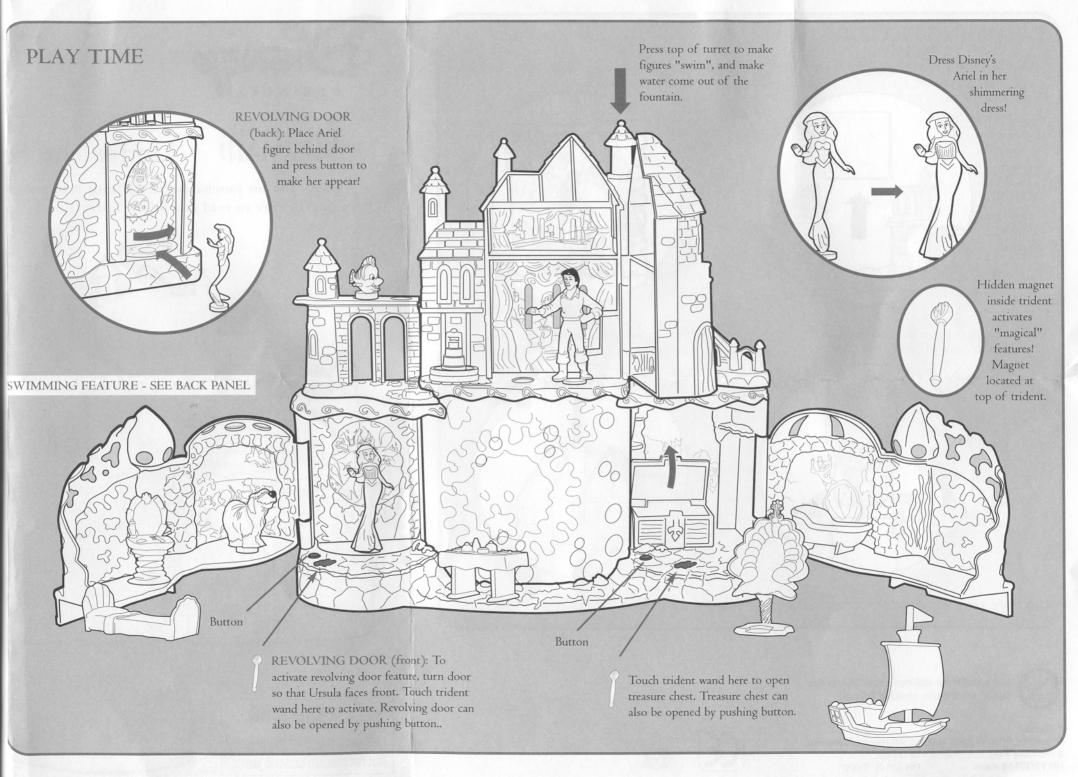

## SWIMMING FEATURE

I Remove center portion of playset, then lift castle and gears out of the tank.


2 Fill tank 2/3 full with water. Use water only; do not fill with any other liquid.

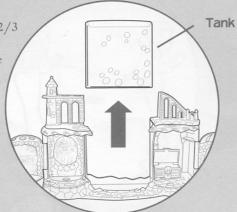

4 Lower castle and gears back into the tank, and replace center portion of playset.



3 Insert figures into gear wheel. (Note: Sebastian figure not removable.)

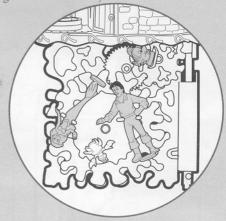

5 Press top of turret to make figures "swim", and make water come out of the fountain.



After play, remove center portion of playset and empty water from tank. Dry with a soft cloth.



Not suitable for children under 36 months due to small parts, choking hazard.

© Disney

®\* and/or ™\* & © 2002 Hasbro. All Rights Reserved. ® denotes Reg. U.S. Pat. & TM Office.

10117/10118 Asst.

PN 6210070000



