 




# Long Play Musical Mobile™

5645  
Birth - 5 mos. (Mobile)  
Birth - 36 mos. (Music Box)




Characters twirl . . . music plays for up to 30 minutes!


WHAT'S NEEDED: PHILLIPS® SCREWDRIVER, 2 "C" BATTERIES (ALKALINE RECOMMENDED)

CAUTION: Keep mobile out of baby's reach. To prevent possible entanglement injury, remove mobile portion of toy from the music box when baby begins to push up on hands and knees.


## PARTS LIST:

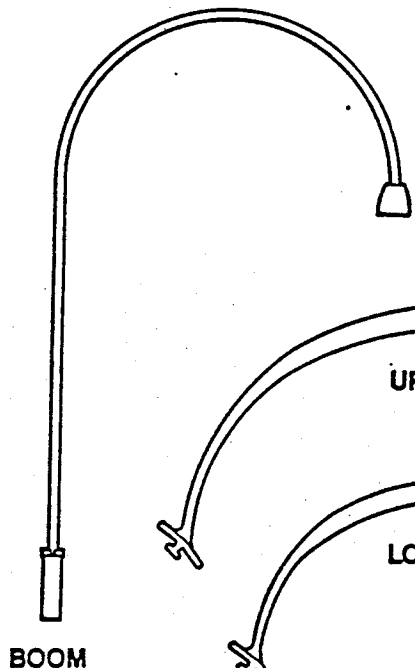


BOOM

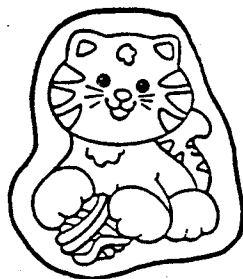


CHARACTERS (4)

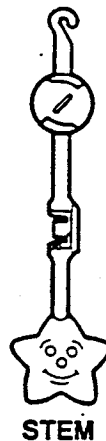

STEM

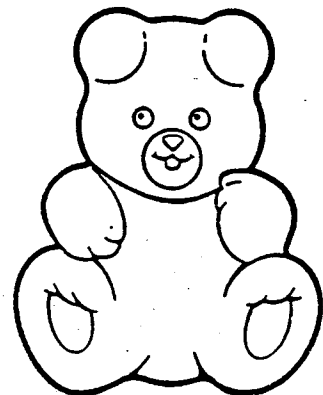


MUSIC BOX

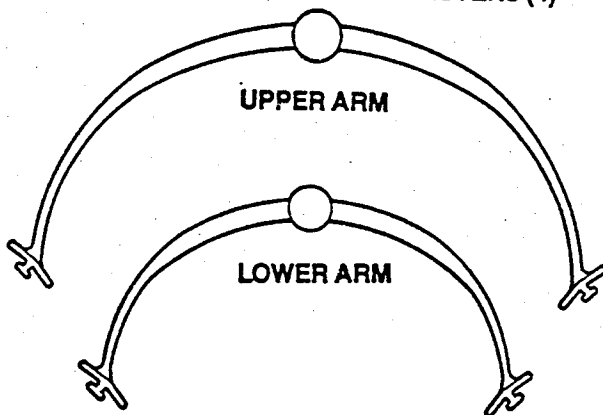


UPPER ARM

LOWER ARM

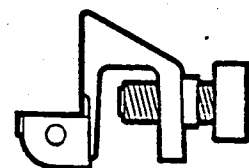

BATTERY BOX

PLEASE SAVE INSTRUCTIONS—THEY WILL BE NEEDED FOR FUTURE REFERENCE.

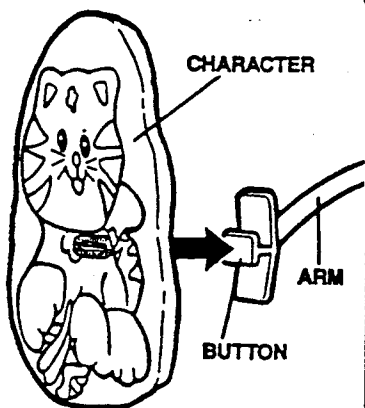


CHARACTER

ARM

BUTTON

### TO ASSEMBLE

1. Push button on end of each arm through opening in each character. (Characters are reversible: colorful patterns are designed for newborns; smiling pets for older babies.)

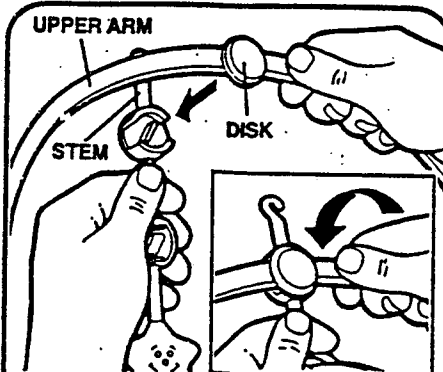


UPPER ARM

STEM

DISK

2. Hold stem in one hand, star on bottom. Snap disk on upper (larger) arm into upper disk on stem. Snap disk on lower (smaller) arm into lower disk on stem.

Note: To remove arm from stem (to put in storage or reposition), hold thumb on stem under the arm and twist arm so that bottom of disk on arm pops out first.

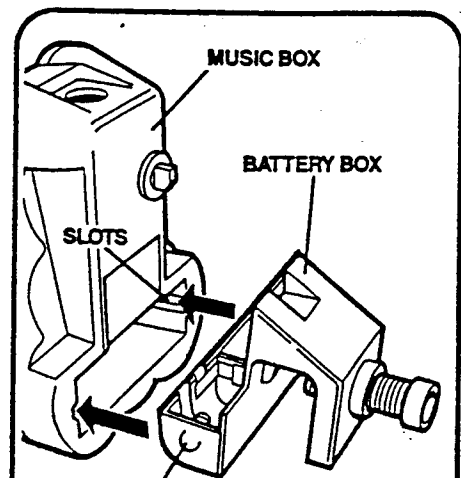


MUSIC BOX

BATTERY BOX

SLOTS

TABS

3. Line up tabs on battery box with slots on music box, then slide and snap battery box into music box as shown.

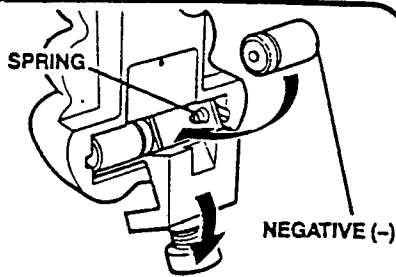


4. Swing battery box open and insert 2 "C" batteries (alkaline recommended), making sure negative (-) end of battery presses against spring as shown.

**CAUTION: TO AVOID BATTERY LEAKAGE**


A. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.

B. Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.


C. Always remove exhausted or dead batteries from the product.

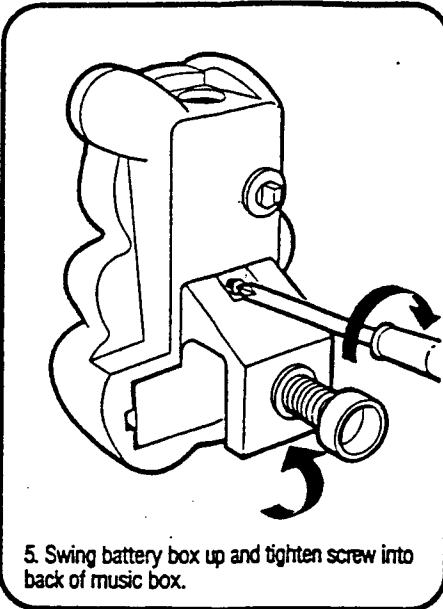


5. Swing battery box up and tighten screw into back of music box.

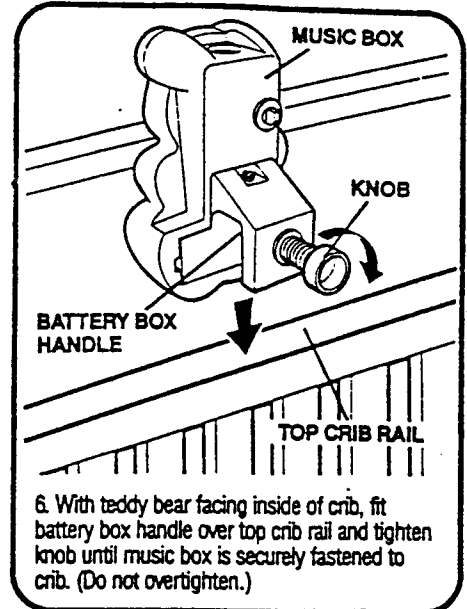


6. With teddy bear facing inside of crib, fit battery box handle over top crib rail and tighten knob until music box is securely fastened to crib. (Do not overtighten.)

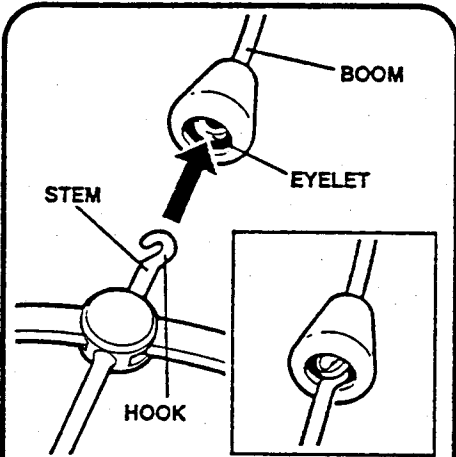


7. Push hook on stem straight up through top end of boom, then turn stem to enable hook to catch eyelet on boom. Look into hole in top end of boom to be sure hook and eyelet are engaged.

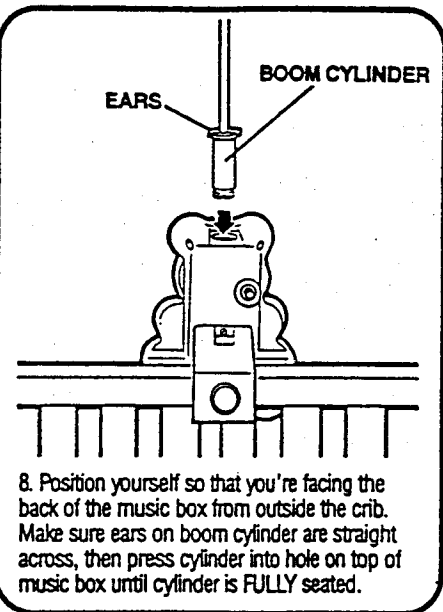

8. Position yourself so that you're facing the back of the music box from outside the crib. Make sure ears on boom cylinder are straight across, then press cylinder into hole on top of music box until cylinder is FULLY seated.

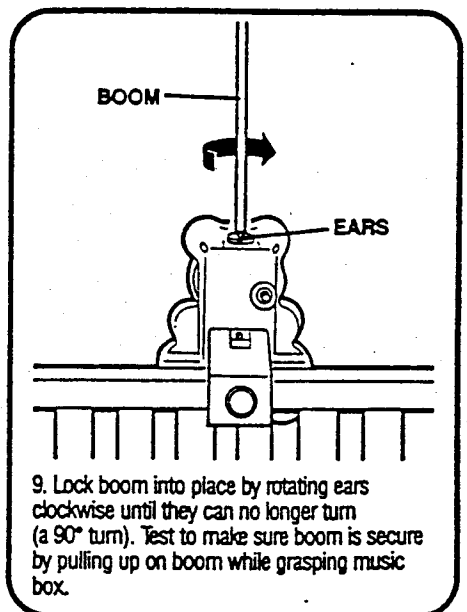


9. Lock boom into place by rotating ears clockwise until they can no longer turn (a 90° turn). Test to make sure boom is secure by pulling up on boom while grasping music box.

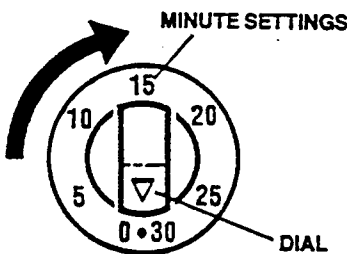

**TO OPERATE**

To start the music playing and mobile rotating, simply turn the dial on back of music box clockwise so that the arrow points to the minute setting you desire (up to 30 minutes). Music and mobile will shut off automatically when time is up.

To shut off music box while it is running, turn dial counterclockwise to 0, and the mobile and music box will stop.

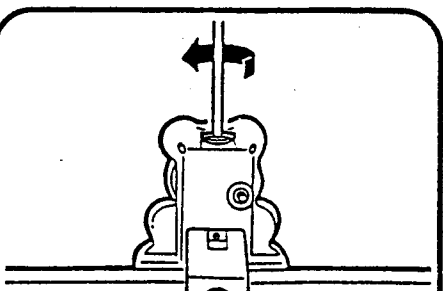


**TO USE AS A MUSIC BOX ONLY**

After baby reaches the age of 5 months or is beginning to push up on hands and knees, the mobile portion of the toy should be taken down.

-To remove boom, turn ears on boom counterclockwise until they are straight across, then pull up on boom and remove.

-Remove stem from boom by lifting up on stem and twisting it to disengage hook from eyelet.

-To remove arms from stem, see step 2.

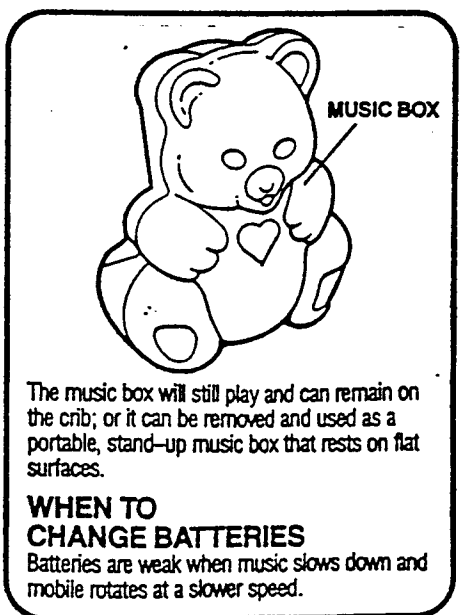

The music box will still play and can remain on the crib; or it can be removed and used as a portable, stand-up music box that rests on flat surfaces.

**WHEN TO CHANGE BATTERIES**

Batteries are weak when music slows down and mobile rotates at a slower speed.