

# Magic Touch™

**Doll House**

*Where Mommy  
Magically  
Makes Things  
Happen*

AGES 4 and UP


**WARNING:**

CHOKING HAZARD - Small parts.  
Not for children under 3 years.


**ASSEMBLY**

Attach railings, windows and doors to the places indicated by the corresponding step numbers below. Note: For easy battery installation you may want to wait to attach the second floor balcony until batteries are installed.


Put railing pieces together.

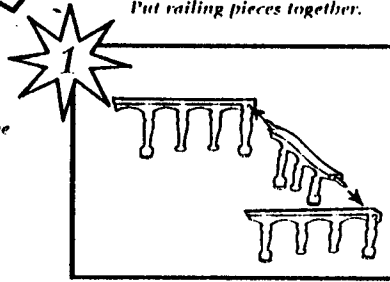


Insert railings into roof.

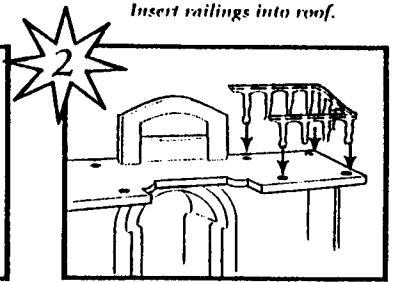


Insert Lower Floor windows.

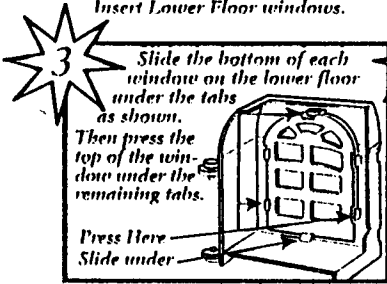


Insert Upper Floor windows.

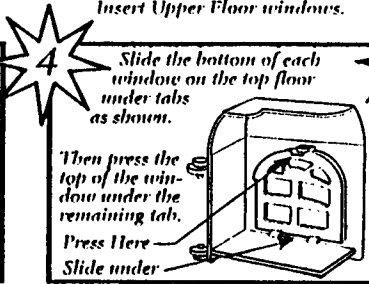


Insert doors with rotating motion as shown.

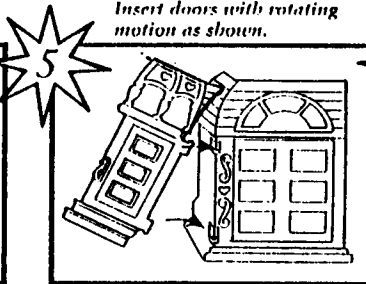

Insert 2nd floor balcony railings into floor as shown.

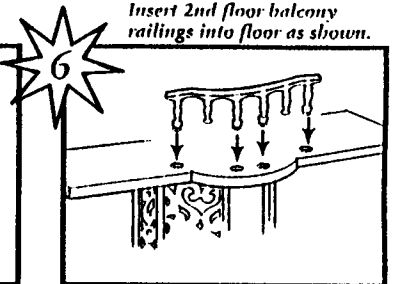


**FINISHED ASSEMBLY**

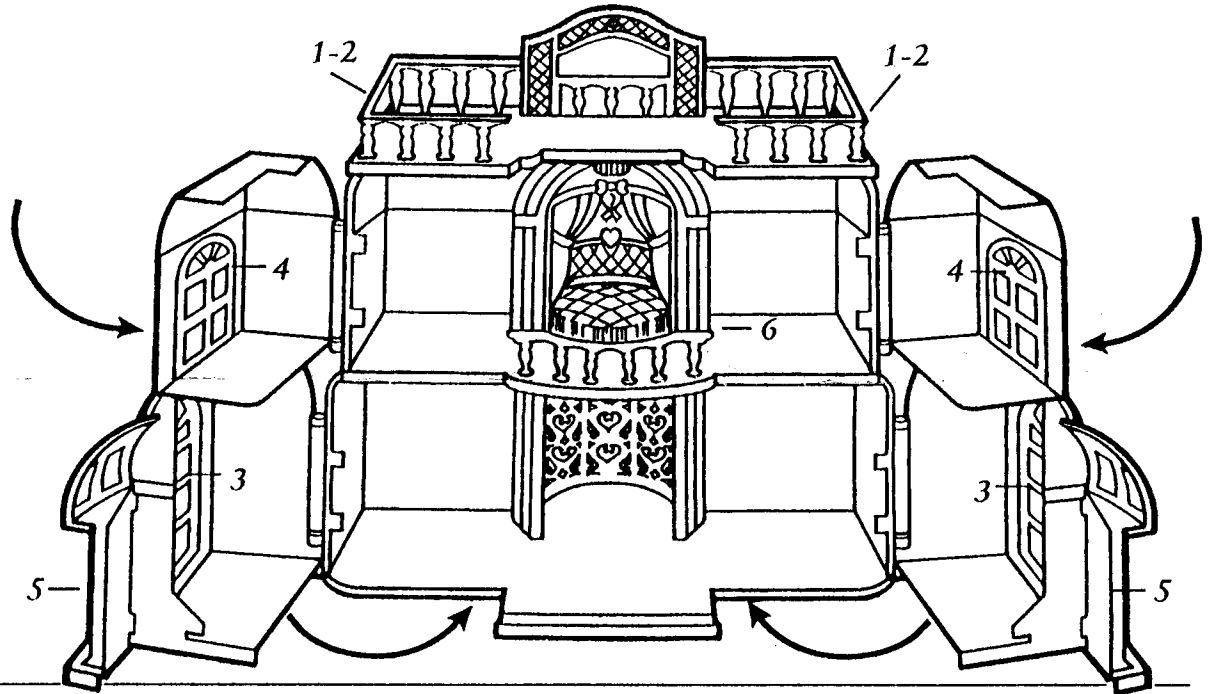


**BATTERY INSTALLATION**

**CAUTION:** To avoid battery leakage, (1) Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instructions. (2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable batteries. (3) Always remove exhausted or dead batteries from the product.


Pull the elevator up and down with the string and heart tab.

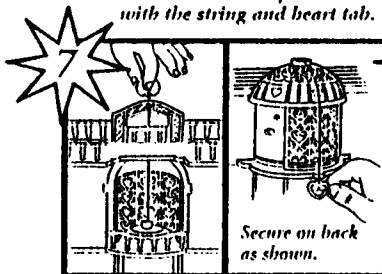


Elevator must be on the second floor to install battery. Remove ONLY the black screw from back side of elevator.

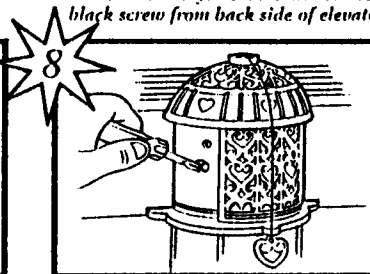


Remove the battery door which is located on the inside of elevator

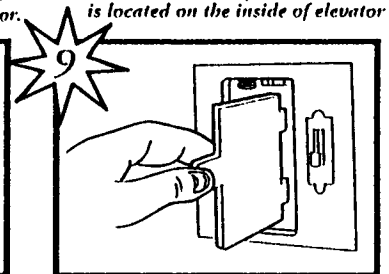


Install 2 AA Alkaline batteries in the configuration shown below.

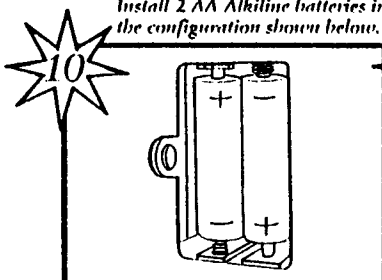

Replace battery cover by inserting the 2 small tabs first



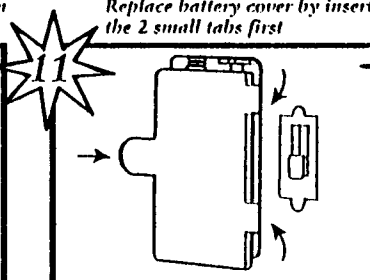


Replace the screw on the back side of the elevator shaft.

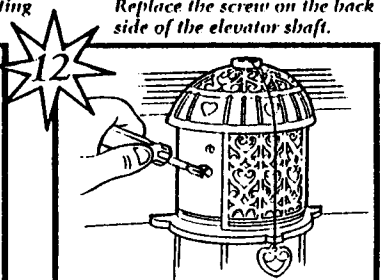


**LABEL APPLICATION**

Apply labels using numbers on the label sheet and these illustrations as a guide.

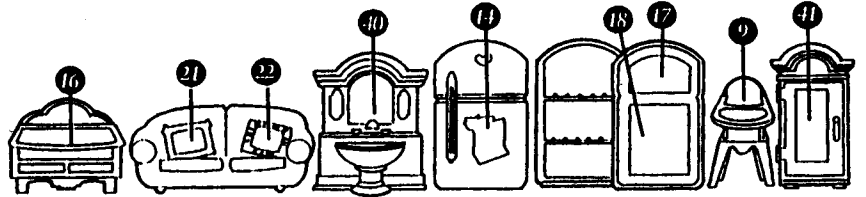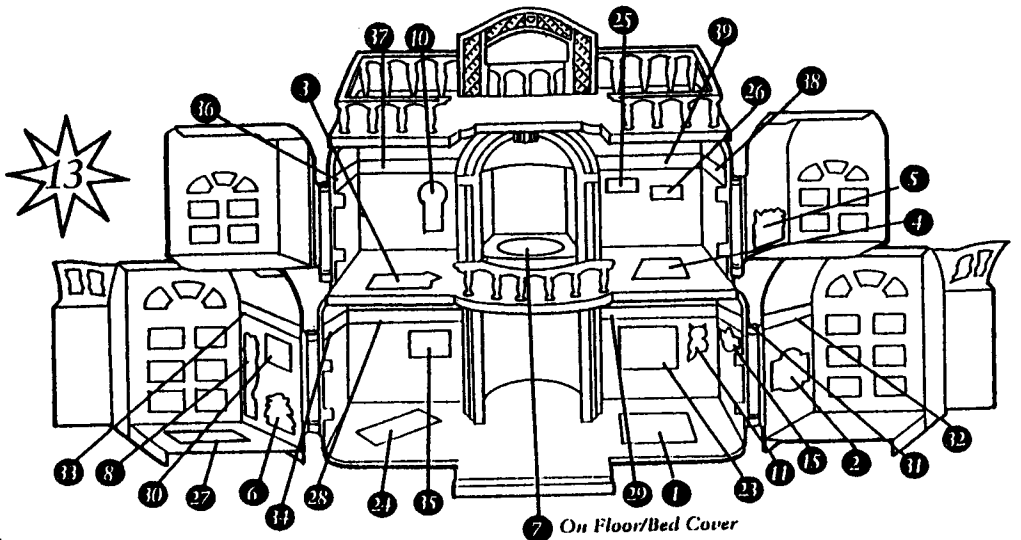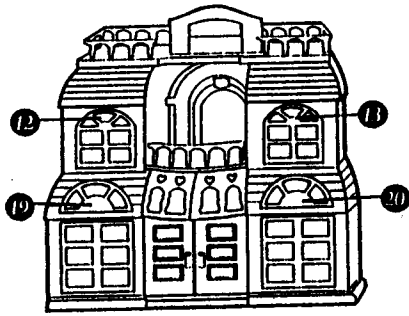

**ACCESSORY ASSEMBLY**

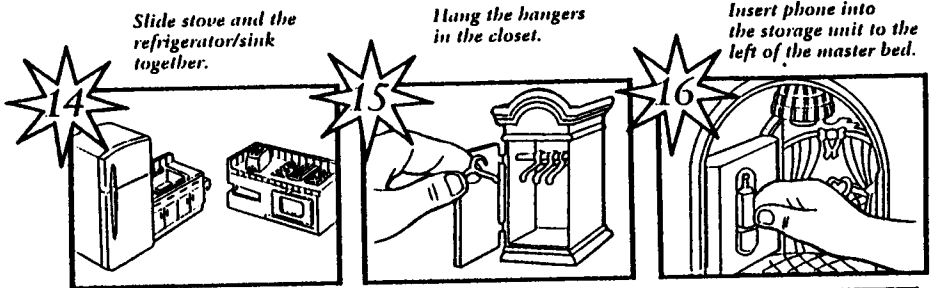


**ACCESSORY FEATURES**


Mommy's right wrist contains a magnet that causes many of the accessories with metal rivets or magnets to respond "magically".




Wave Mommy's wrist over to the metal spot on the table and the table top turns over.\*

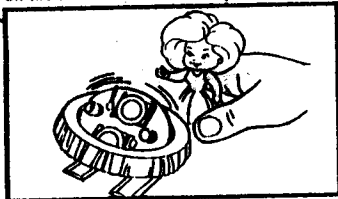


Move Mommy's wrist over to the metal spot on the cradle and the cradle rocks as you move the Mommy doll.

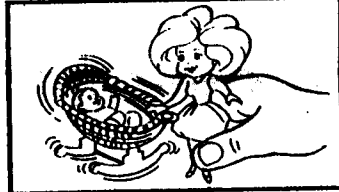


Touch Mommy's wrist to the metal spot on the wardrobe door. Help her open the door.

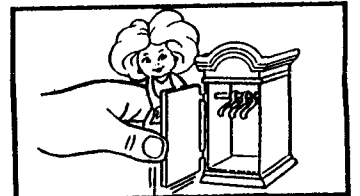


Touch Mommy's wrist to the metal spot on the phone and she holds it.

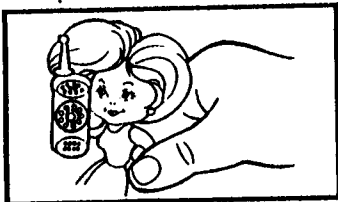


Touch Mommy's wrist to the metal spot on the refrigerator door and help her open it.

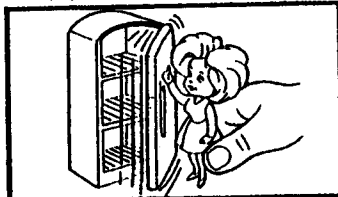


Bring Mommy's wrist close to the star symbol on right speaker and the TV turns on. Manually reset it by moving the lever on the top.

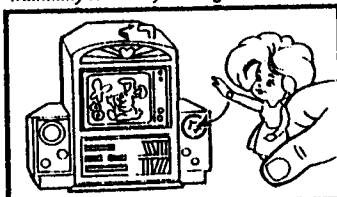


Push down on the faucet and the sink fills with "water". Manually reset it with the lever on the left side of the sink.

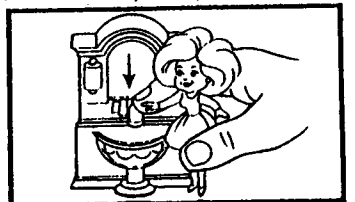


Slide the lever on the front of the stove to the right and the burners "turn on" and the toast "goes down".

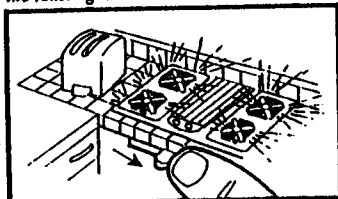

Slide the lever on the front of the stove to the left and the burners "turn off" and the toast "pops up".

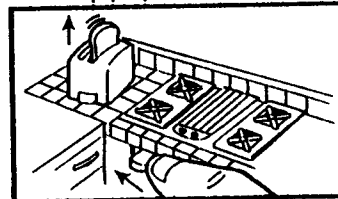

Tap Mommy's foot on the lever at the base of the elevator floor, and it flips up, uncovering the bed. Manually lower cover to reset bed.

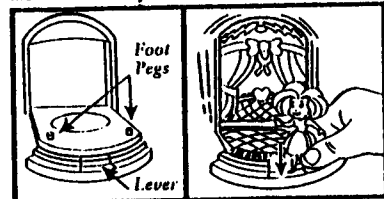


Flip the switch to the right of the bed to turn the chandelier light on and off.



**EASY STORAGE**

Now that your Magic Touch Doll House is complete, you can enjoy lots of fun, magical play. When it comes time to stop playing, simply close it up as shown.

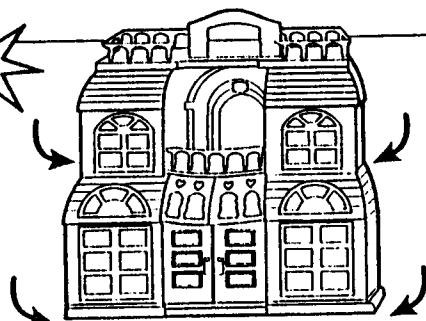

**Kenner**

© 1995 TONKA CORPORATION  
a subsidiary of Hasbro, Inc.  
Pawtucket, Rhode Island 02862  
All Rights Reserved