


Mickey and Friends SLIDE

ASSEMBLY INSTRUCTIONS

AGES 1½ to 4

WEIGHT LIMIT: 55 LBS.

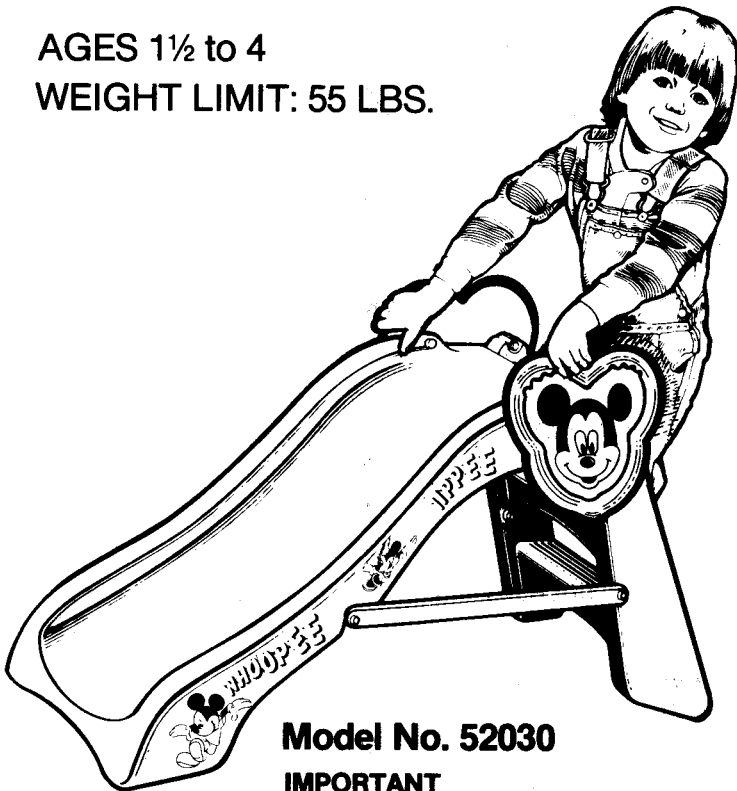

Model No. 52030

IMPORTANT

ADULT SUPERVISION REQUIRED. PLACE SLIDE ON A FIRM, SOLID BASE. DO NOT PLACE NEAR OBSTRUCTIONS. DO NOT SET UP OVER GRAVEL, CONCRETE OR ROUGH SURFACES. FACE LADDER WHEN CLIMBING UP OR DOWN. ALWAYS SLIDE FEET FIRST.


PLAYSKOOL

PLEASE NOTE:
ADULT ASSEMBLY REQUIRED.
READ INSTRUCTIONS PRIOR TO ASSEMBLY.


ASSEMBLY IN

TOOLS R
MEDIUM REGULAR AND
AND F

STEP 1: Align bushing holes in SLIDE and STEP FRAME. Insert one (1) LONG BUSHING on each side of slide. Temporarily hold bushings in place with tape. Discard tape when assembly is complete.

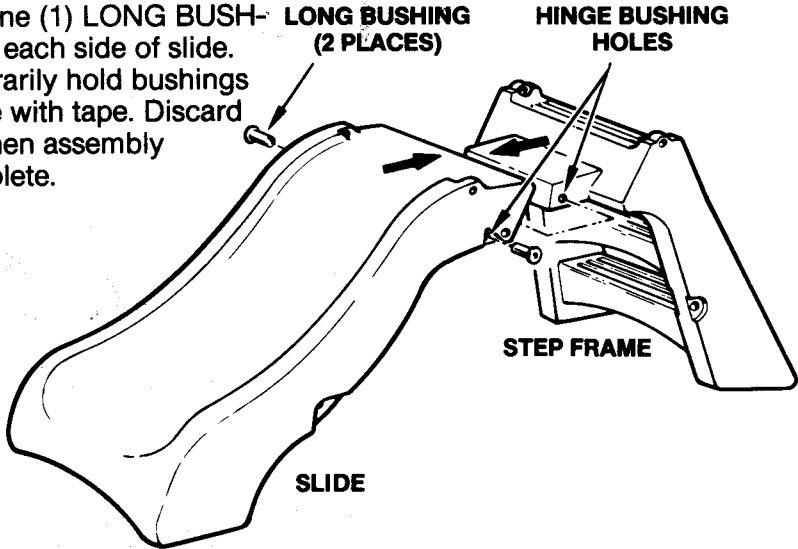


STEP 2. Insert SHORT BUSHINGS into side of slide as shown. (Two places each side.) Align brace holes with bushing holes and insert screws. Turn screws through holes, WASHER and HEX STOP NUT. Do not overtighten screws.

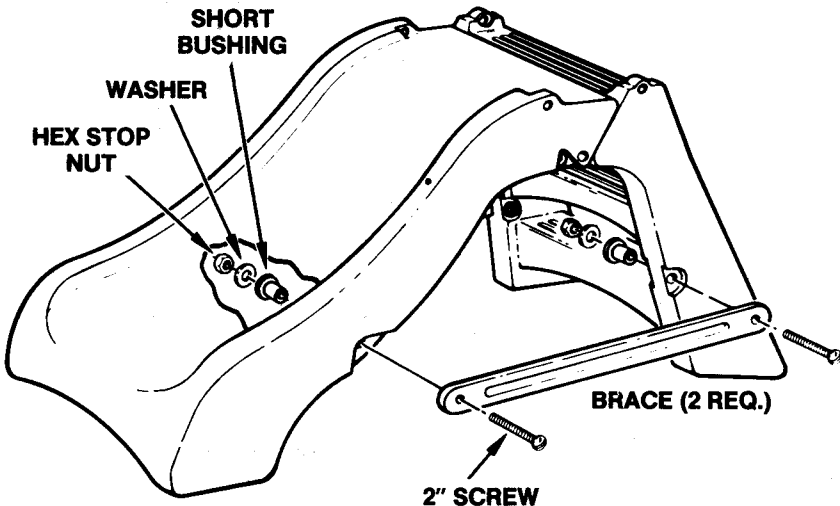


INSTRUCTIONS

EQUIPED:
PHILLIPS SCREWDRIVER
LIERS.

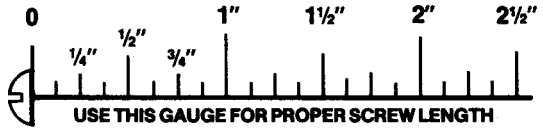

STEP 3. Insert three (3) **SHORT BUSHINGS** in side of slide. Insert one (1) screw through lower hole in handle and lower bushing in slide. Fasten screw with **WASHER** and **HEX STOP NUT**, but do not tighten. Align upper holes in handle with bushings in slide. Insert two (2) screws through handle and bushings. Secure with **WASHERS** and **ACORN NUTS**. When complete, tighten bottom screw. Attach other handle in same manner.

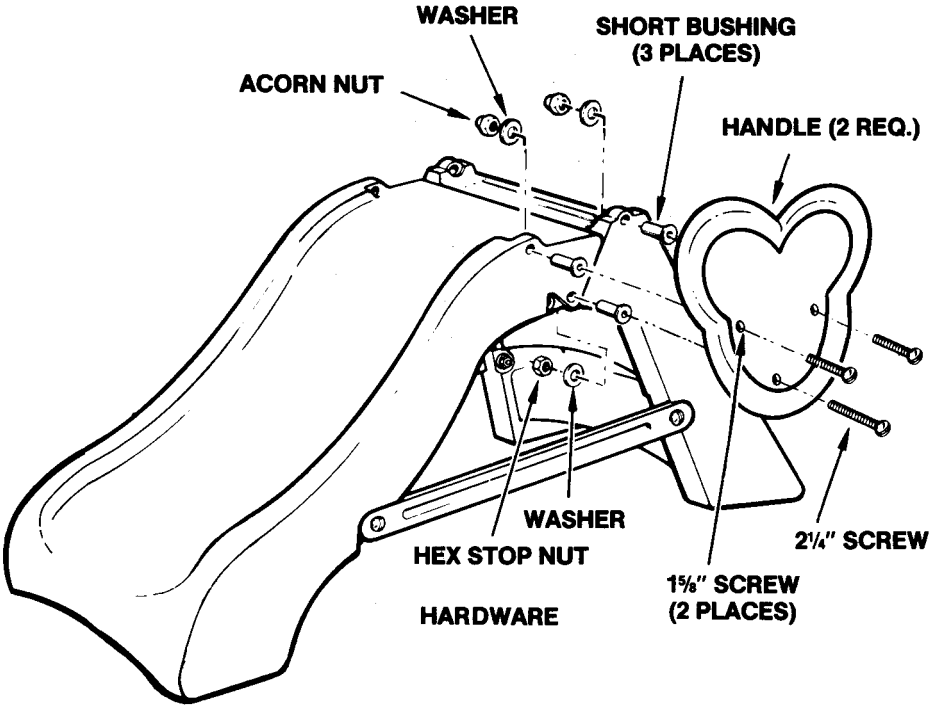


IMPORTANT NOTE TO ADULTS

THIS SLIDE SHOULD NOT BE USED FOR ANYTHING OTHER THAN ITS INTENDED PURPOSE. DO NOT USE AS A STEP LADDER. CLIMB ONE PERSON AT A TIME. OBSERVE ALL SAFETY CAUTIONS TO AVOID SERIOUS INJURY. PERIODICALLY CHECK ALL SCREWS AND NUTS TO BE SURE THEY ARE SECURE. PROMPTLY REPLACE ANY DAMAGED PARTS.

STEP 4: Thoroughly wipe decal areas with clean, dry cloth before applying decals. Remove decals from decal sheet and apply to appropriate positions on slide. See illustration.

IMPORTANT: Decals have quick-setting adhesive; be sure of position before applying — decal cannot be lifted after setting.

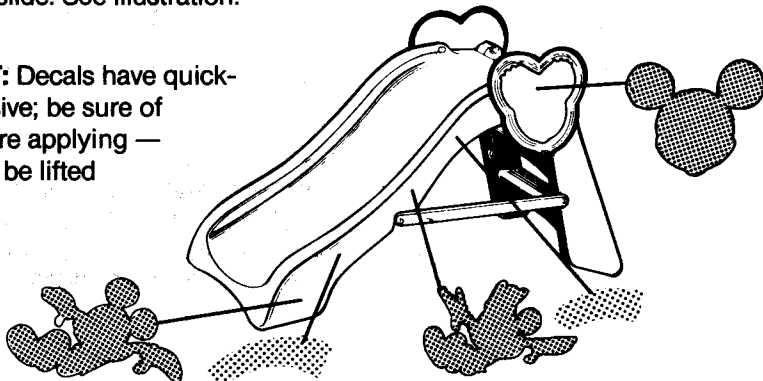

PLEASE RETAIN THIS GUIDE AND ALL LITERATURE FOR FUTURE REFERENCE.

PLEASE NOTE:

If you have any questions or comments concerning this product, call our Playskool Customer Service hotline 1-800-237-0063 Monday through Friday, 8:30 am to 4:30 pm. Eastern Standard Time.

In Rhode Island, call: 431-8697

All written inquiries should be mailed to:
 Playskool Consumer Services Division
 P.O. Box 5839, Pawtucket, Rhode Island 02862

This will provide quick and reliable service for your product.

Do not request same from your dealer.

©The Walt Disney Company

Model No. 52030
 P/N 40434200

**MICKEY and FRIENDS SLIDE
 REPLACEMENT PARTS ORDER FORM**

PART NUMBER	DESCRIPTION	QTY.	UNIT PRICE
40288600	HARDWARE BAG	1	\$6.65
40417300	SMALL DECAL SHEET	1	\$3.00
40417400	LARGE DECAL SHEET	1	\$5.00



©1988 Playskool, Inc., Pawtucket, RI 02862 USA,
 a subsidiary of Hasbro, Inc. All Rights Reserved.
 Made and Printed in U.S.A.