

90 - DAY LIMITED WARRANTY

Tiger Electronics, Inc. warrants to the original consumer purchaser of Mirabelle, that the product will be free of defects in material or workmanship for 90 days from date of purchase.

During this 90-day warranty period, Mirabelle will either be repaired or replaced (at our option) without charge to the purchaser, when returned prepaid and insured with proof of date of purchase, to TIGER ELECTRONICS, INC. 980 WOODLANDS PARKWAY, VERNON HILLS, ILLINOIS 60061, USA.

Dolls returned without proof of the date of purchase, or dolls returned after the warranty period has expired, will be repaired or replaced (at our option) for a service charge of US\$20.00. Payment must be made by check or money order. This non-warranty service will only be available for one year from the date of purchase. All non-warranty units must be returned postage paid and insured to TIGER ELECTRONICS, INC. 980 WOODLANDS PARKWAY, VERNON HILLS, ILLINOIS 60061, USA.

Tiger Electronics, Inc. will not be liable for loss of use of the product or other incidental or consequential costs, expenses, or damages incurred by the purchaser. Any implied warranties are limited in duration to the 90-day period from the original date of purchase.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state so the foregoing limitations may not apply to you. This warranty does not cover damage resulting from accidents, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

HOW TO GET SERVICE FROM THE TIGER ELECTRONICS, INC. REPAIR CENTER ON YOUR MIRABELLE DOLL DURING AND AFTER THE WARRANTY PERIOD. During the warranty period, you may have a defective Mirabelle replaced at the dealer from which it was purchased. If however, during the warranty period, you choose to obtain repair or replacement from the Tiger Electronics, Inc. Repair Center, please make the arrangements below:

- 1) Pack Mirabelle carefully in a sturdy box with plenty of packing material all around and tape securely closed.
- 2) Carefully print on the box or carton the following name and address:
TIGER ELECTRONICS, INC.
REPAIR CENTER
980 Woodlands Parkway,
Vernon Hills, Illinois 60061, USA.
Also, don't forget to show your return address.
- 3) Put parcel post stamps on the package; insure the package, then mail.

After the warranty period, do all of the above PLUS enclose your check or money order for US\$20.00 payment for the repair service.

PRINTED IN HONG KONG



Mirabelle™

MODEL 7-195

INSTRUCTION BOOK

YOU AND YOUR MIRABELLE DOLL WILL HAVE
LOTS OF FUN WHILE YOU GO ON NEW
EXCITING, ADVENTURES TOGETHER!
PLEASE FOLLOW THESE INSTRUCTIONS TO BE SURE
YOU GET THE MOST FUN FROM
MIRABELLE AND HER SPECIAL VIDEOTAPE.

TIGER ELECTRONICS
INC.®

© 1994 TIGER ELECTRONICS, INC.
980 Woodlands Parkway, Vernon Hills, IL 60061, USA.

INSERT THE BATTERIES

MIRABELLE REQUIRES 4 "AA" AND 1 "9-VOLT" BATTERIES. (NOT INCLUDED)

1. Pull apart the velcro on the back of the doll's outfit. (SEE **DIAGRAM 1**)
2. Use a Phillips head screwdriver to remove the screw from the battery compartment door. (**DIAGRAM 2**).



DIAGRAM 1



DIAGRAM 2

3. Insert batteries, as shown in **DIAGRAM 3**. Follow (+/-) markings inside compartment to be sure they are inserted correctly. (Batteries should be replaced by an adult.)
4. Close battery compartment door, replace screw and reseal the velcro of the outfit.

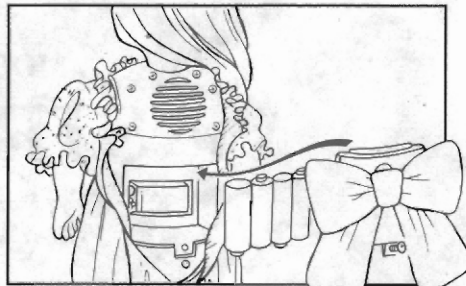


DIAGRAM 3

(NOTE: When replacing the battery compartment door, it will not fit snugly at first. As you screw the door closed, it will fit into place.)

HOW TO OPERATE MIRABELLE

Videotape

The videotape that comes with Mirabelle is a standard VHS videotape and can be played in any VHS videorecorder. The videotape and videorecorder should be operated by an adult.

Doll

1. To activate the Mirabelle doll press the button on the front of her magical butterfly pendant. (**DIAGRAM 4**). She will say "Will you be my friend?" to let you know she is ready to watch TV with you.

(NOTE: To prevent battery wear, the doll will automatically turn off in about 2 minutes if she does not see a video signal. If this happens, just press the button on Mirabelle's pendant again to reactivate her.)



DIAGRAM 4

2. You and Mirabelle should sit so that you can both see the television screen clearly. For best performance, Mirabelle should be between 3 and 12 feet in front of the television and facing the screen directly. (SEE **DIAGRAM 5** FOR RANGE IN WHICH MIRABELLE CAN SIT IN RELATION TO THE TELEVISION.) MIRABELLE can sit or stand and you can hold her while you watch TV together.

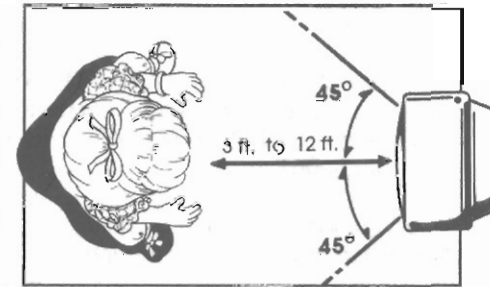


DIAGRAM 5

3. You need to be certain that Mirabelle's butterfly pendant is facing the television. The pendant is where she receives signals from the television. If she can see the screen clearly, both her earrings will light up (**DIAGRAM 6**). Use these lights to help place Mirabelle where she can see the screen best. As long as Mirabelle can see the screen and is receiving a signal from the television, her earrings will light up.



DIAGRAM 6

4. Mirabelle will also talk and come to life when you are NOT watching her video by pressing the button on her butterfly pendant (**DIAGRAM 7**). Each time you press the button Mirabelle will talk. She says dozens of phrases.

(NOTE: To ensure product's best performance while you and Mirabelle are watching her special video together, do not keep pressing the button on her pendant. You only need to press her pendant to turn her on. If you keep pressing the button during the video, she will not respond correctly to the video.)



DIAGRAM 7