



Ages 3 & Up  
76817



# Action Eye Mike Wazowski

**Includes 2 "AA" batteries. Phillips  
screwdriver required for battery replacement  
(not included).**

## **To replace batteries:**

1. Pull apart closure on back of figure to locate battery box.
2. Using Phillips head screwdriver, loosen screw on battery box and open battery cover.
3. Remove exhausted batteries and replace with 2 new "AA" alkaline batteries.
4. Replace battery cover and tighten screw. Fasten back closure on figure.

## **CAUTION: TO AVOID BATTERY LEAKAGE**

- 1) **Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;**
- 2) **Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;**
- 3) **Always remove weak or dead batteries from the product.**

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Product and colors may vary.

© Disney/Pixar



\*® & © 2001 Hasbro.  
USA. All Rights Reserved.  
® denotes Reg. U.S. Pat. & TM Office  
76817 PN 6092690000