



Scream Canister

Includes 3 A76 button-cell batteries.

To replace batteries:

1. Unscrew canister cover. Remove and discard old batteries.
2. Insert 3 fresh A76 (or LR44) button-cell batteries into the compartment.
Refasten canister cover.

CAUTION: TO AVOID BATTERY LEAKAGE

- 1) **As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.**
- 2) **Make sure the batteries are inserted correctly and follow the toy and manufacturer's instructions.**
- 3) **Do not mix old and new batteries, alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.**

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Product and colors may vary.

© Disney/Pixar



*® & © 2001 Hasbro.

All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office

76841 PN 6092680000