 


Disney • PIXAR

Ages 3 & Up
2888

TOY STORY 2

REMOTE TALKING Mr. Potato Head

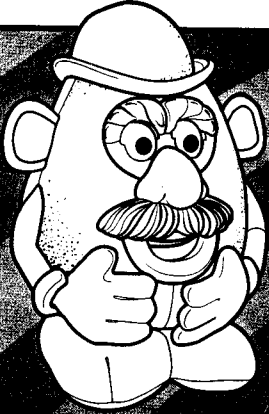

Mr. Potato Head comes
with 3 AAA
batteries. The remote
control requires 2 AA
batteries (not included).
Phillips screwdriver
needed for battery
placement.

PLAYSKOOL

BEFORE GIVING TOY TO YOUR CHILD:

Remove and discard the fabric covers that are placed over the fasteners on Mr. Potato Head's hands for shipping purposes. The fasteners can be used to attach the hands to any fabric part of Mr. Potato Head's body.

INSTALLING BATTERIES IN REMOTE CONTROL:


Use a Phillips screwdriver to loosen the screw that secures battery compartment door, and remove the door.

Insert 3 "AA" batteries (alkaline recommended) into the compartment, following direction indicators as shown. Replace the door and re-fasten with the screwdriver.

REPLACING BATTERIES IN THE MR. POTATO HEAD TOY:

The Mr. Potato Head toy comes with batteries already installed. When they require replacement, use a Phillips screwdriver to loosen the screw that secures the battery compartment door (on bottom), and remove the door. Then, slide out the cartridge that will hold the batteries as shown.

Insert 4 "AA" batteries into the cartridge, following direction indicators. Insert cartridge back into compartment. Replace the door and re-fasten with the screwdriver.

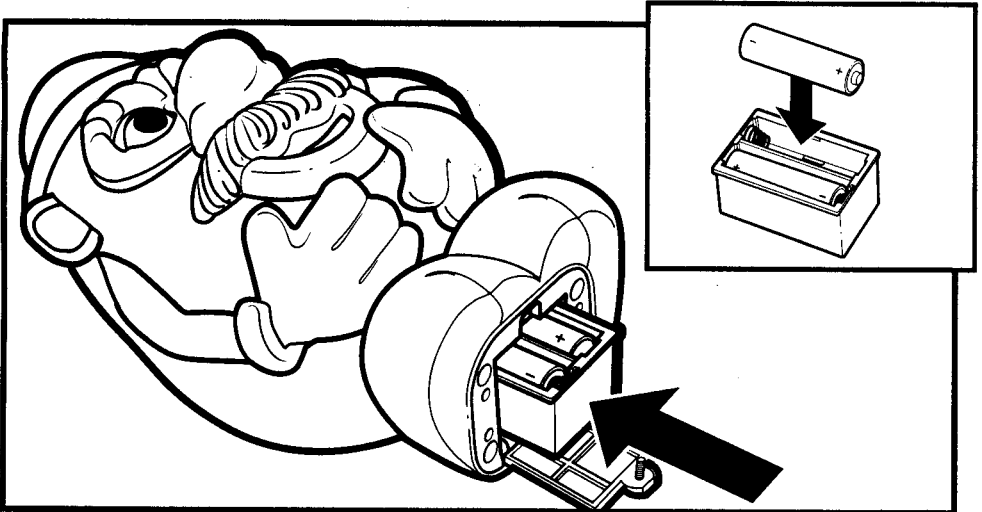

CAUTION: TO AVOID BATTERY LEAKAGE:


1. Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instructions.
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable batteries.
3. Always remove exhausted or dead batteries from the product.

PLAY INSTRUCTIONS:

1. Start by pressing the top of Mr. Potato Head's hat to turn him on!

2. Once he's activated, you can make him talk in either of two ways:


- **Each time you press the top of his head, he'll talk!**
- **Or, you can make him talk from all the way across the room with the remote control!**

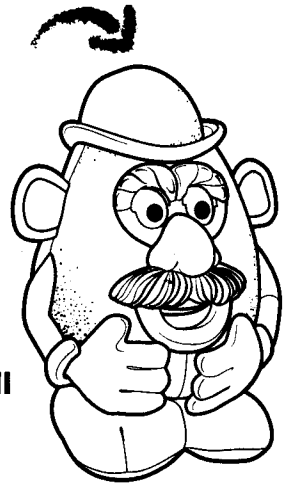

USING THE REMOTE CONTROL:

3. Point the "handle" of the suitcase-shaped remote directly at Mr. Potato Head from a distance of twelve feet or less. There should be no obstacles between the remote and Mr. Potato Head.

4. The remote has 4 buttons which each trigger a different set of phrases and sounds.

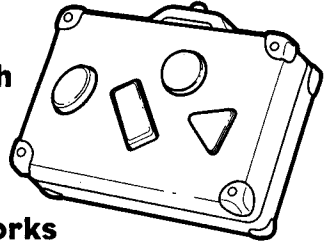

Remember! The remote control only works after Mr. Potato Head has been turned on - and you can only do this by pressing his hat!

NOTE: The remote control's function is affected by very bright light, fluorescent light and sunlight. Please be aware that the remote's range will be substantially reduced under any of these light conditions. The working of the remote is also affected by battery strength both in the remote and in the Mr. Potato Head unit. Make sure batteries are replaced when necessary.

AUTOMATIC SHUT-OFF:

5. After about 20 seconds of not being used, the Mr. Potato Head toy automatically shuts off. (During those 20 seconds he will call to you twice to see if you want to play more, and then shut off!)